







NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-0.009-0.15-Ant1-PASS

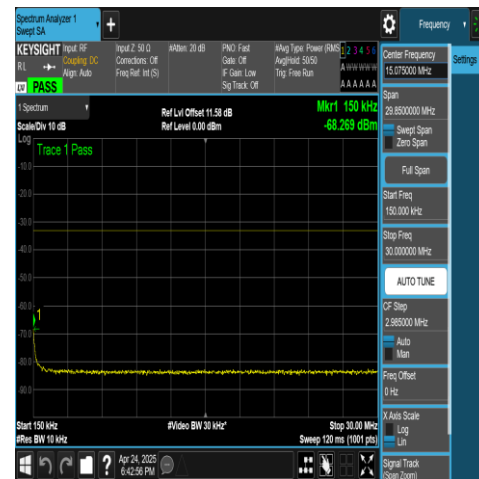

NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-0.15-30-Ant1-PASS

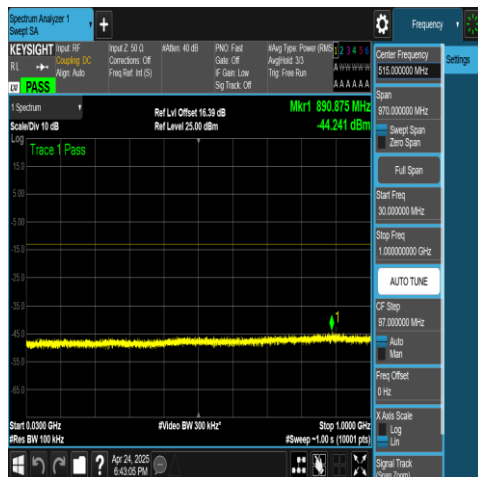


NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-30-1000-Ant1-PASS

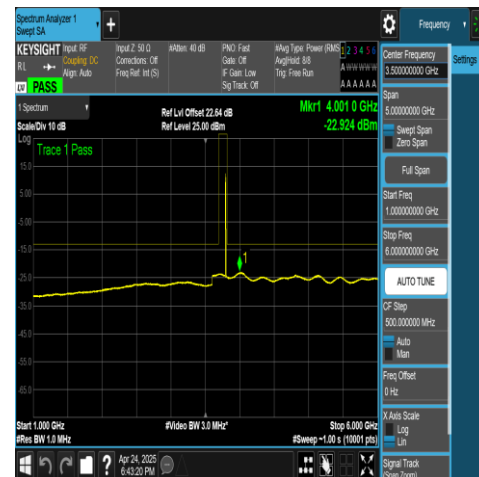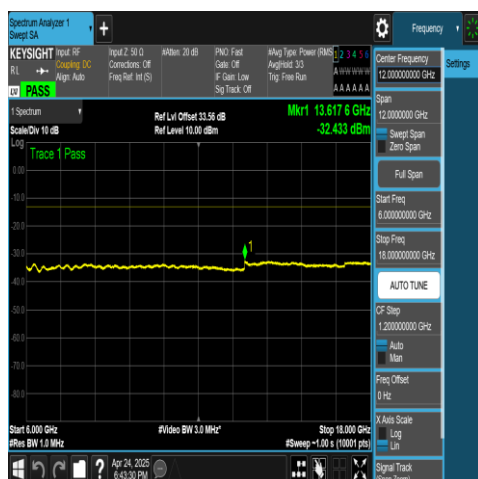
NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-1000-6000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-6000-18000-Ant1-PASS





NTNV-N78-3700-3800-PC2-30-15-H-DFT-QPSK-
Outer Full-18000-40000-Ant1-PASS

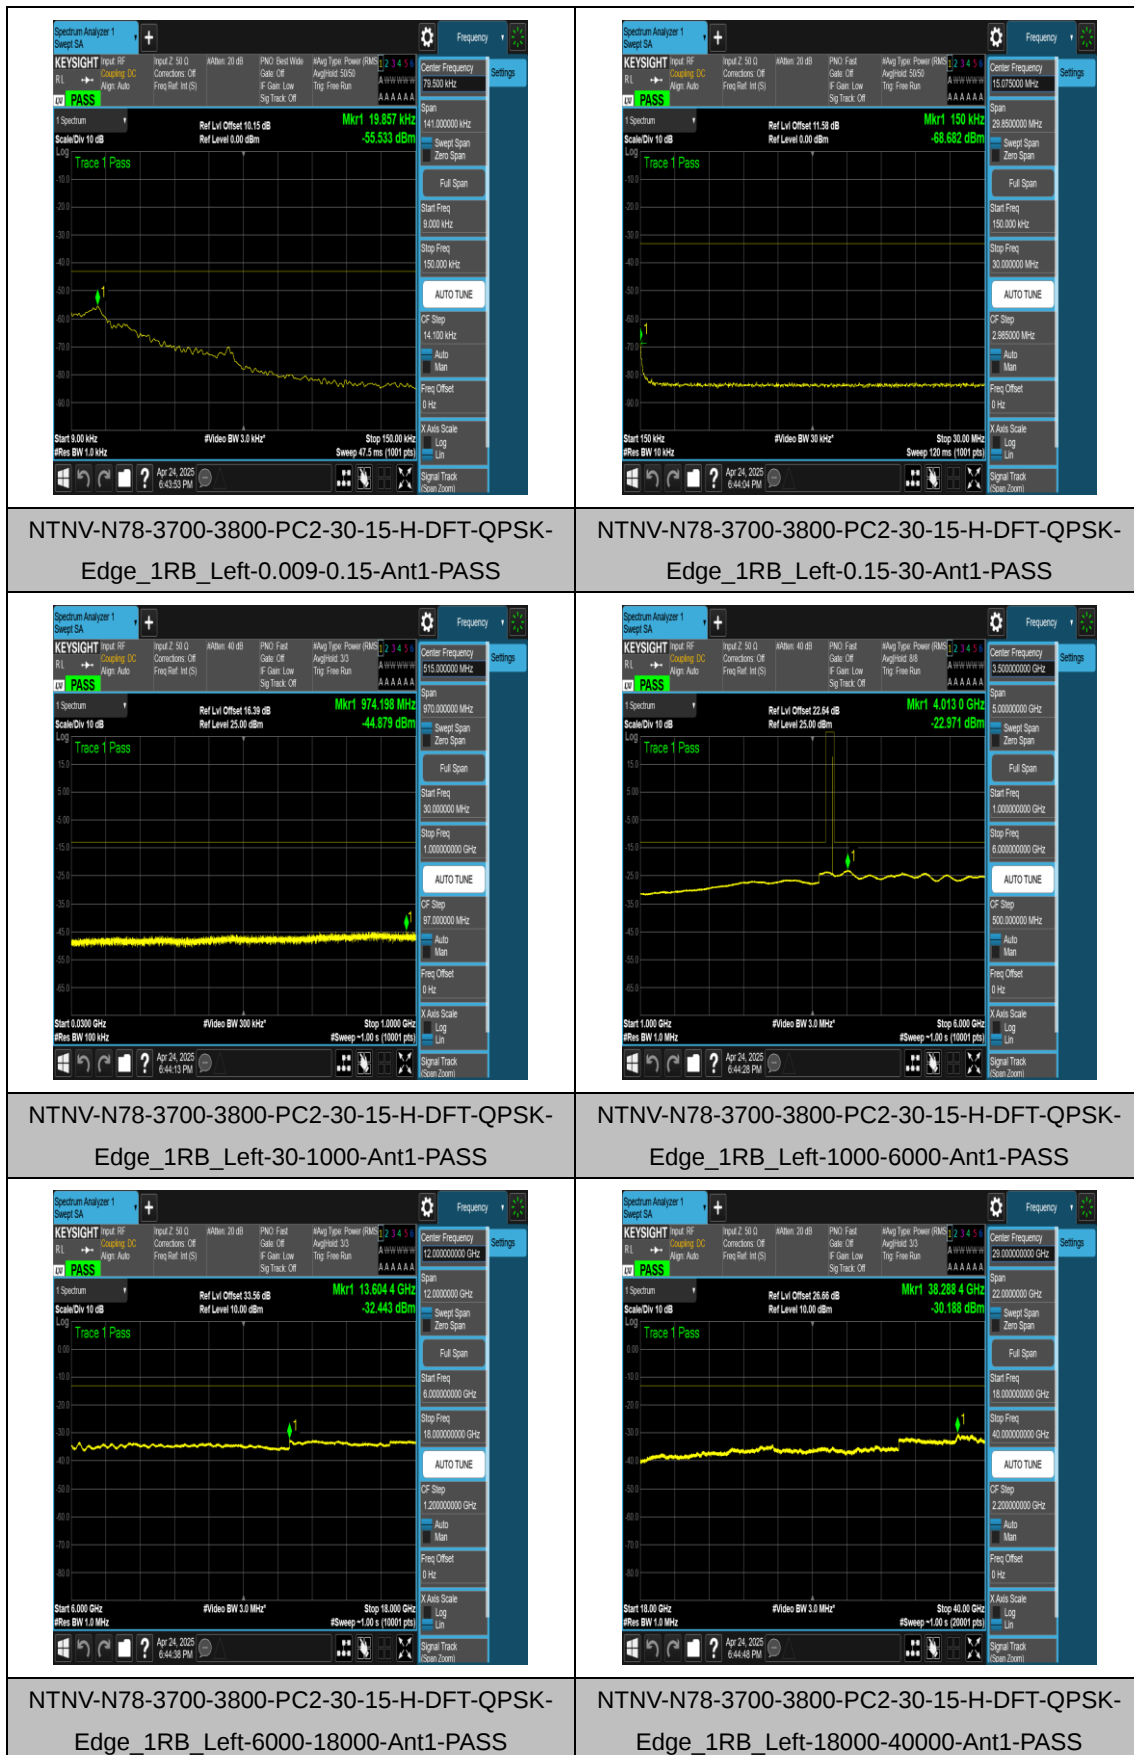


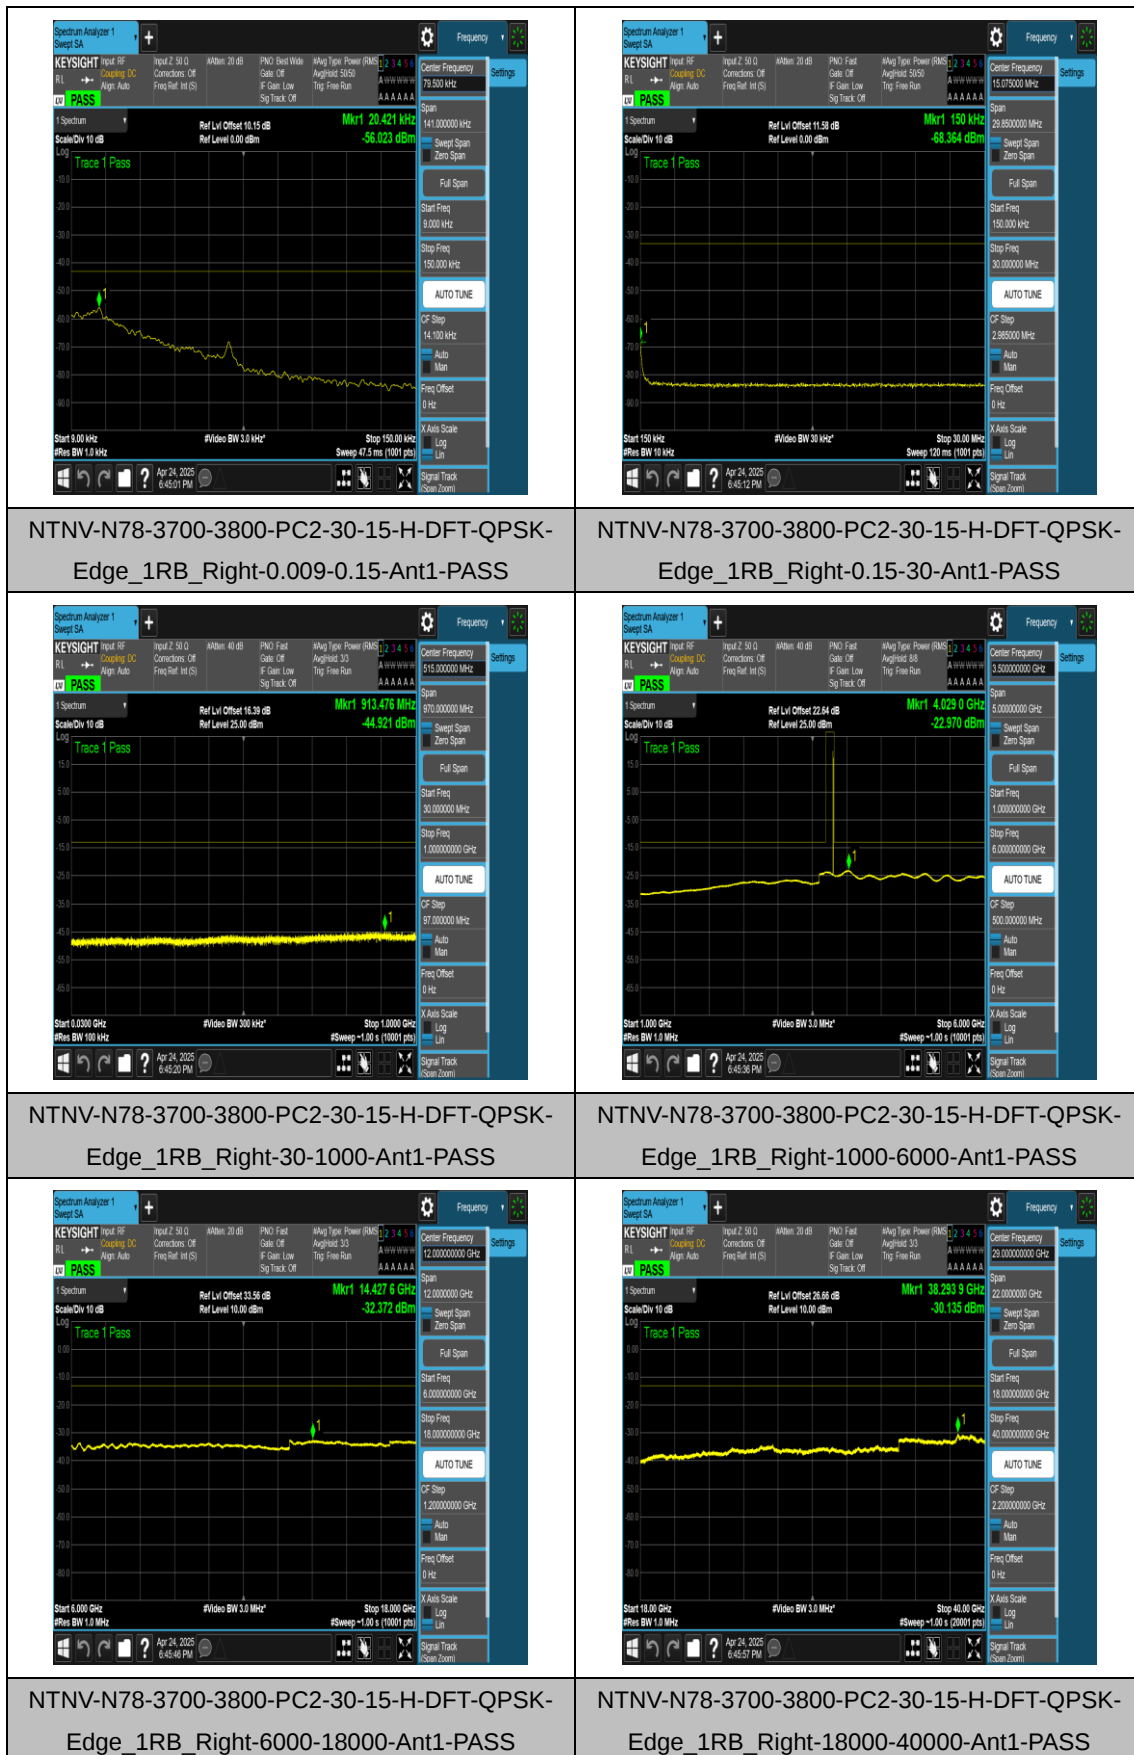


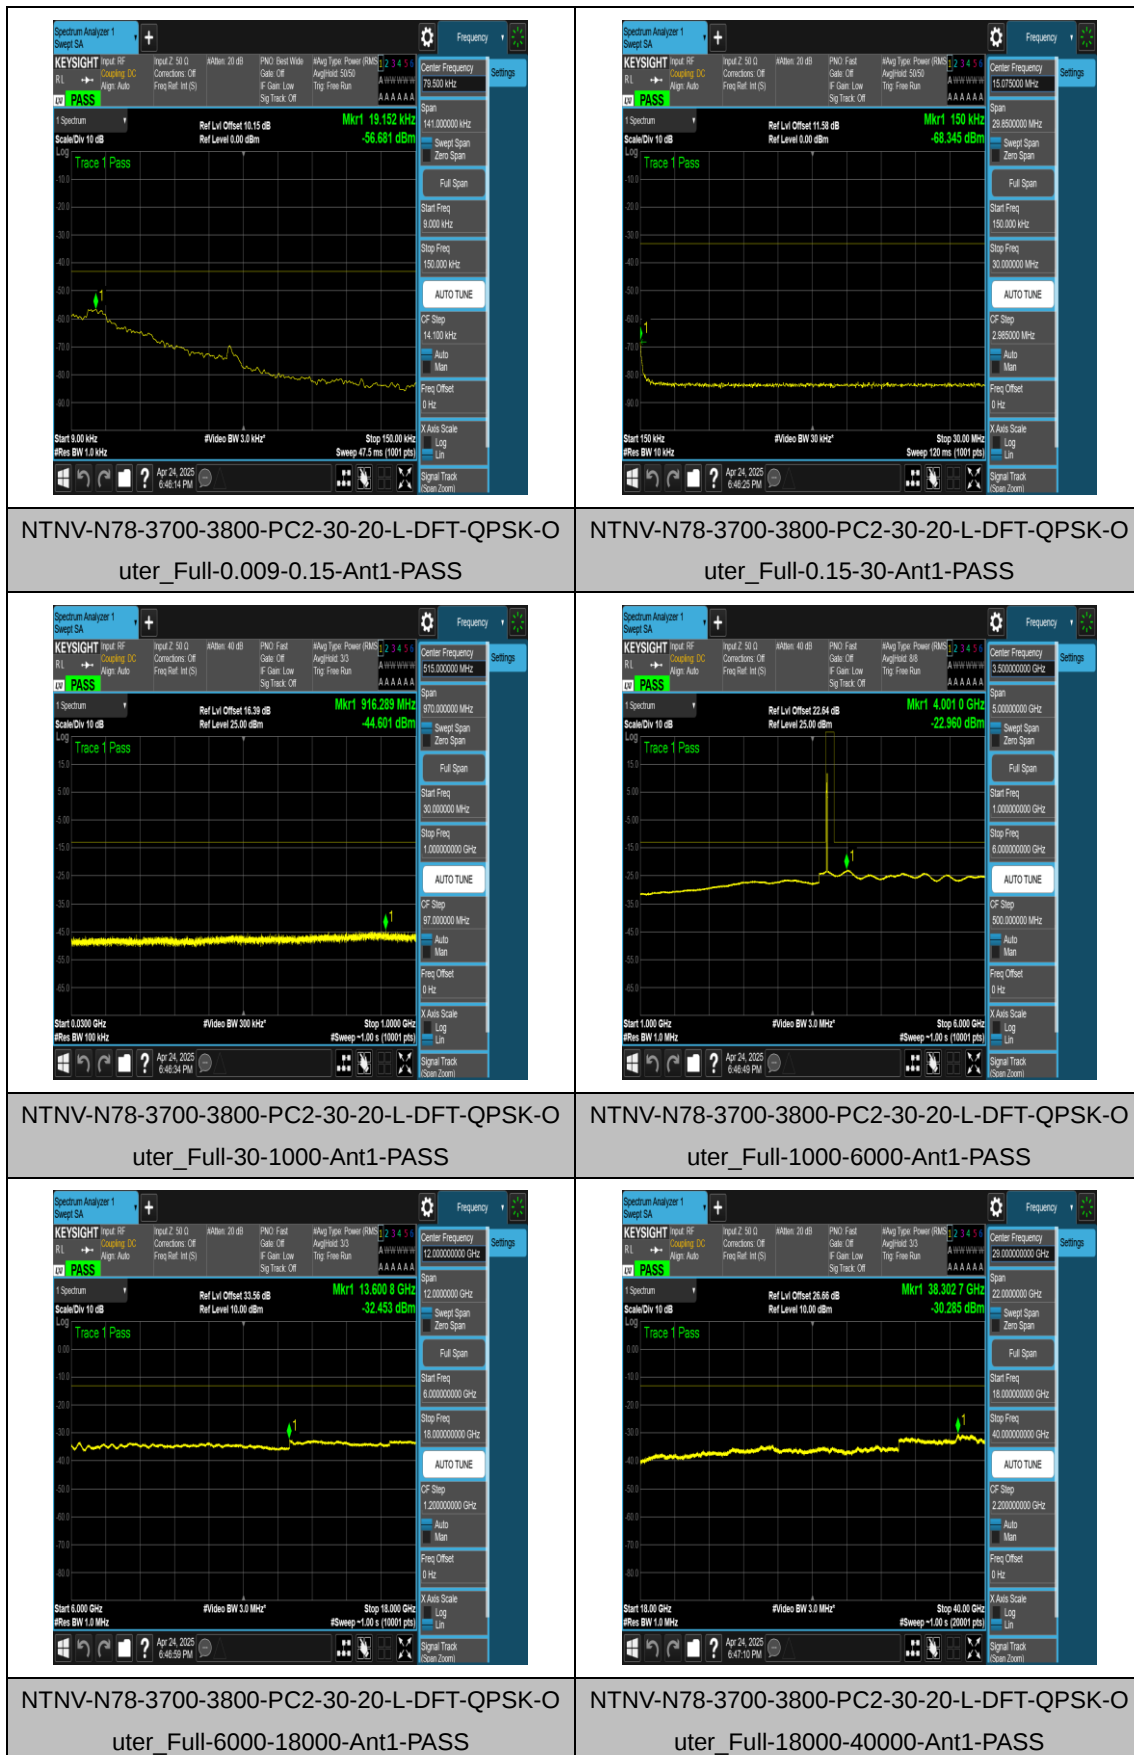


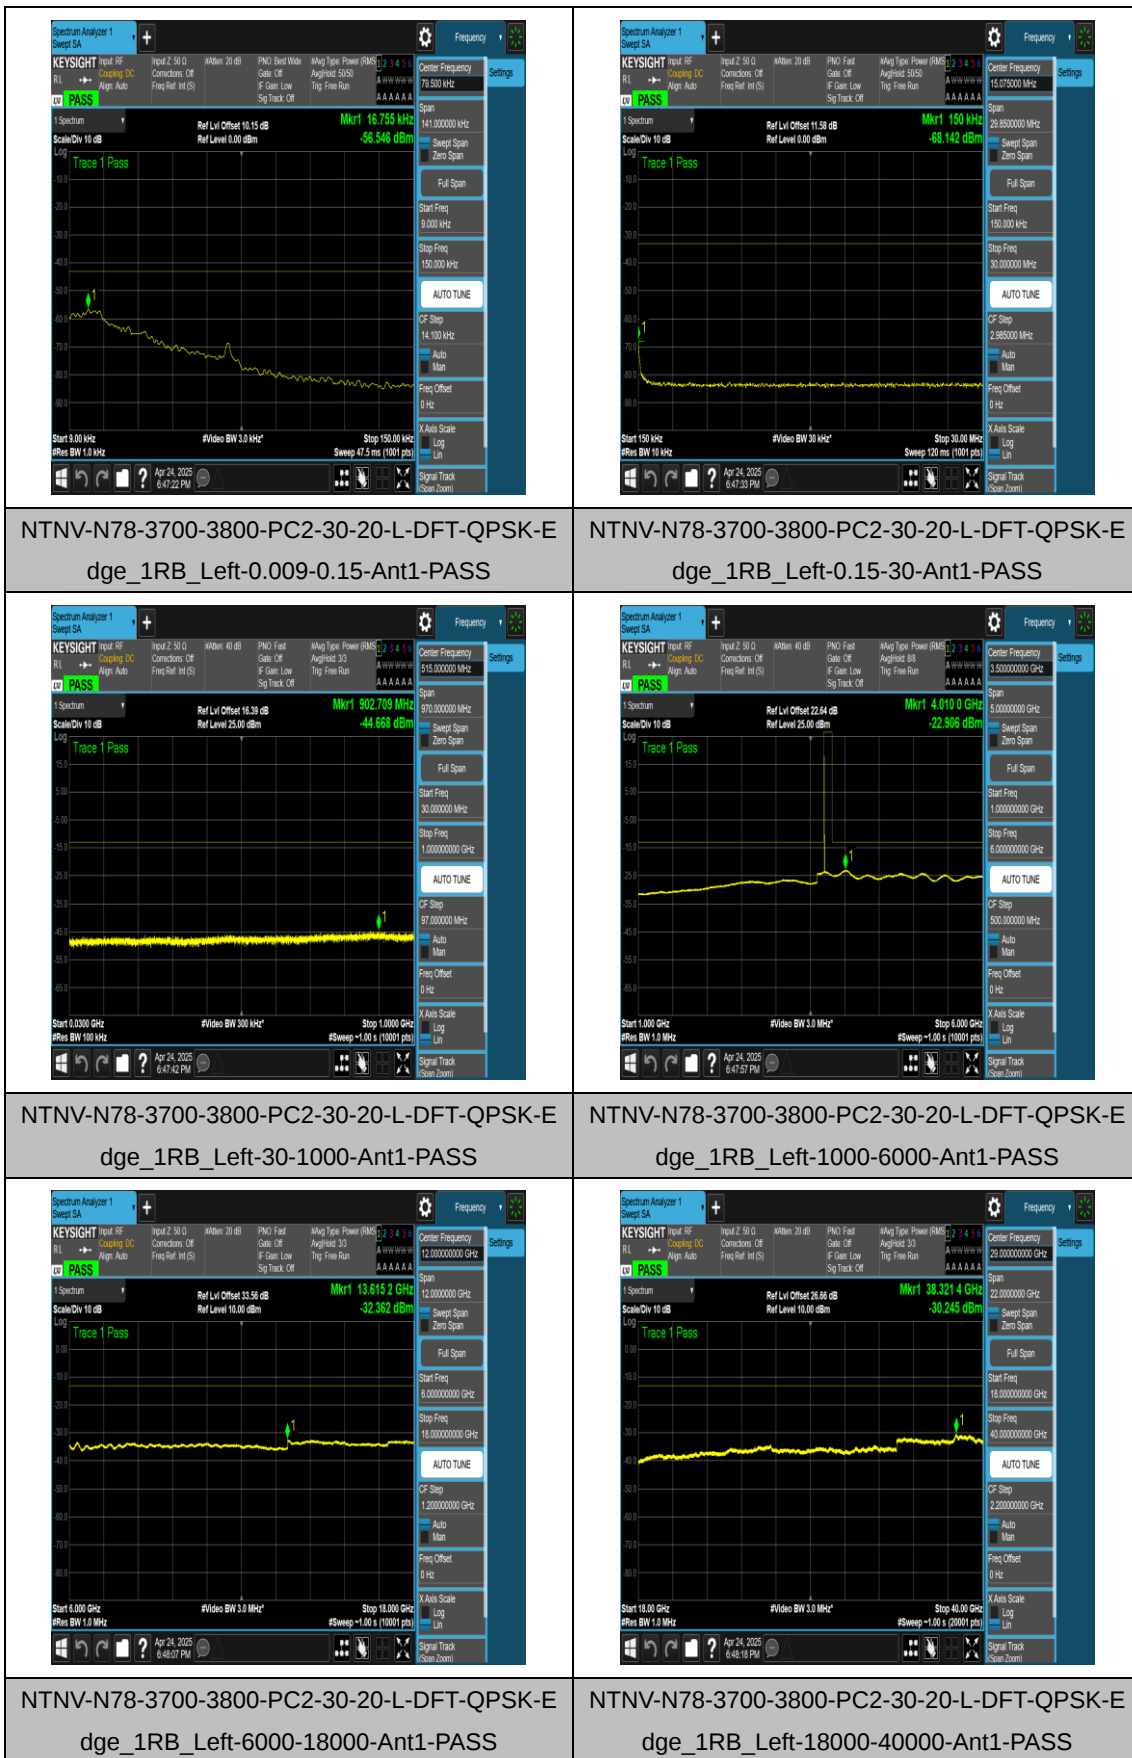

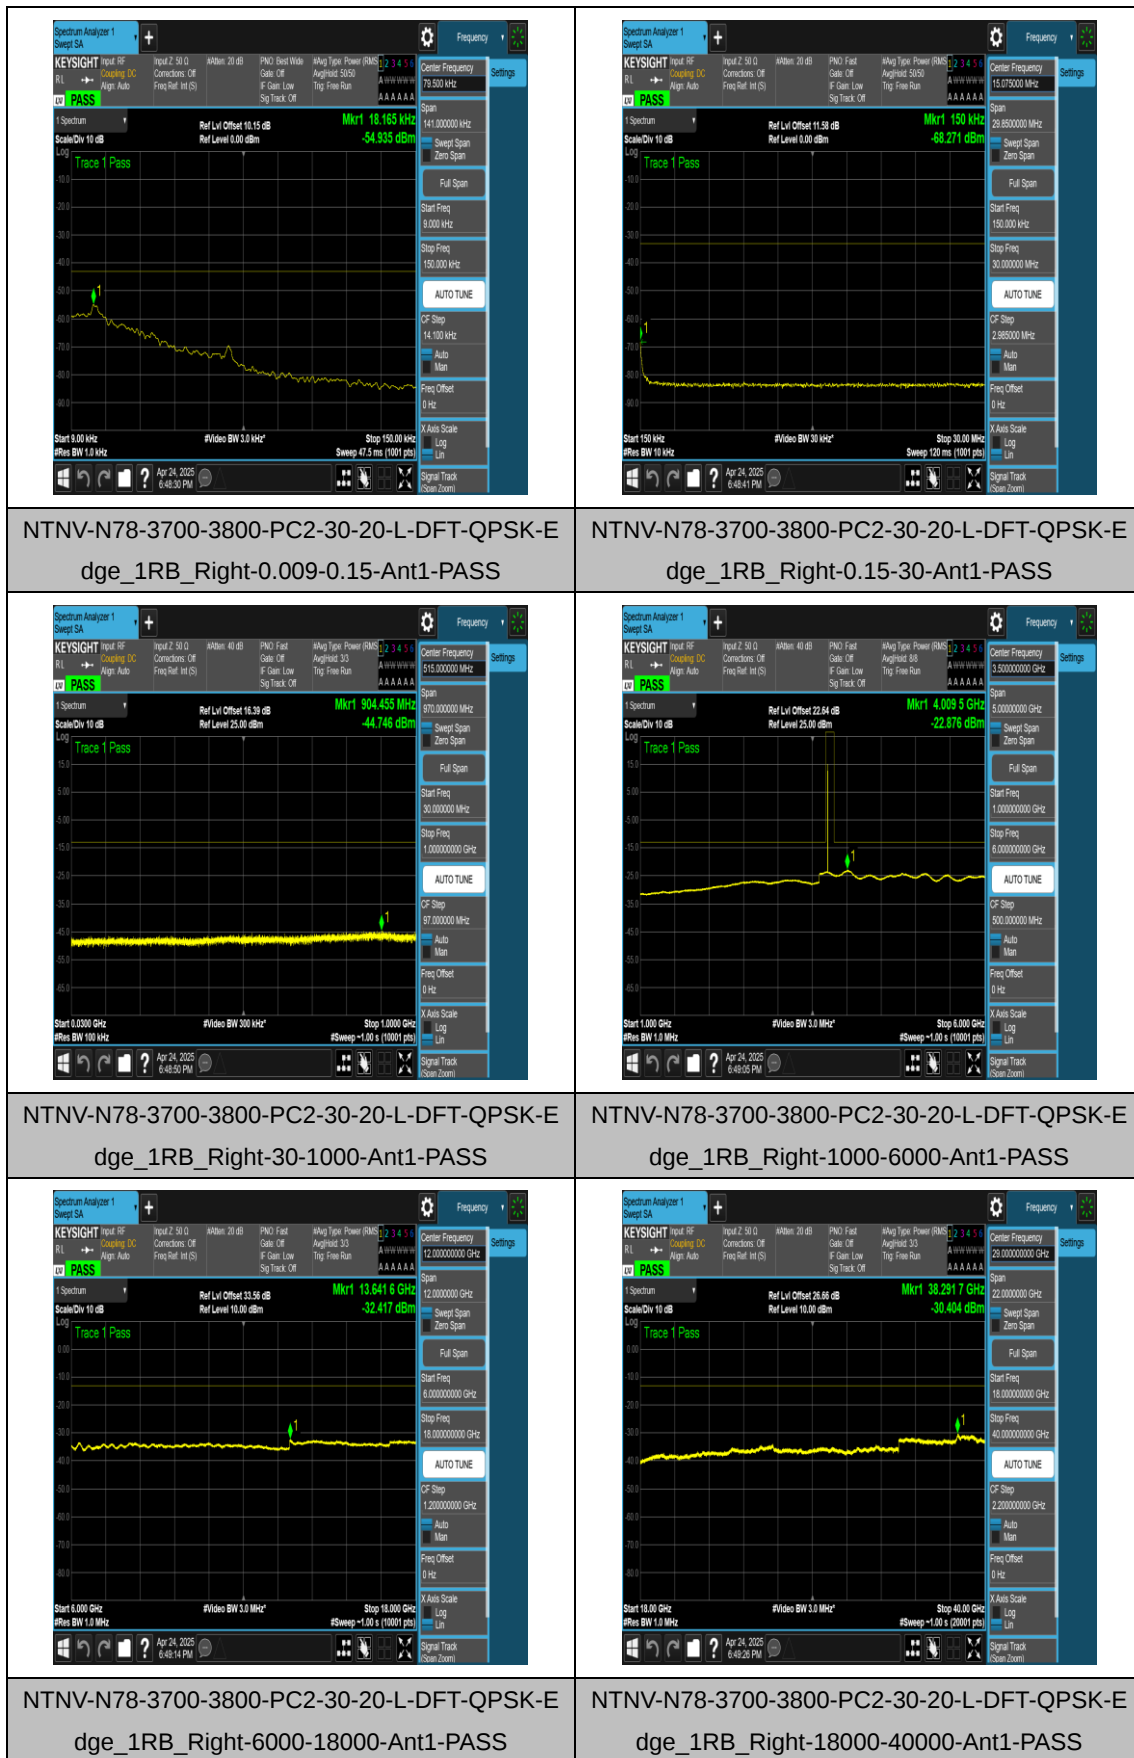

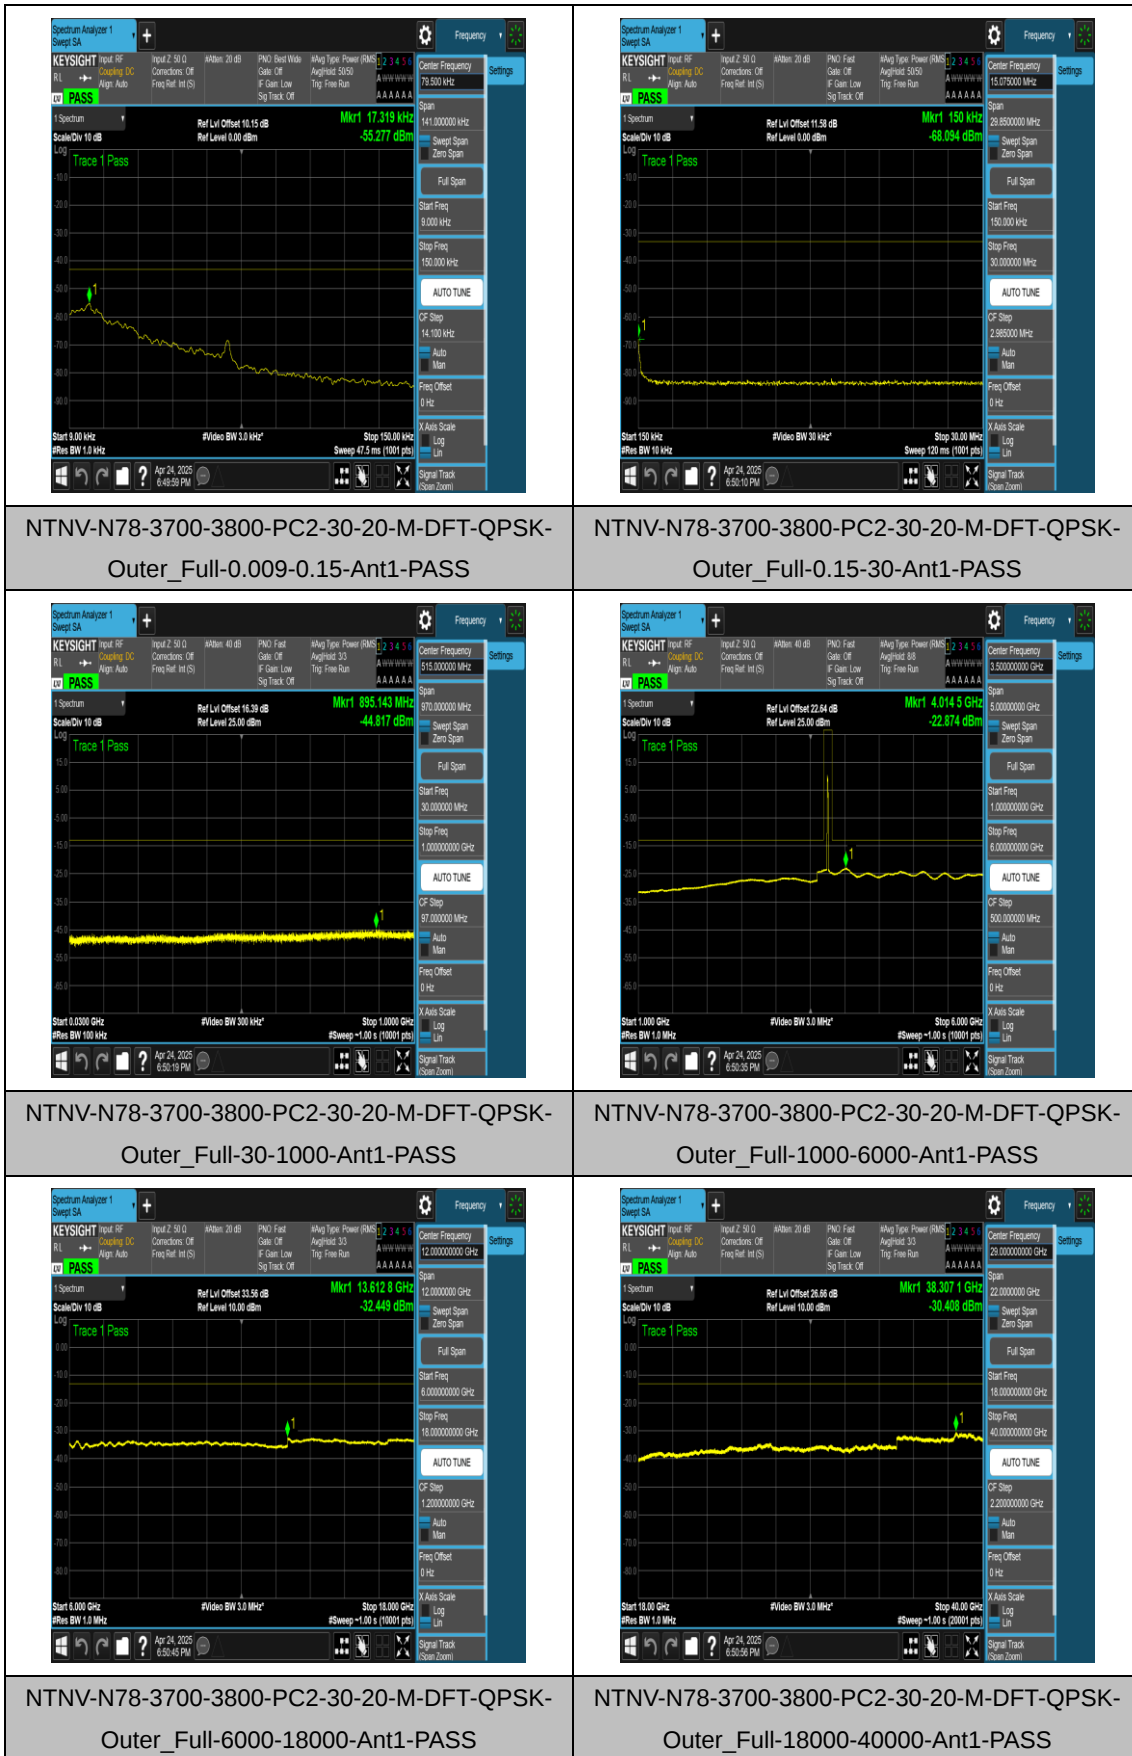


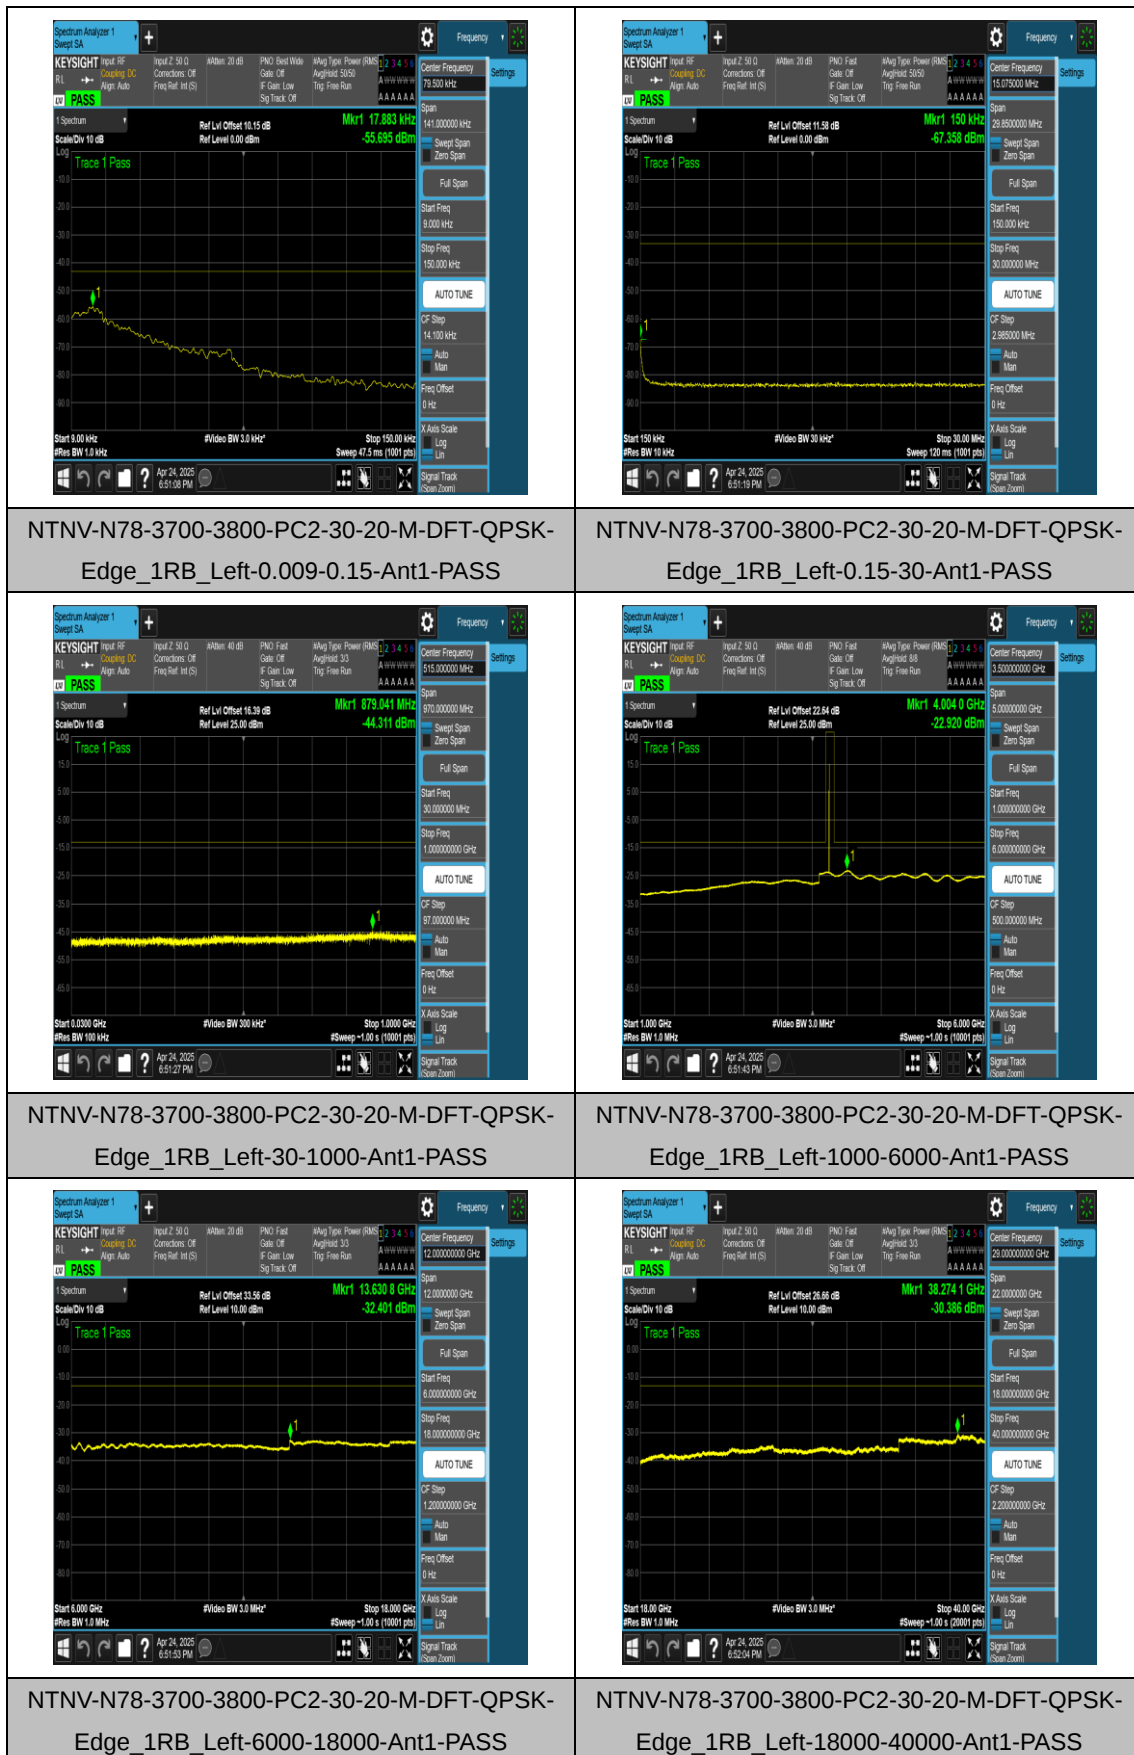


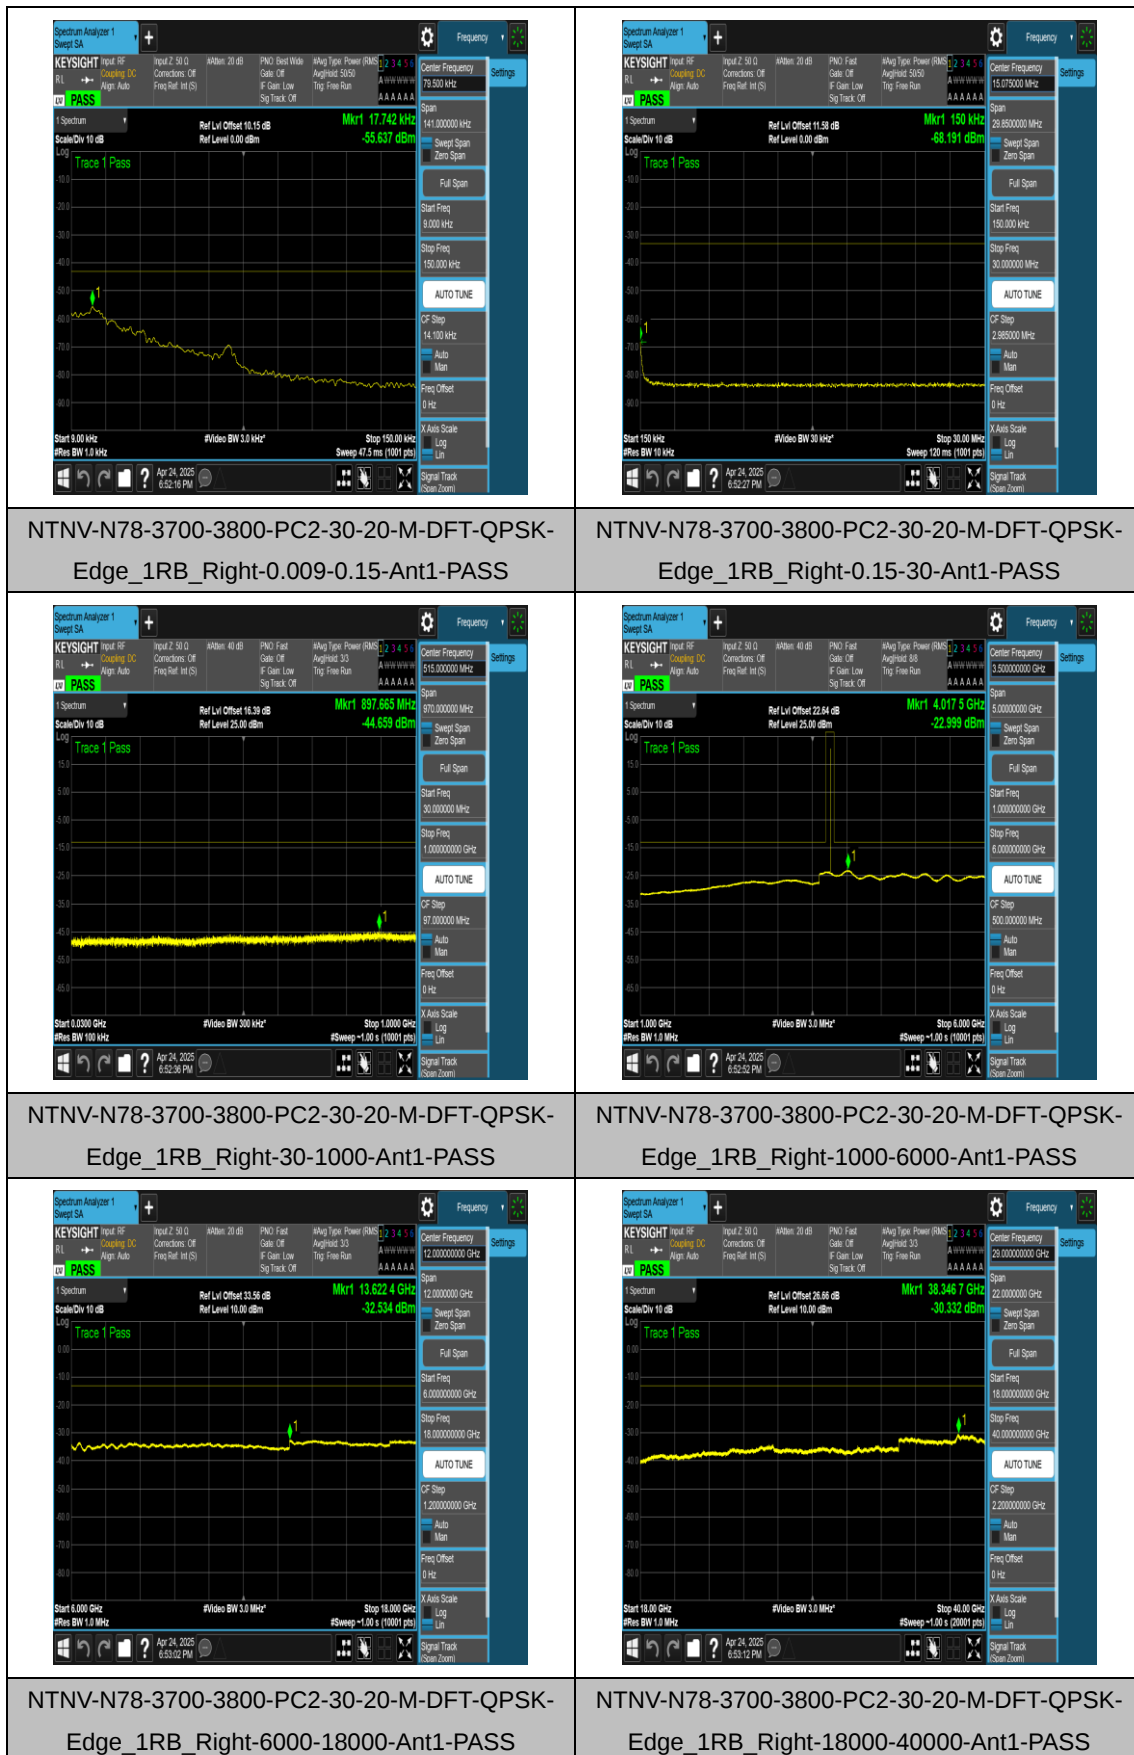




NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer_Full-0.009-0.15-Ant1-PASS

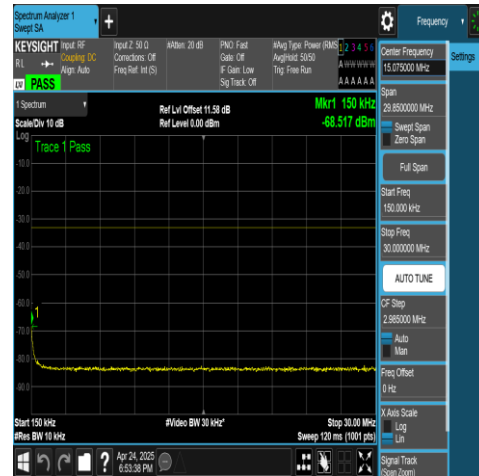


NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer_Full-0.15-30-Ant1-PASS

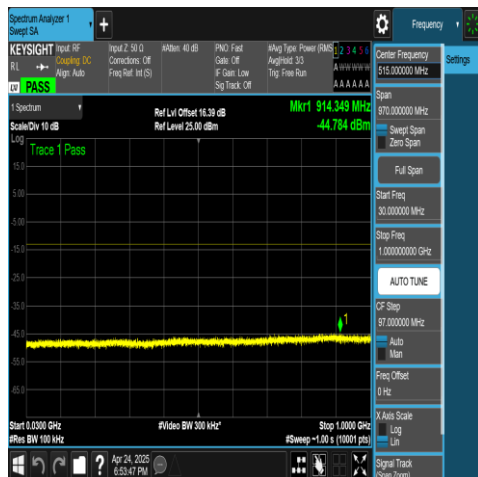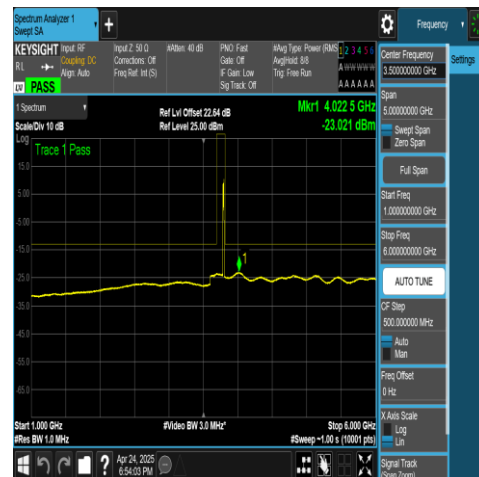NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer Full-30-1000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer Full-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer Full-6000-18000-Ant1-PASS



NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Outer Full-18000-40000-Ant1-PASS

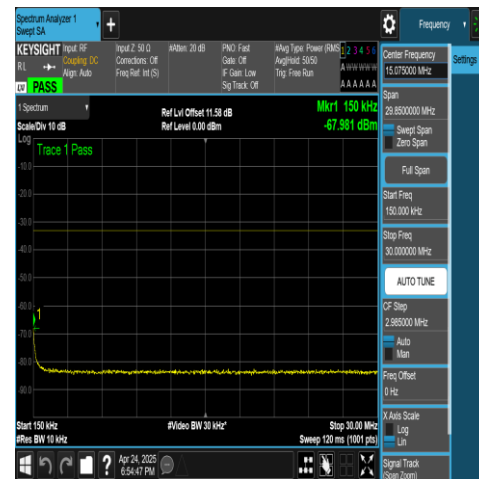NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge_1RB_Left-0.009-0.15-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge_1RB_Left-0.15-30-Ant1-PASS

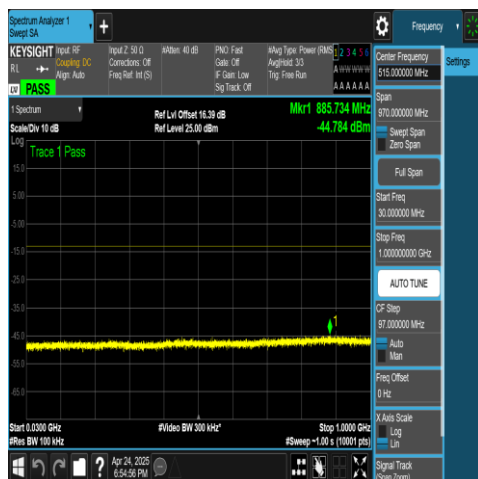

NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge_1RB_Left-30-1000-Ant1-PASS

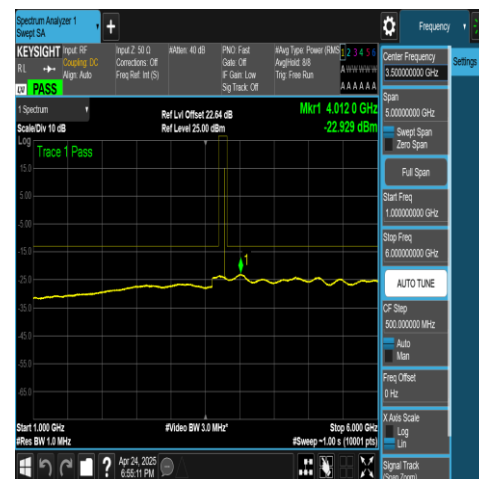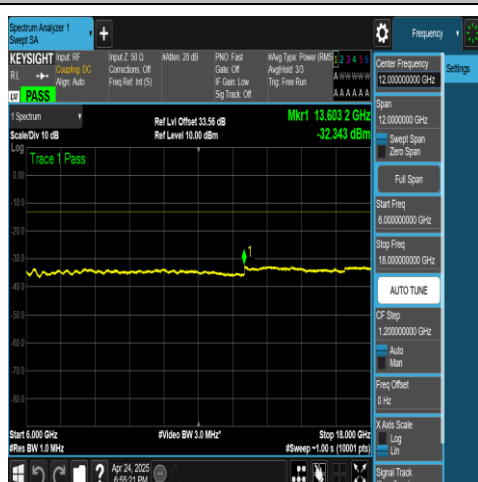NTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge_1RB_Left-1000-6000-Ant1-PASSNTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge 1RB Left-6000-18000-Ant1-PASSNTNV-N78-3700-3800-PC2-30-20-H-DFT-QPSK-
Edge 1RB Left-18000-40000-Ant1-PASS

