






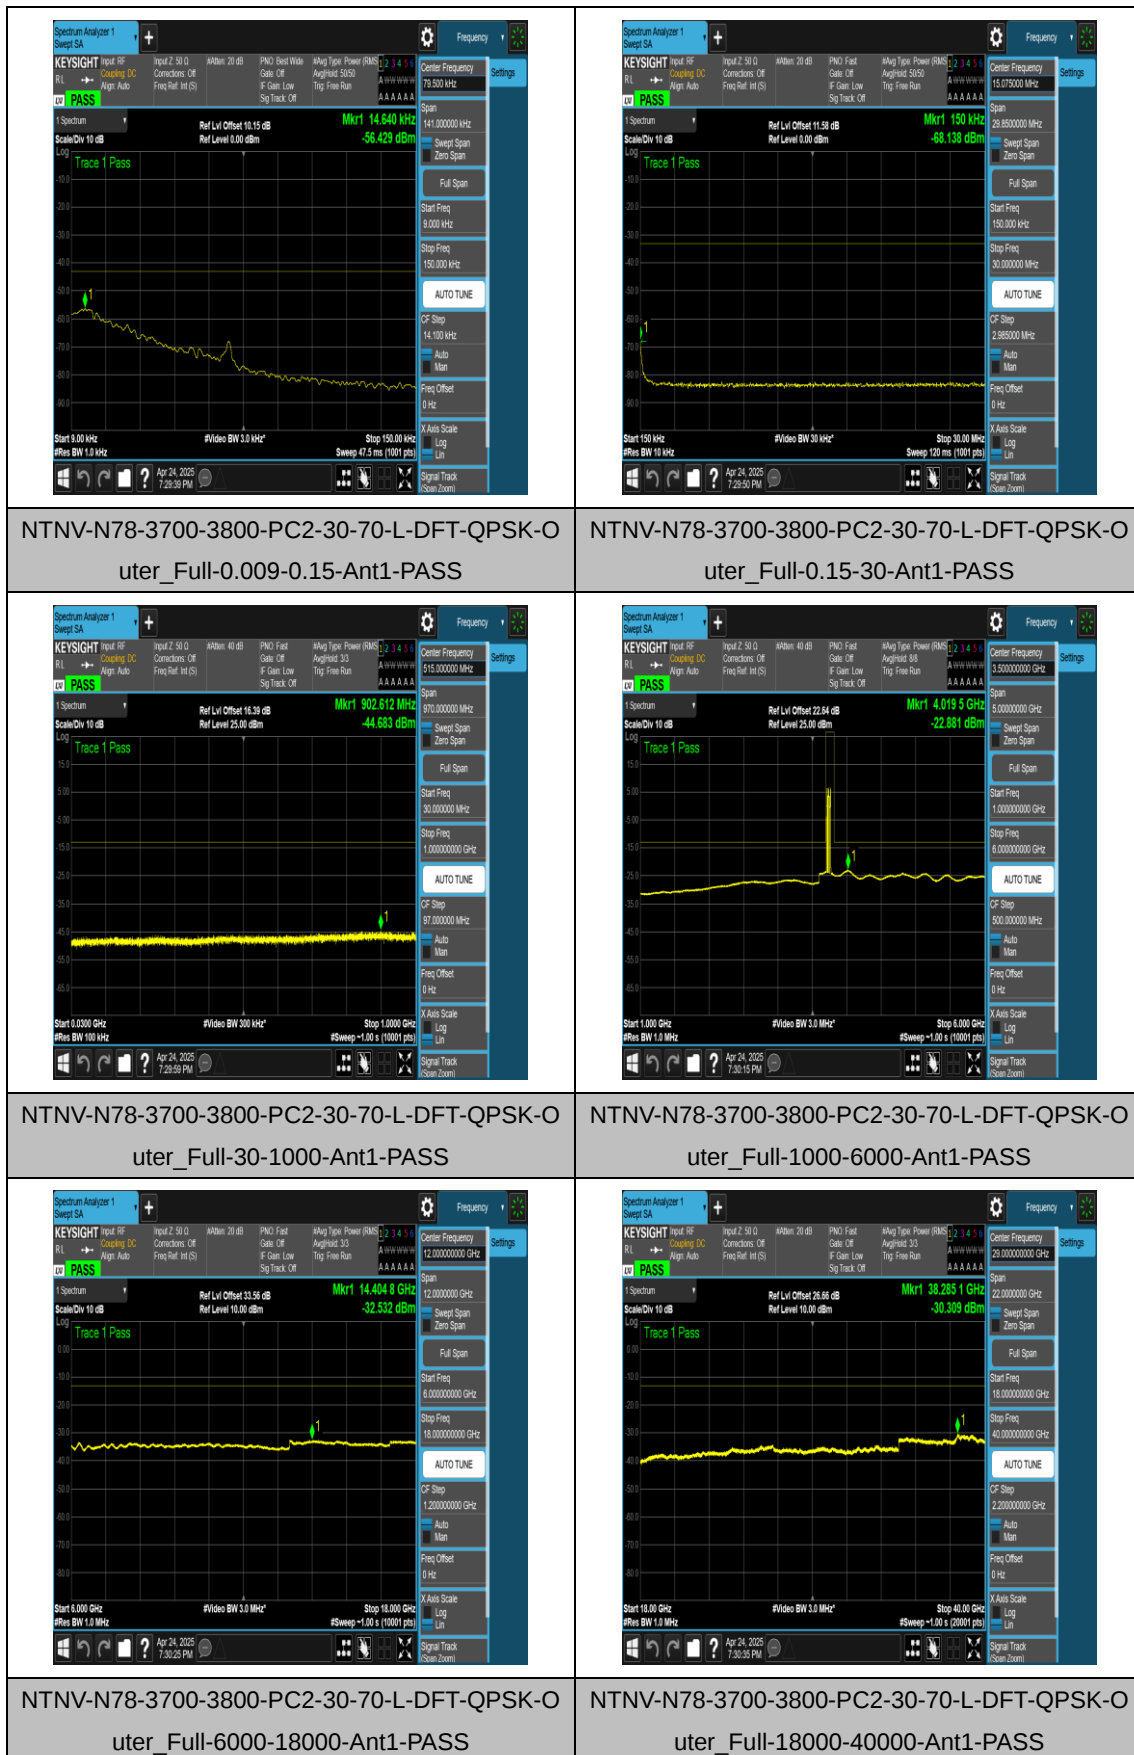


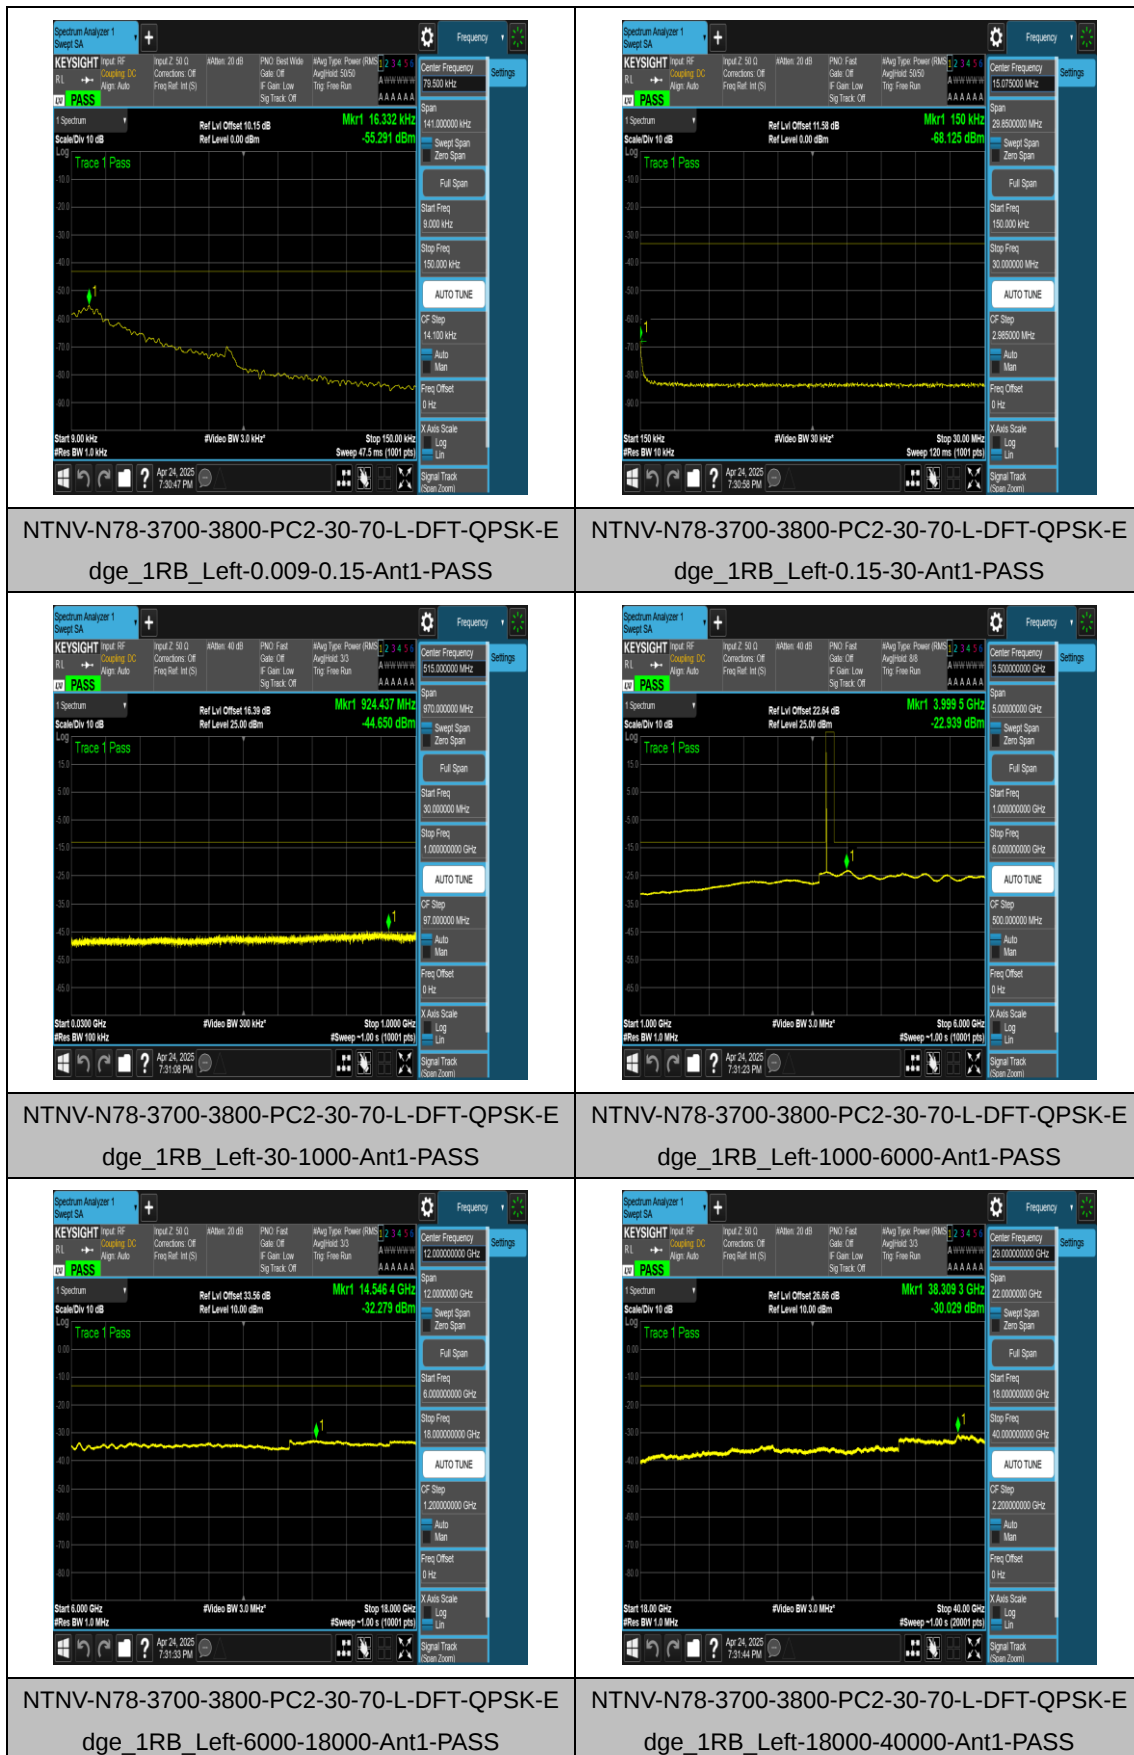


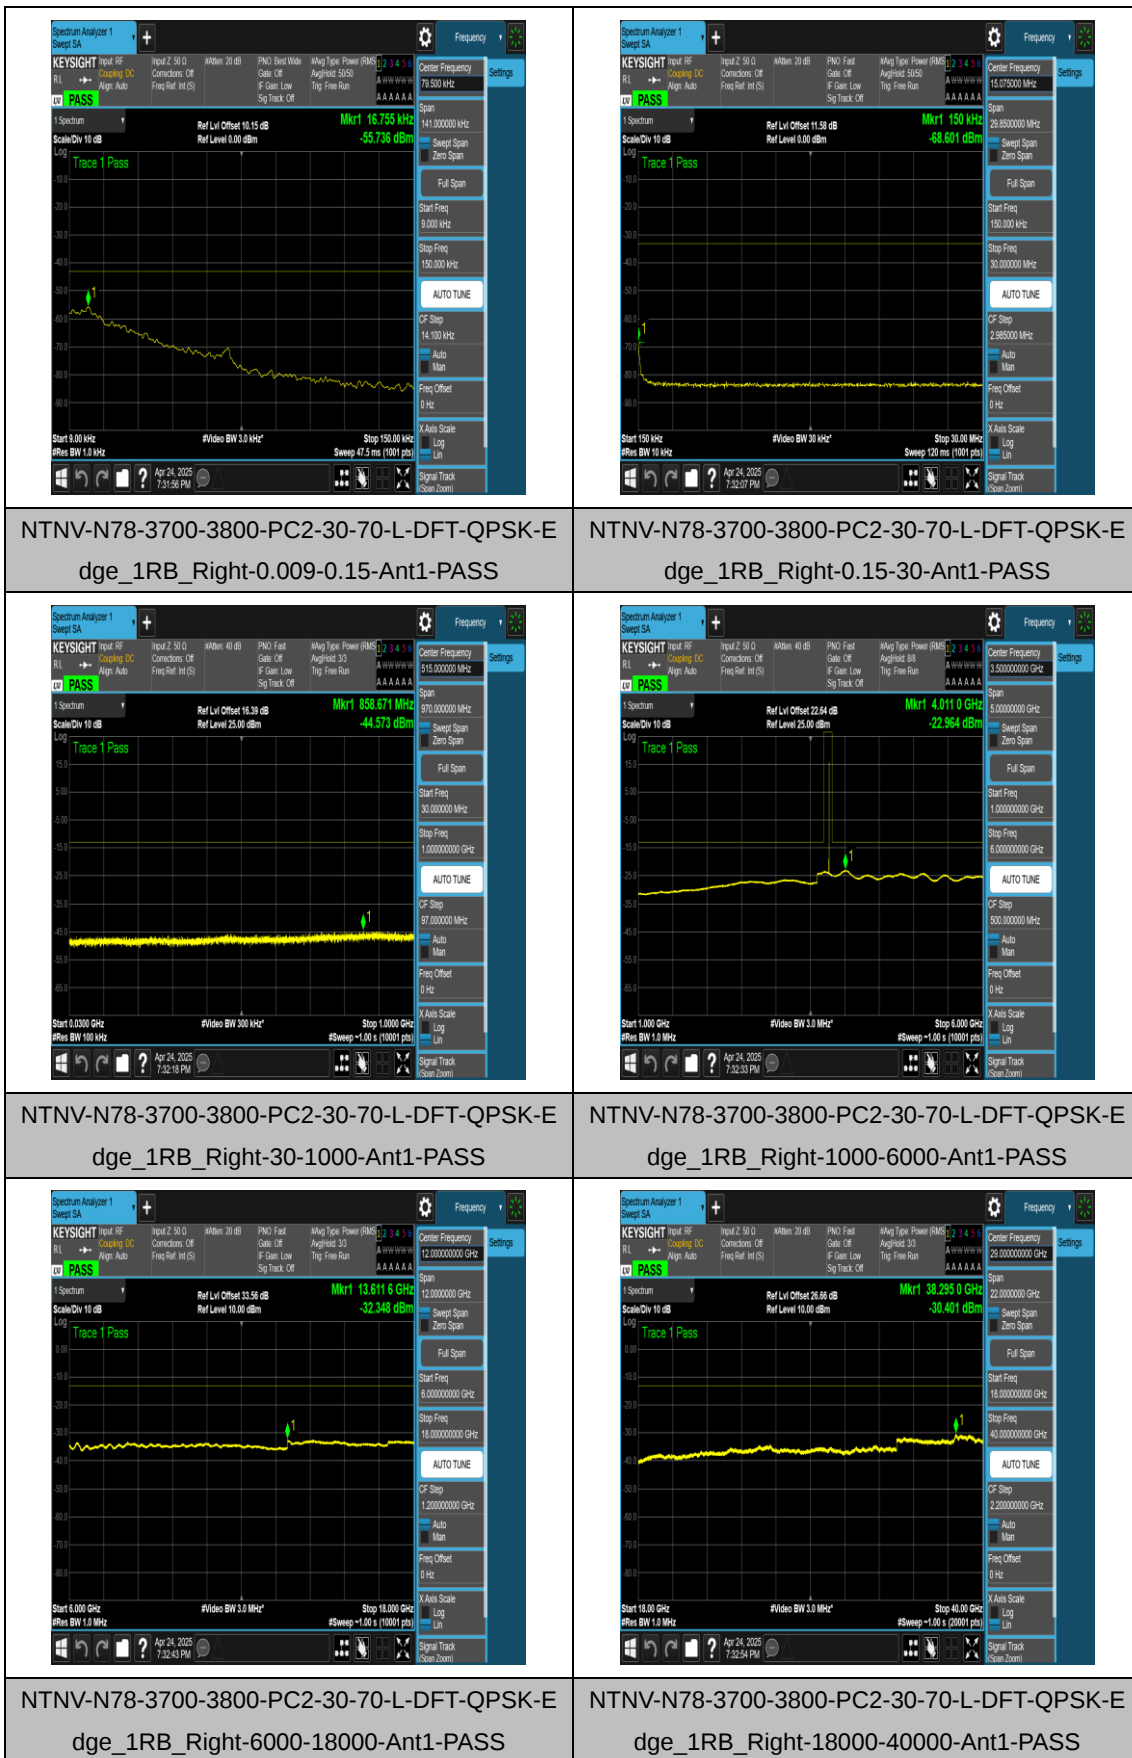


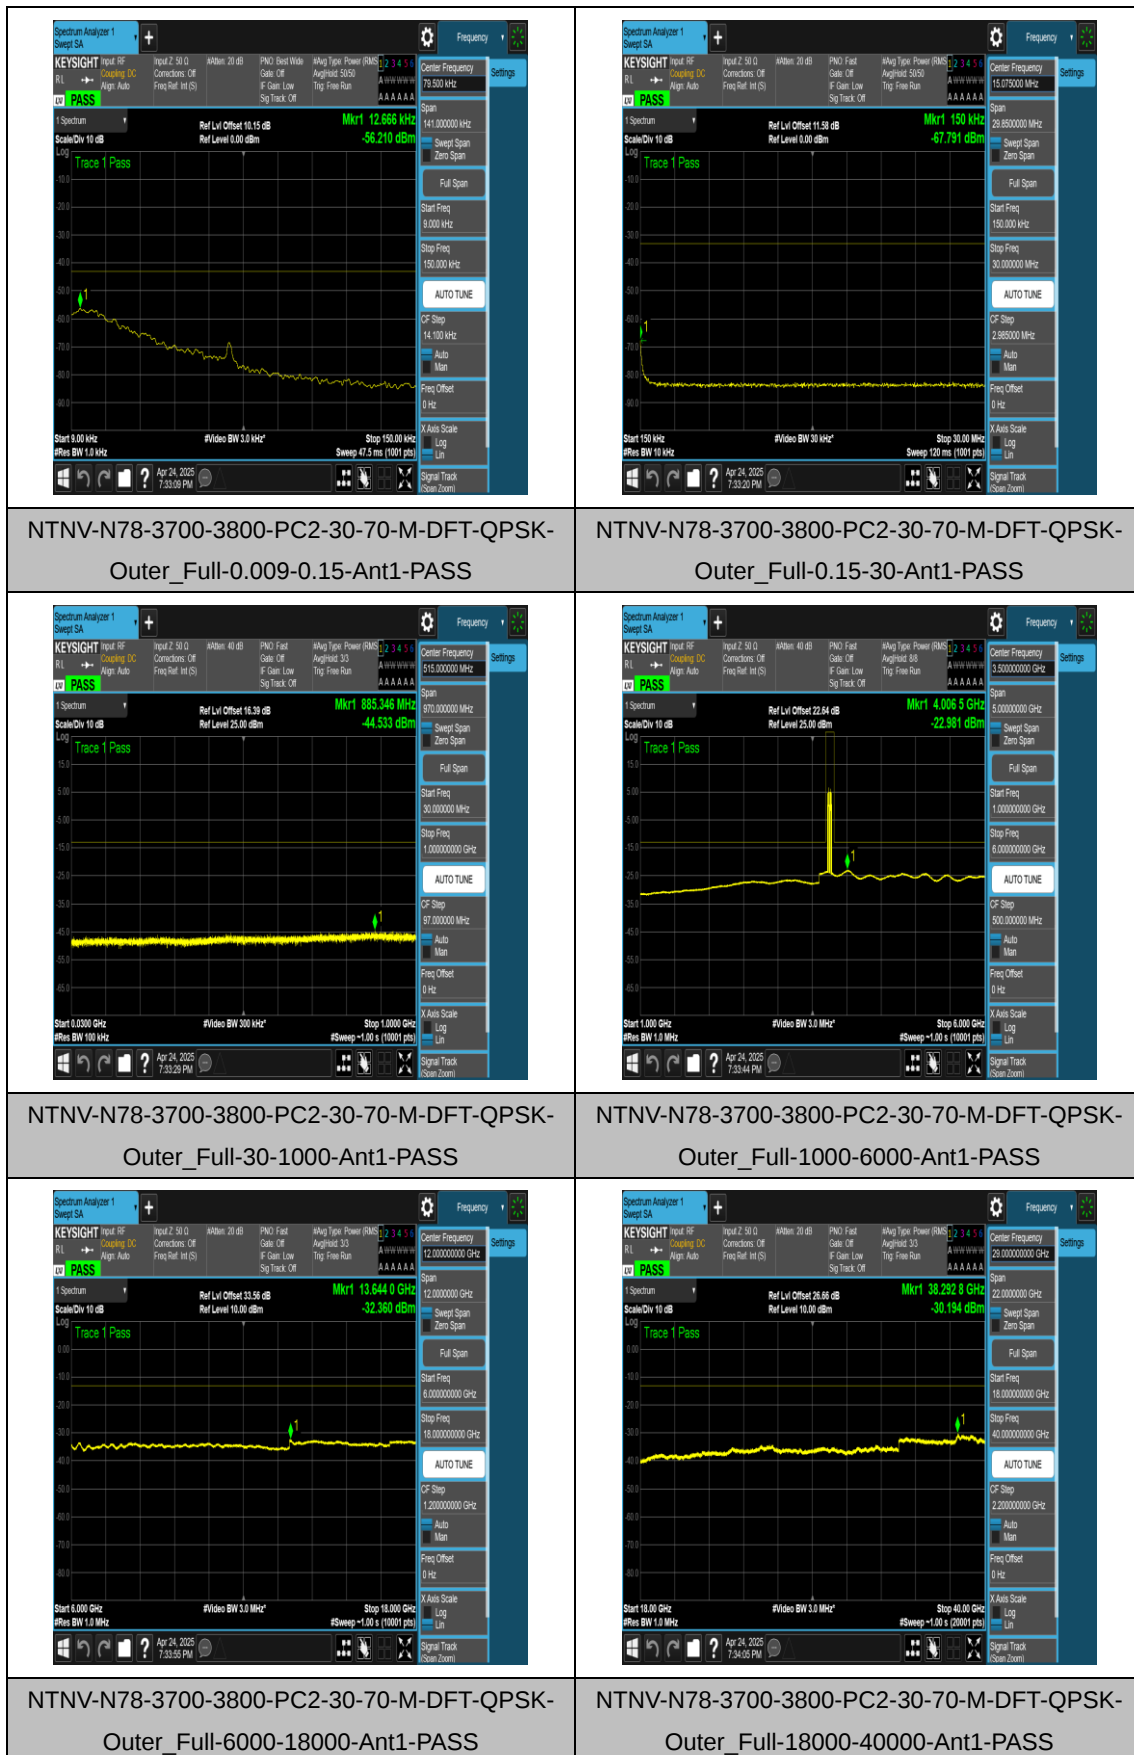


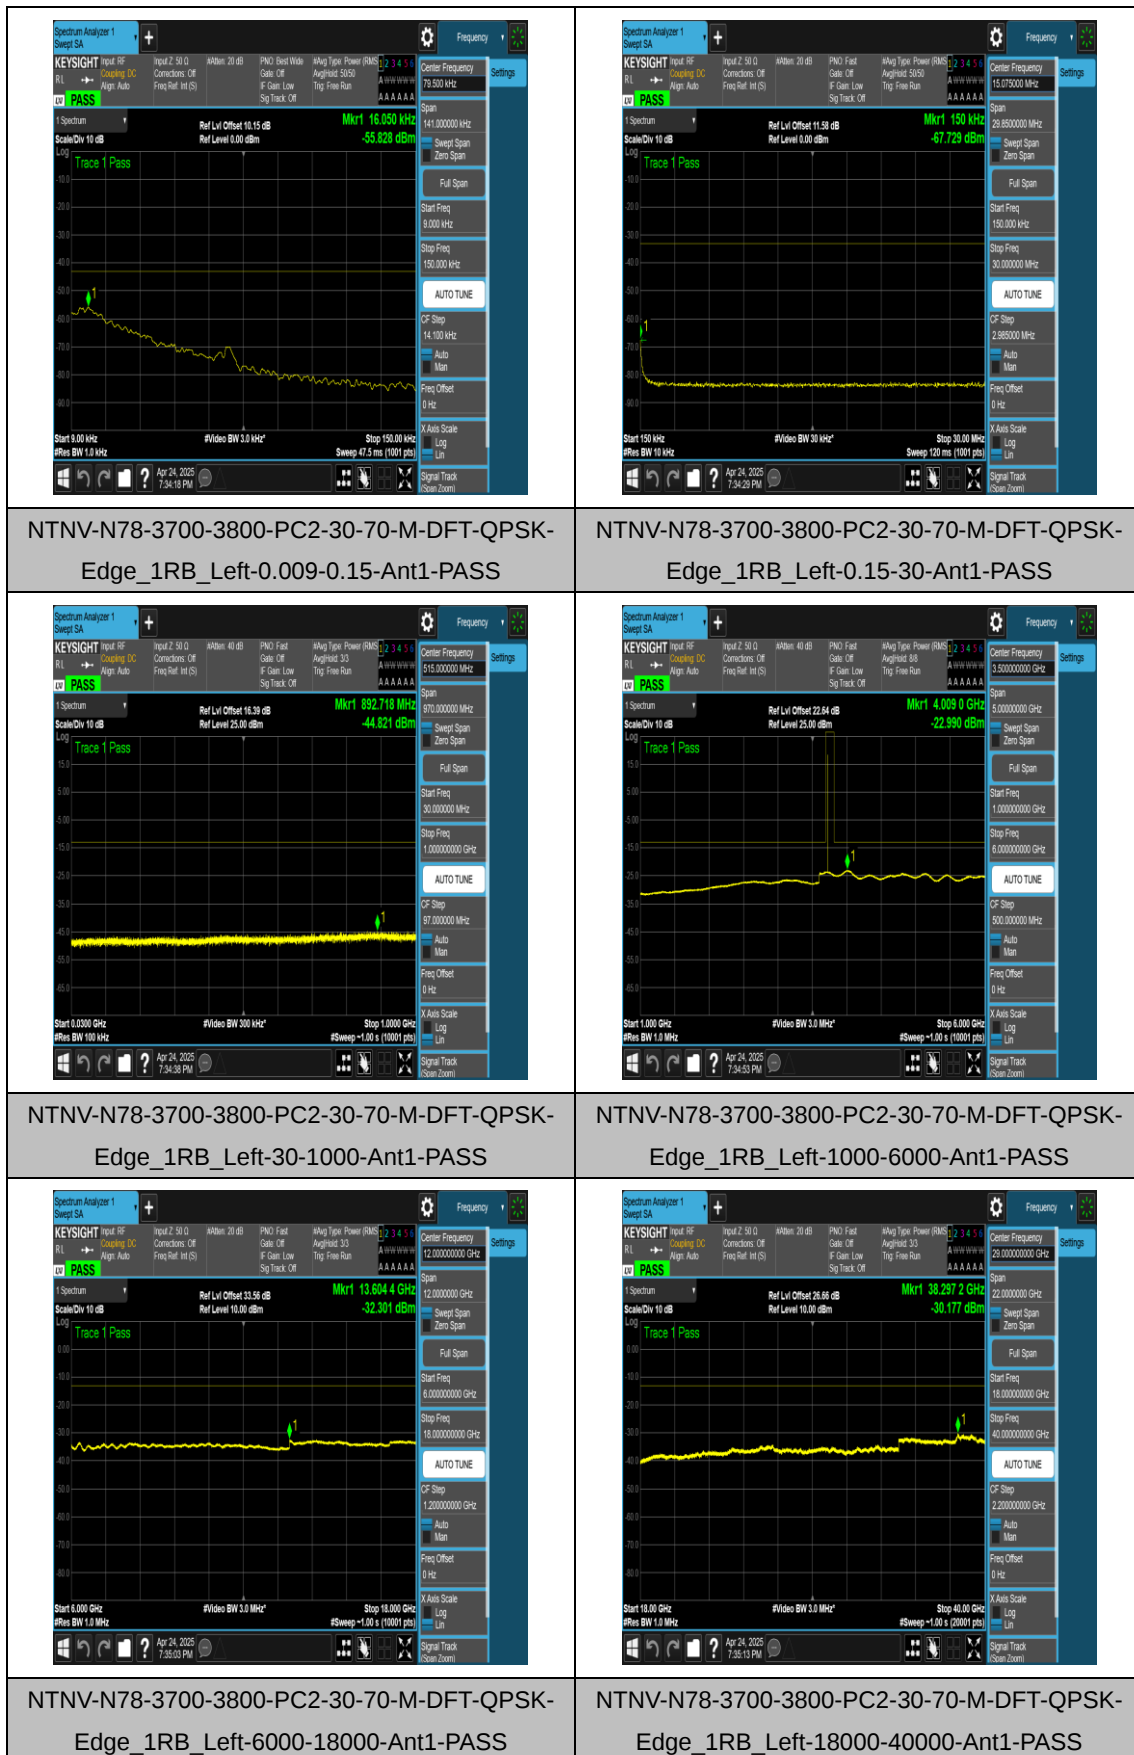

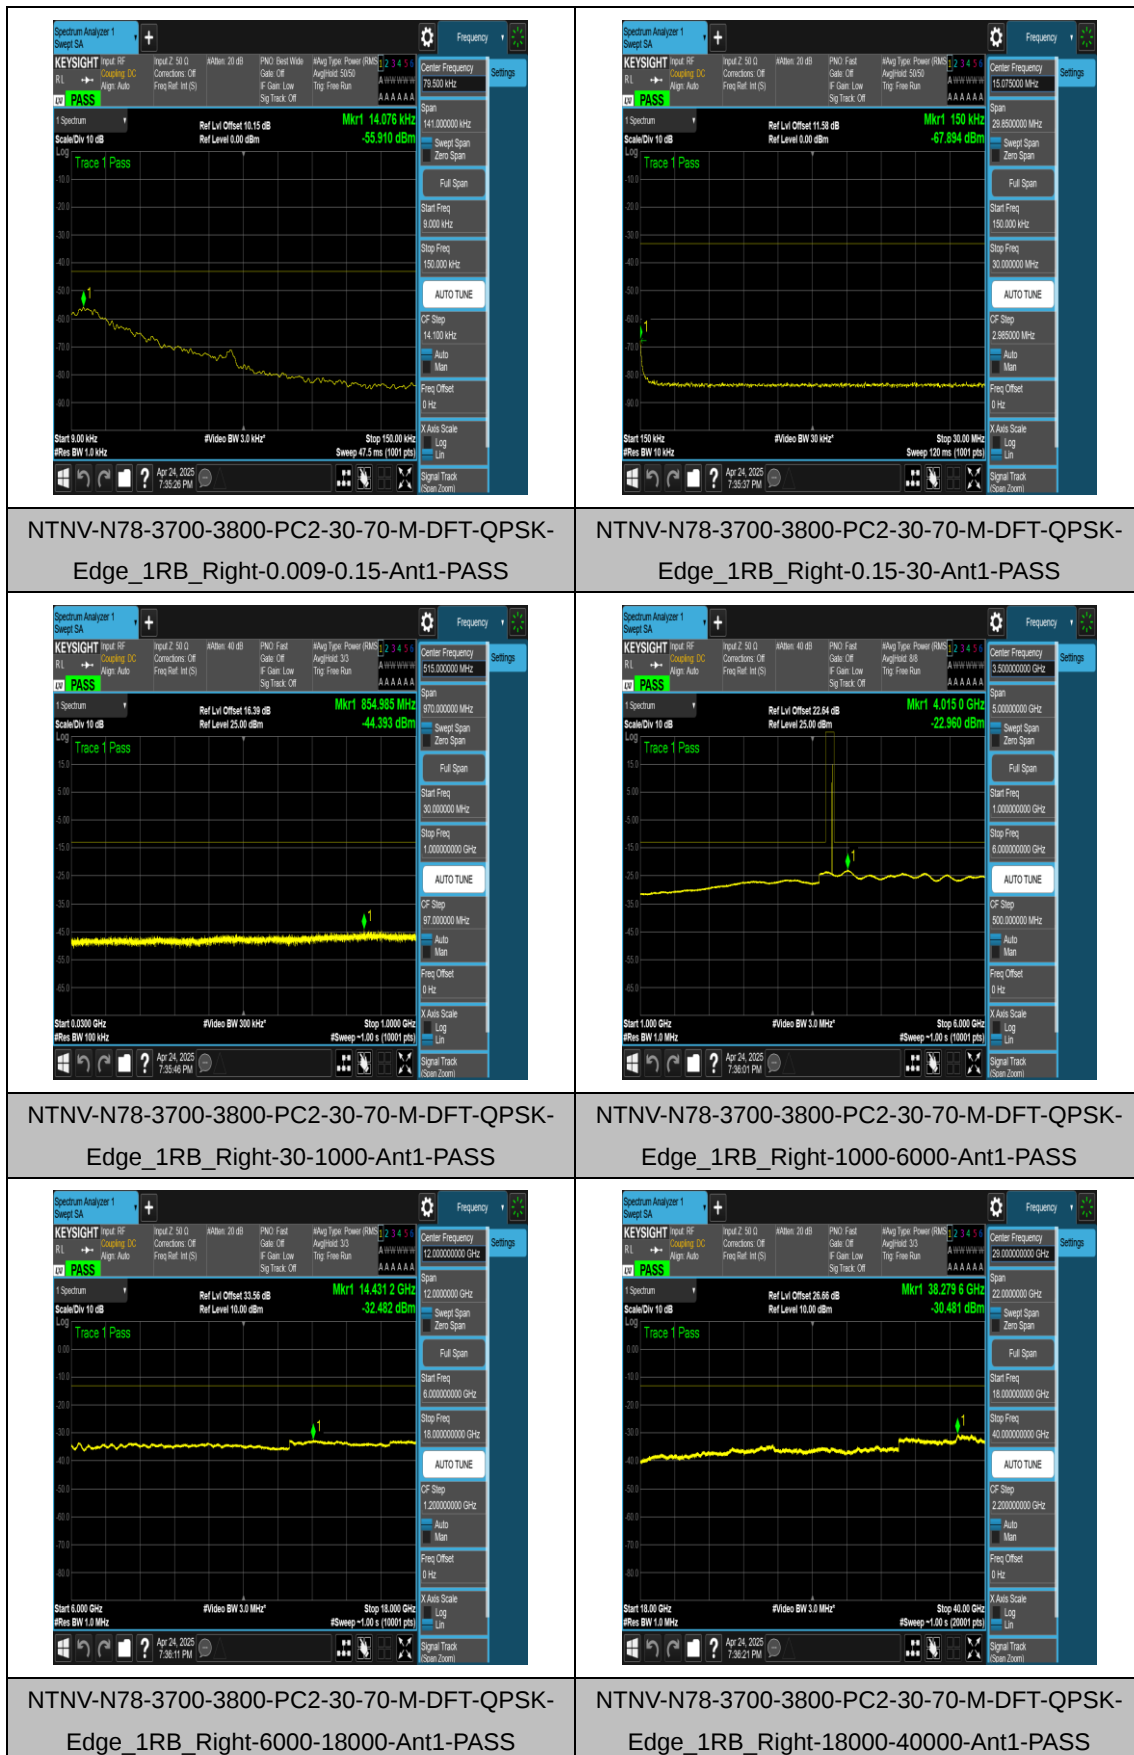

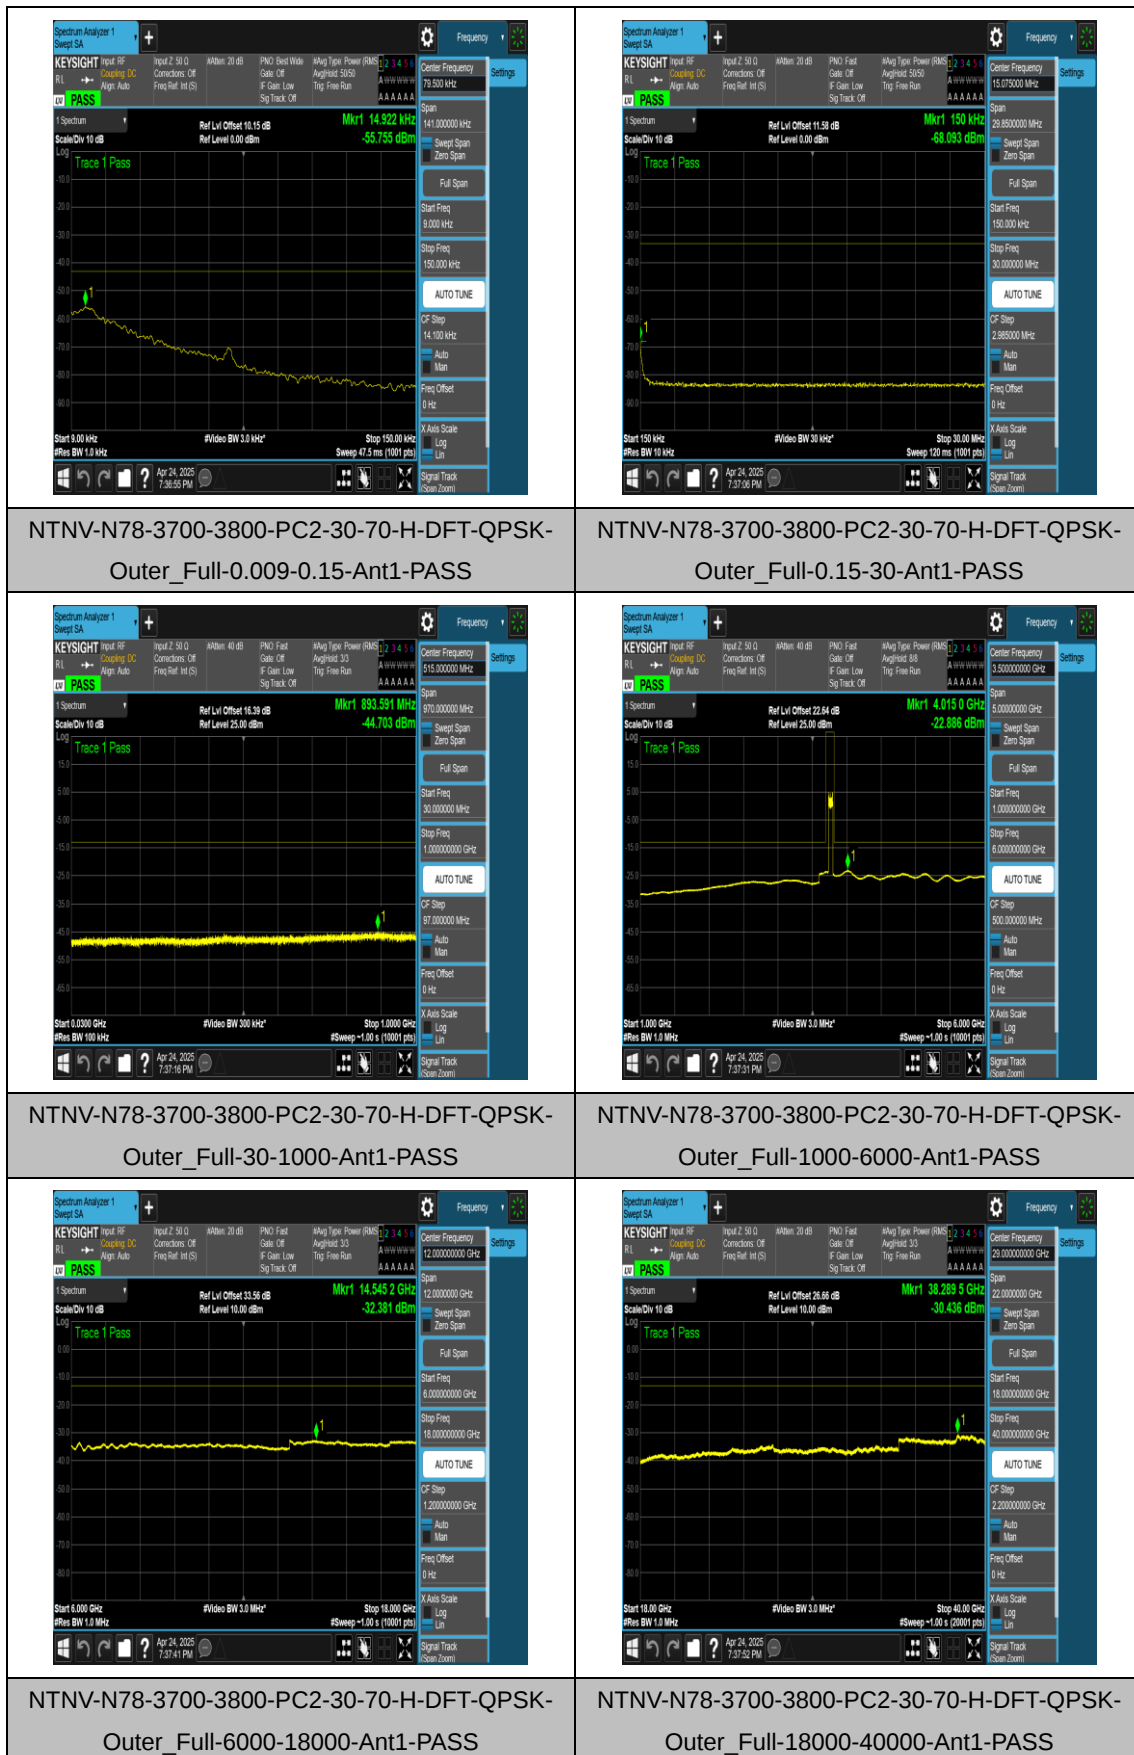

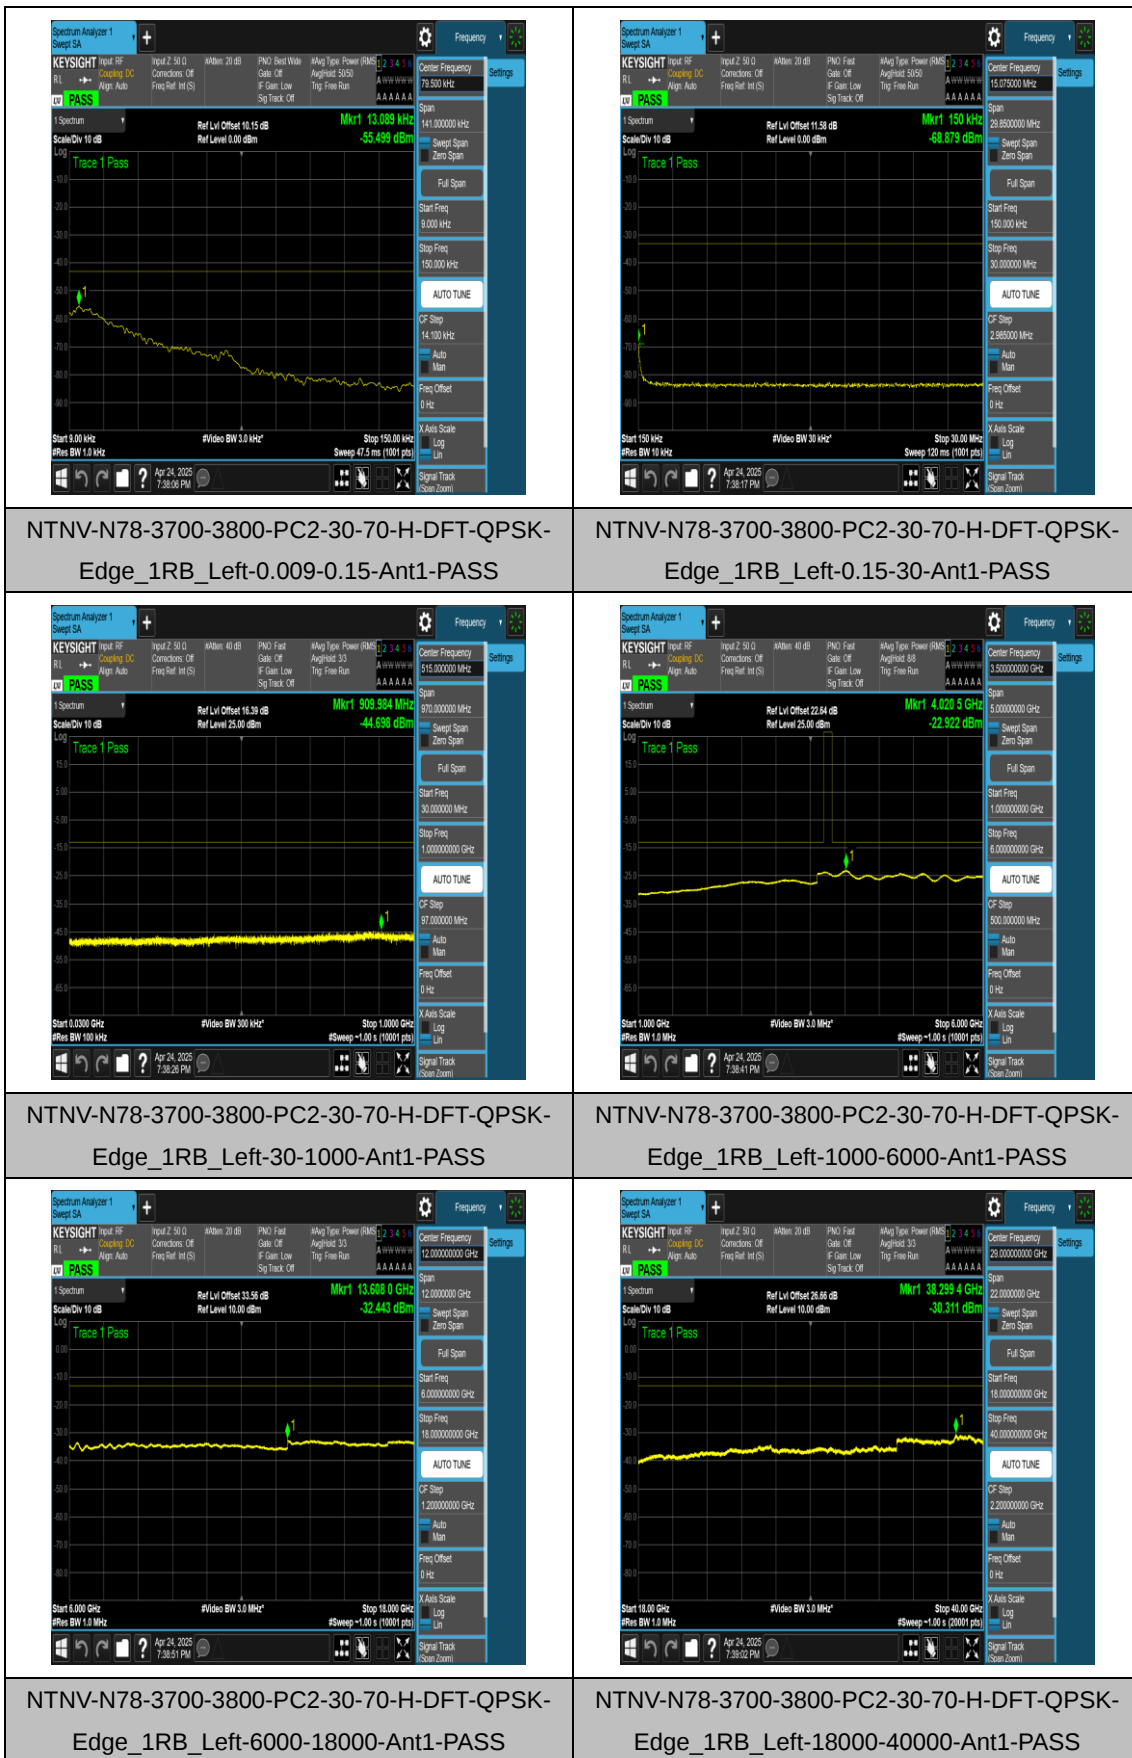

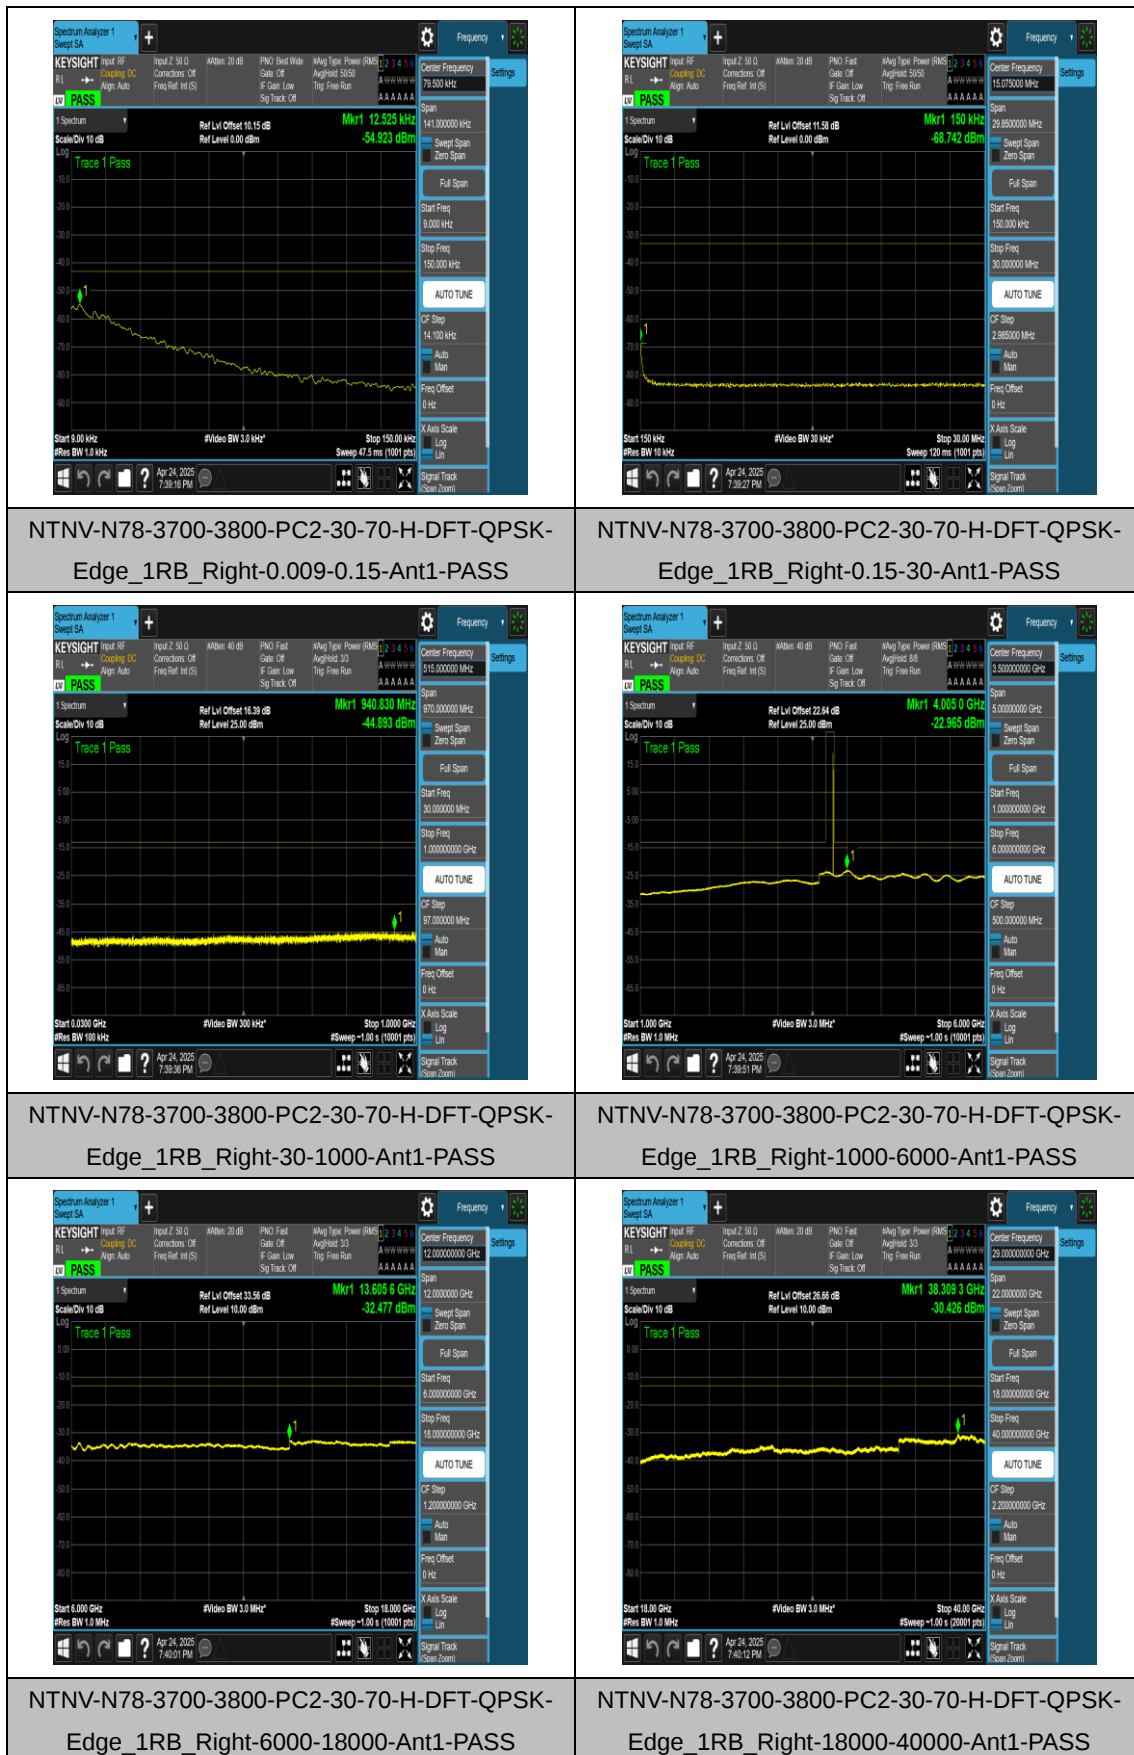

NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-0.009-0.15-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-0.15-30-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-30-1000-Ant1-PASS






NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-70-H-DFT-QPSK-
Edge_1RB_Right-18000-40000-Ant1-PASS

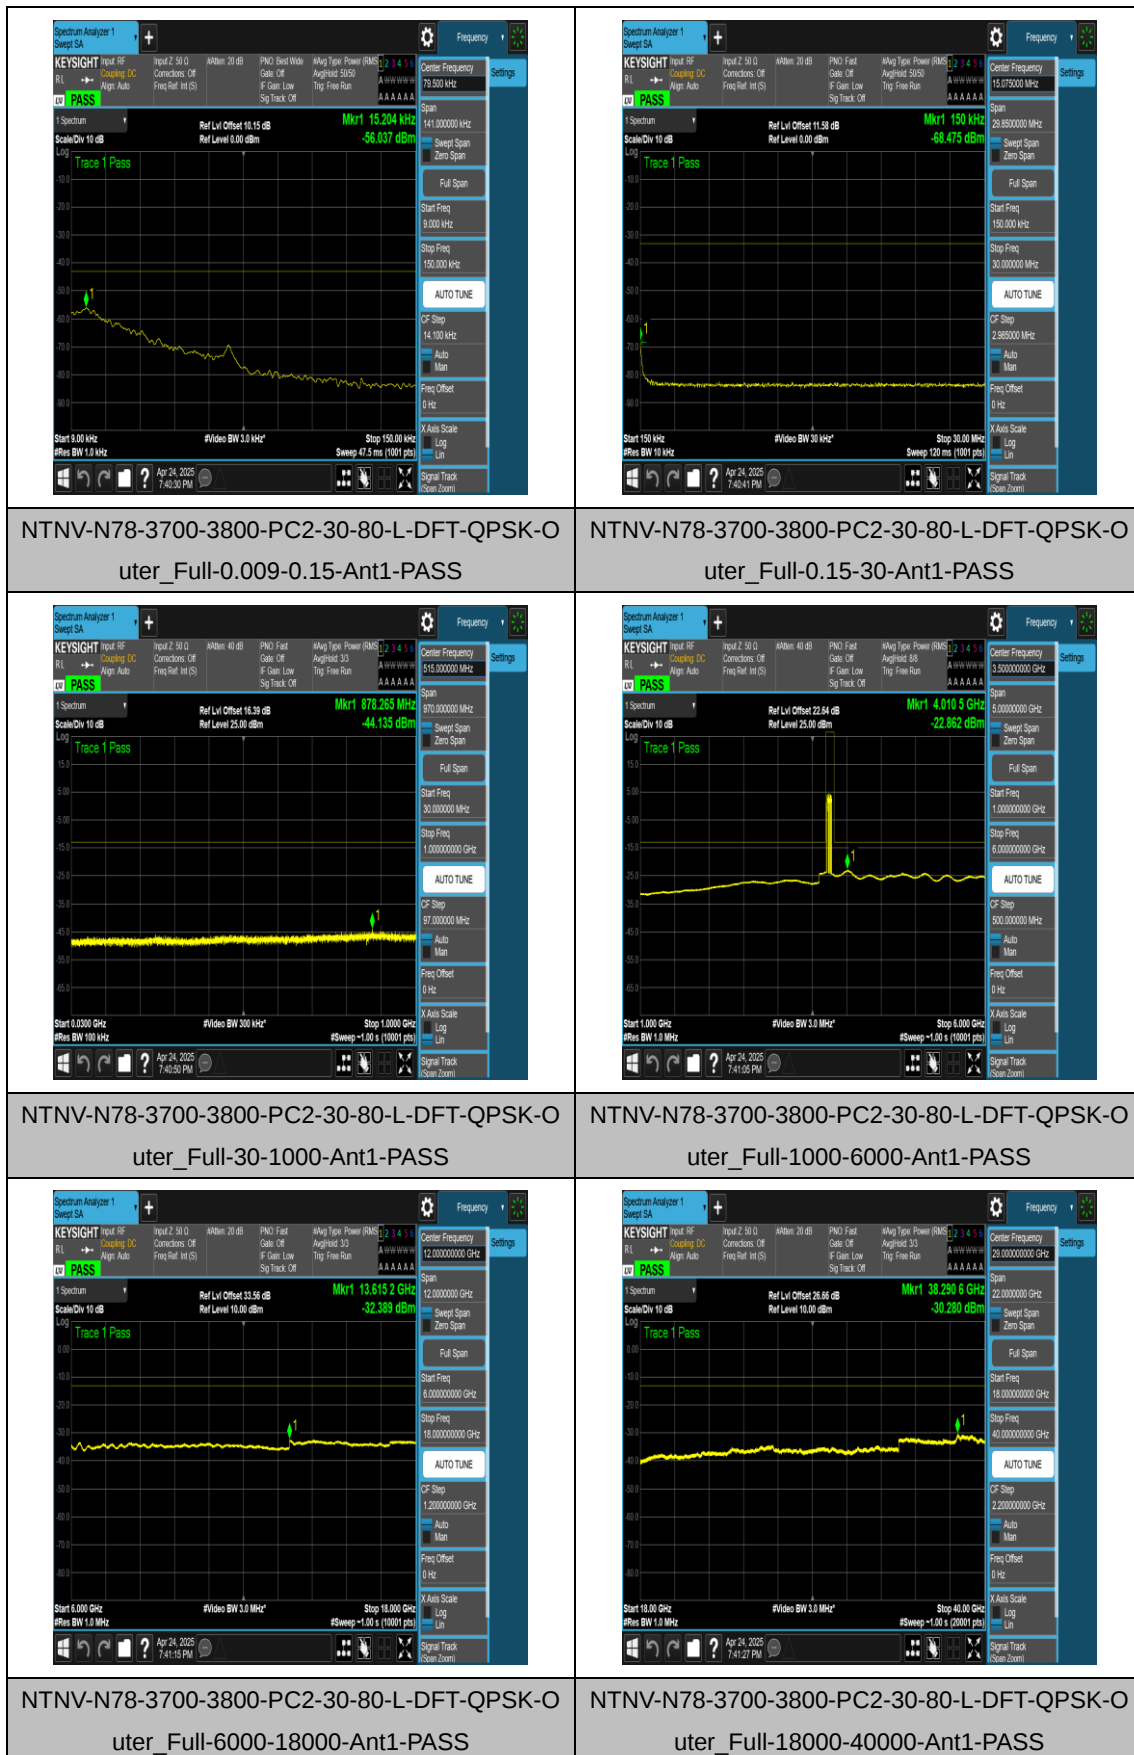

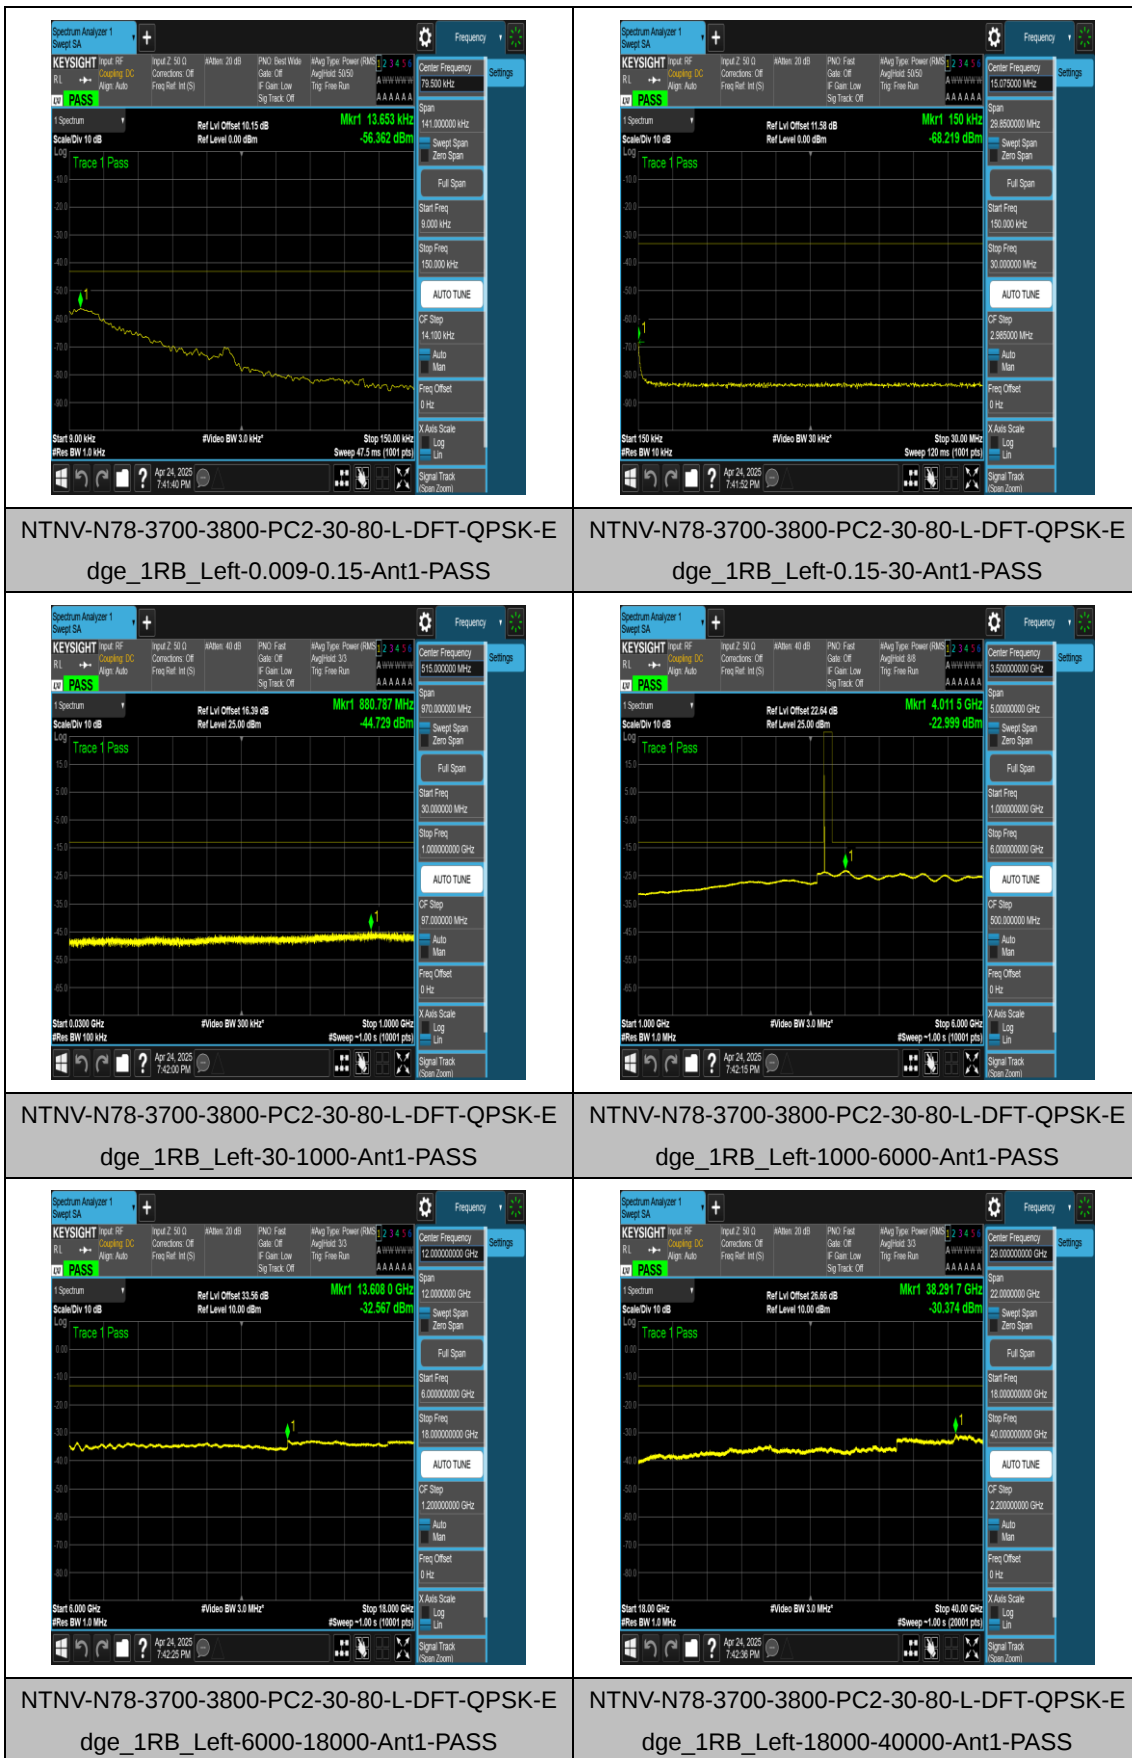

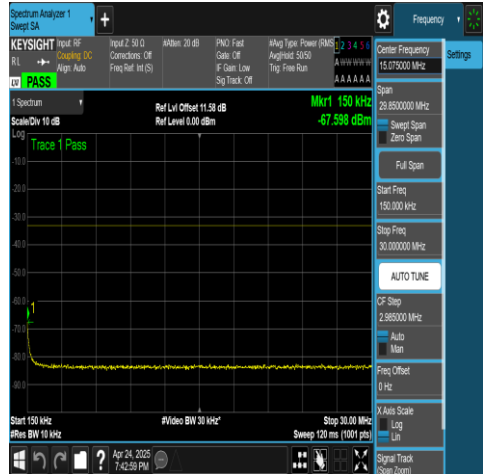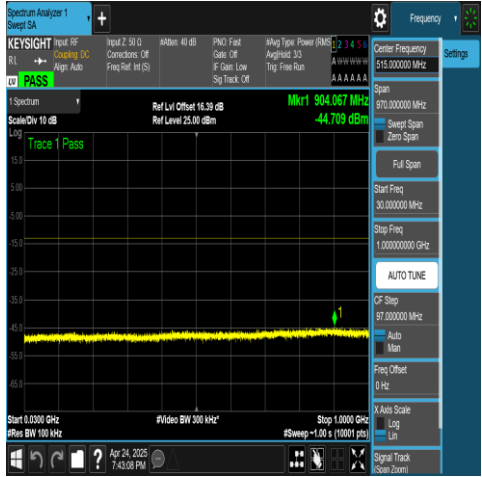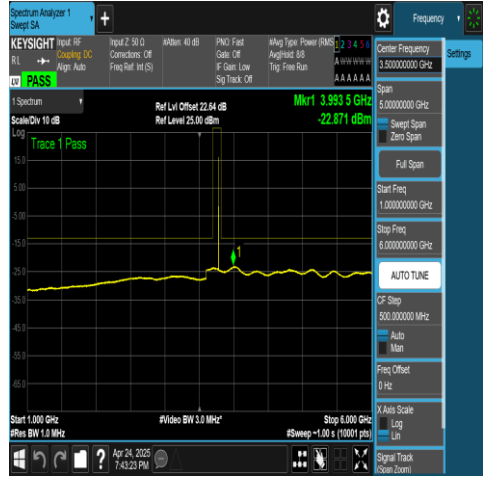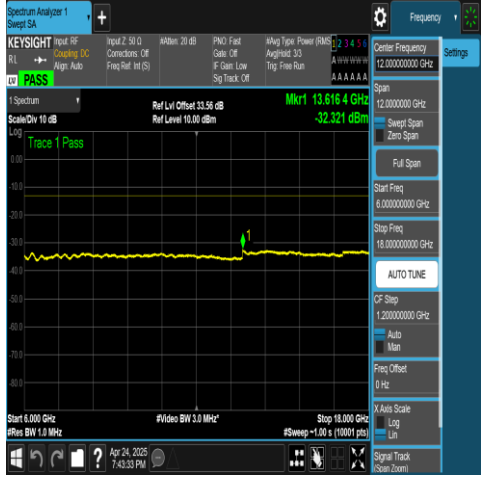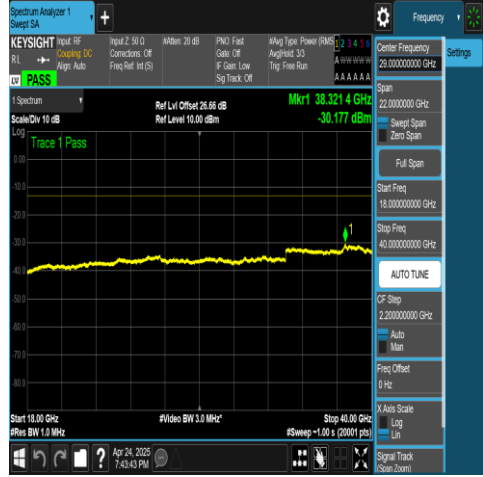	
NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-0.009-0.15-Ant1-PASS	NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-0.15-30-Ant1-PASS
	
NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-30-1000-Ant1-PASS	NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-1000-6000-Ant1-PASS
	
NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-6000-18000-Ant1-PASS	NTN-N78-3700-3800-PC2-30-80-L-DFT-QPSK-E dge_1RB_Right-18000-40000-Ant1-PASS

