






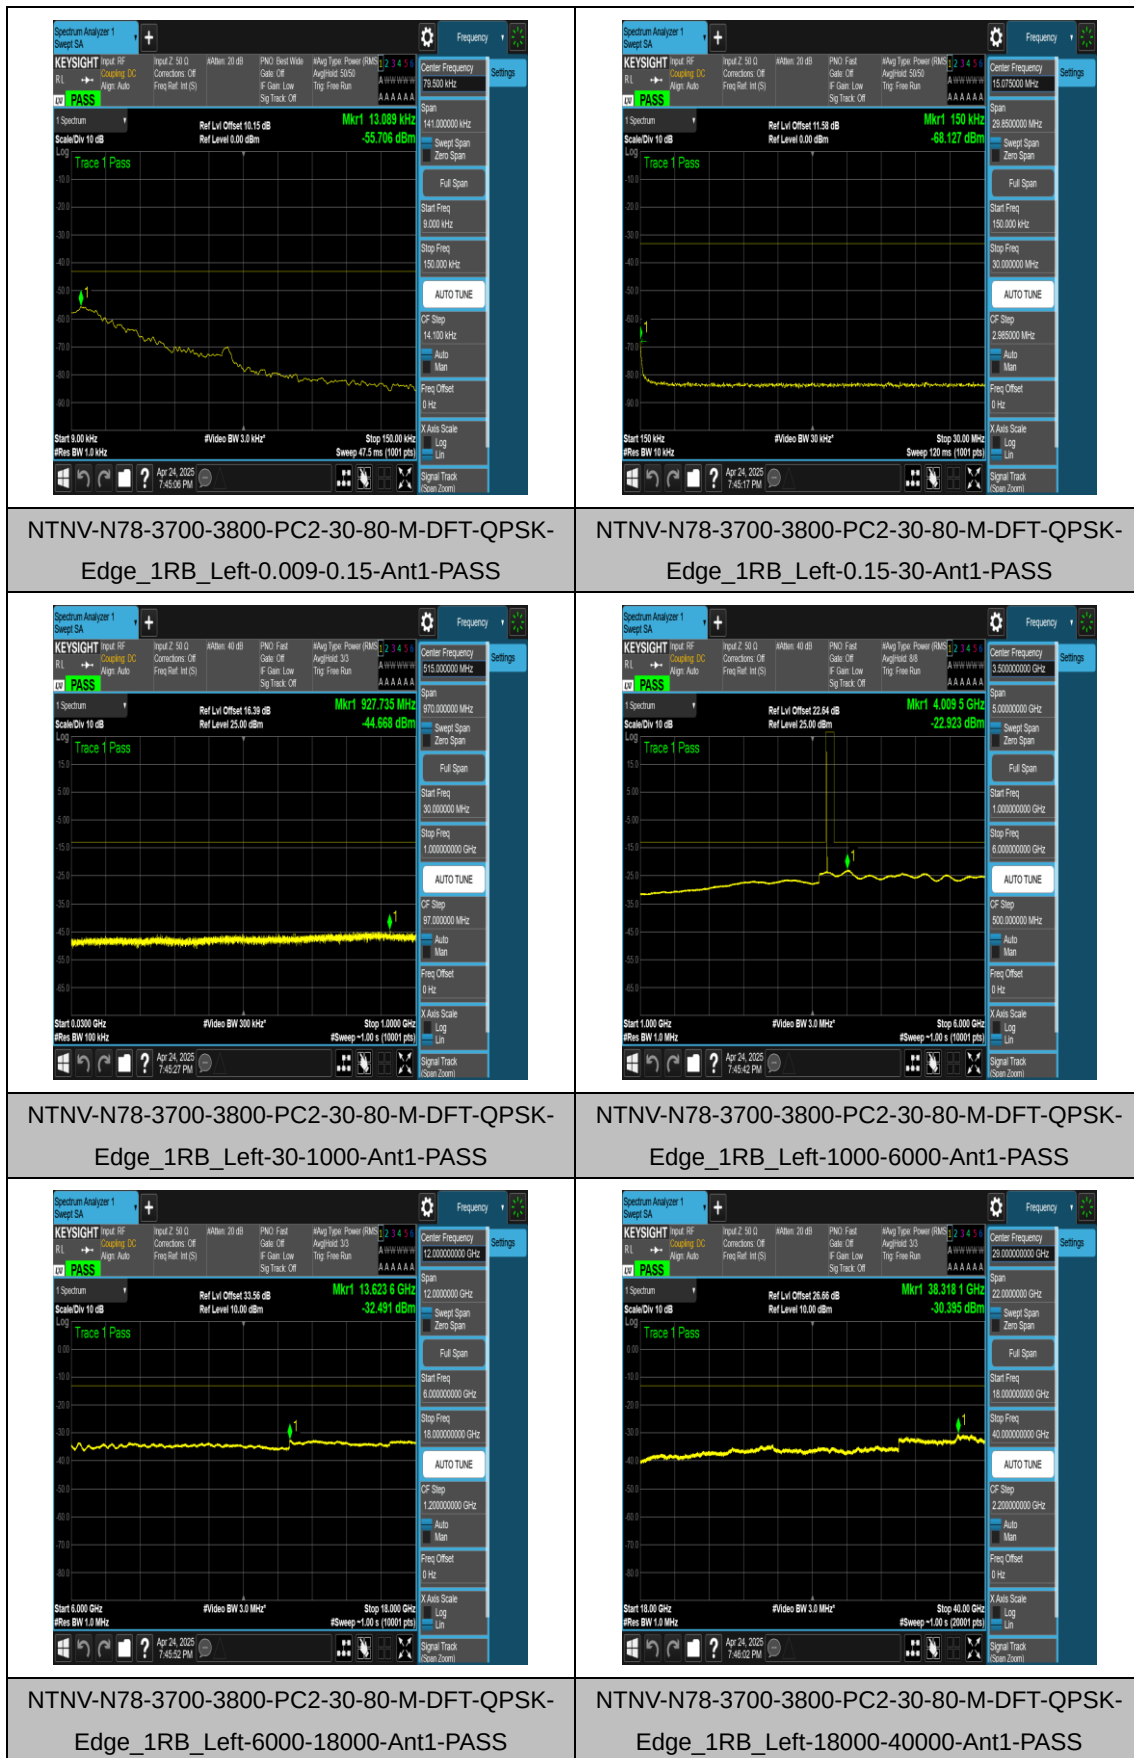

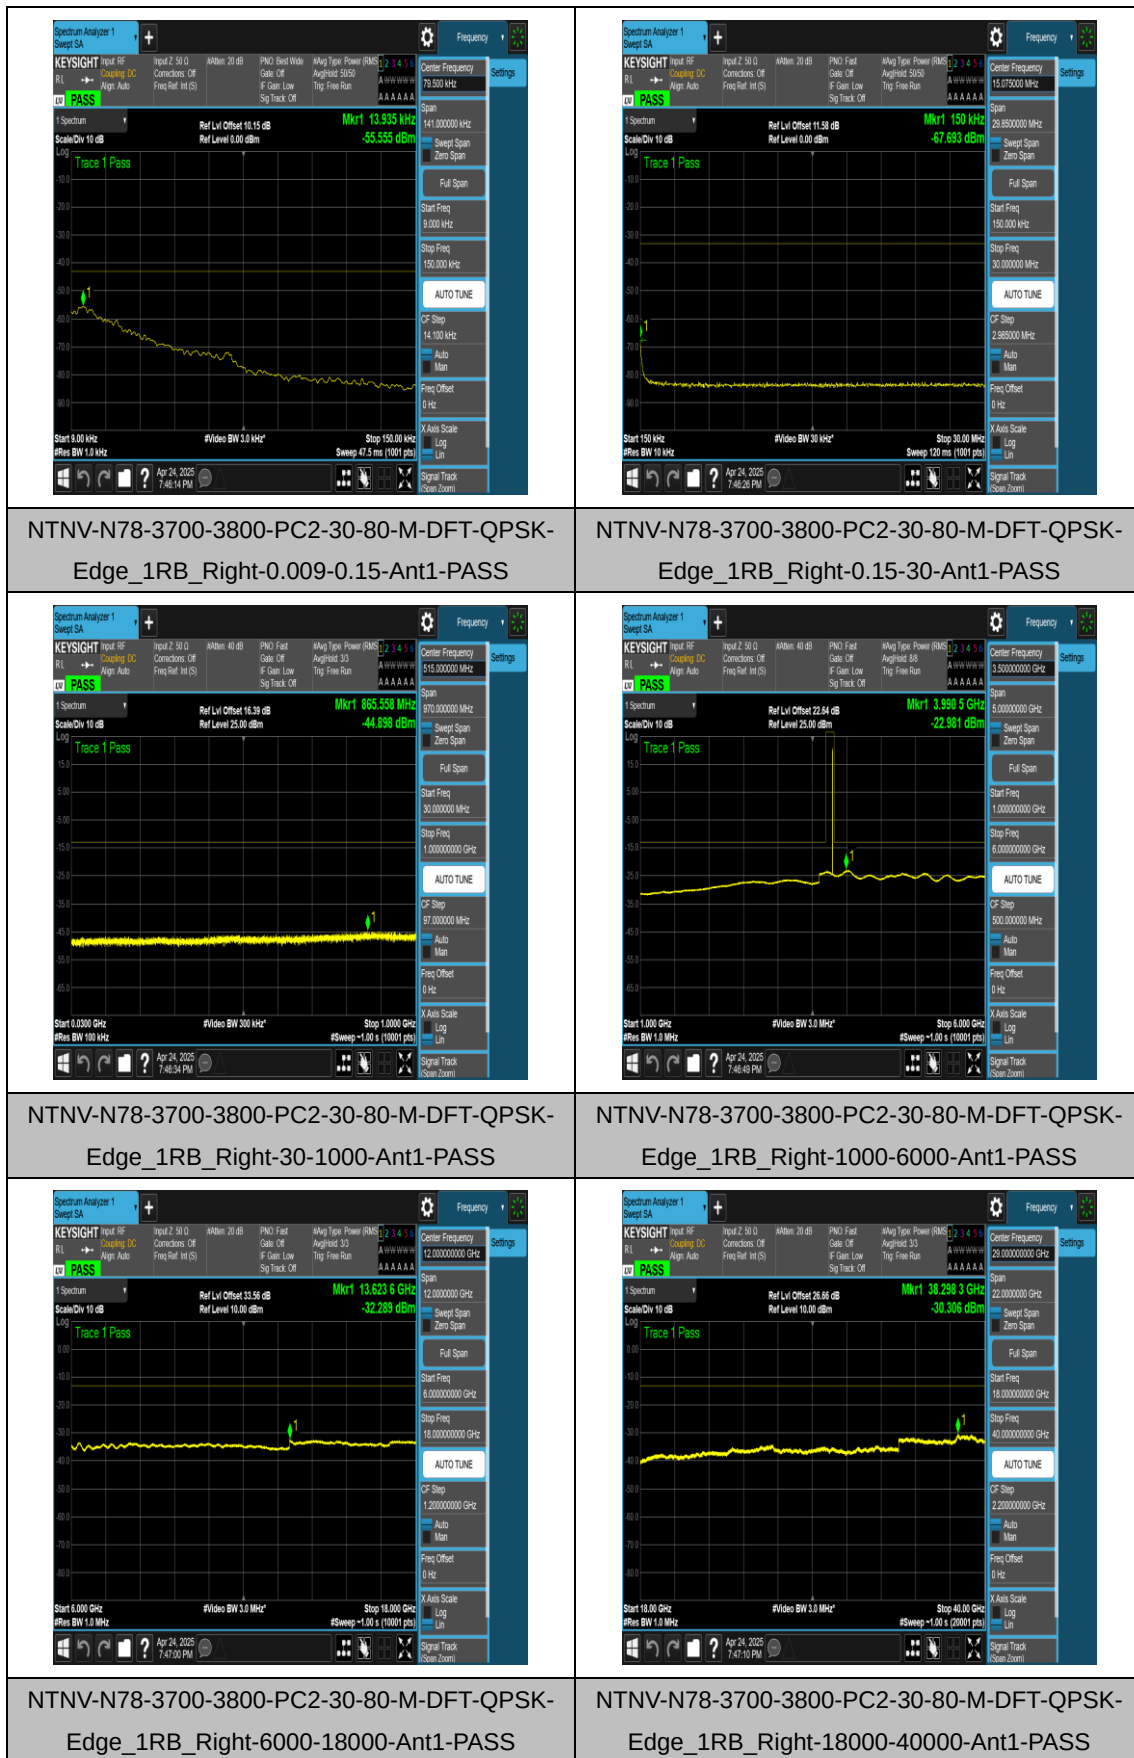

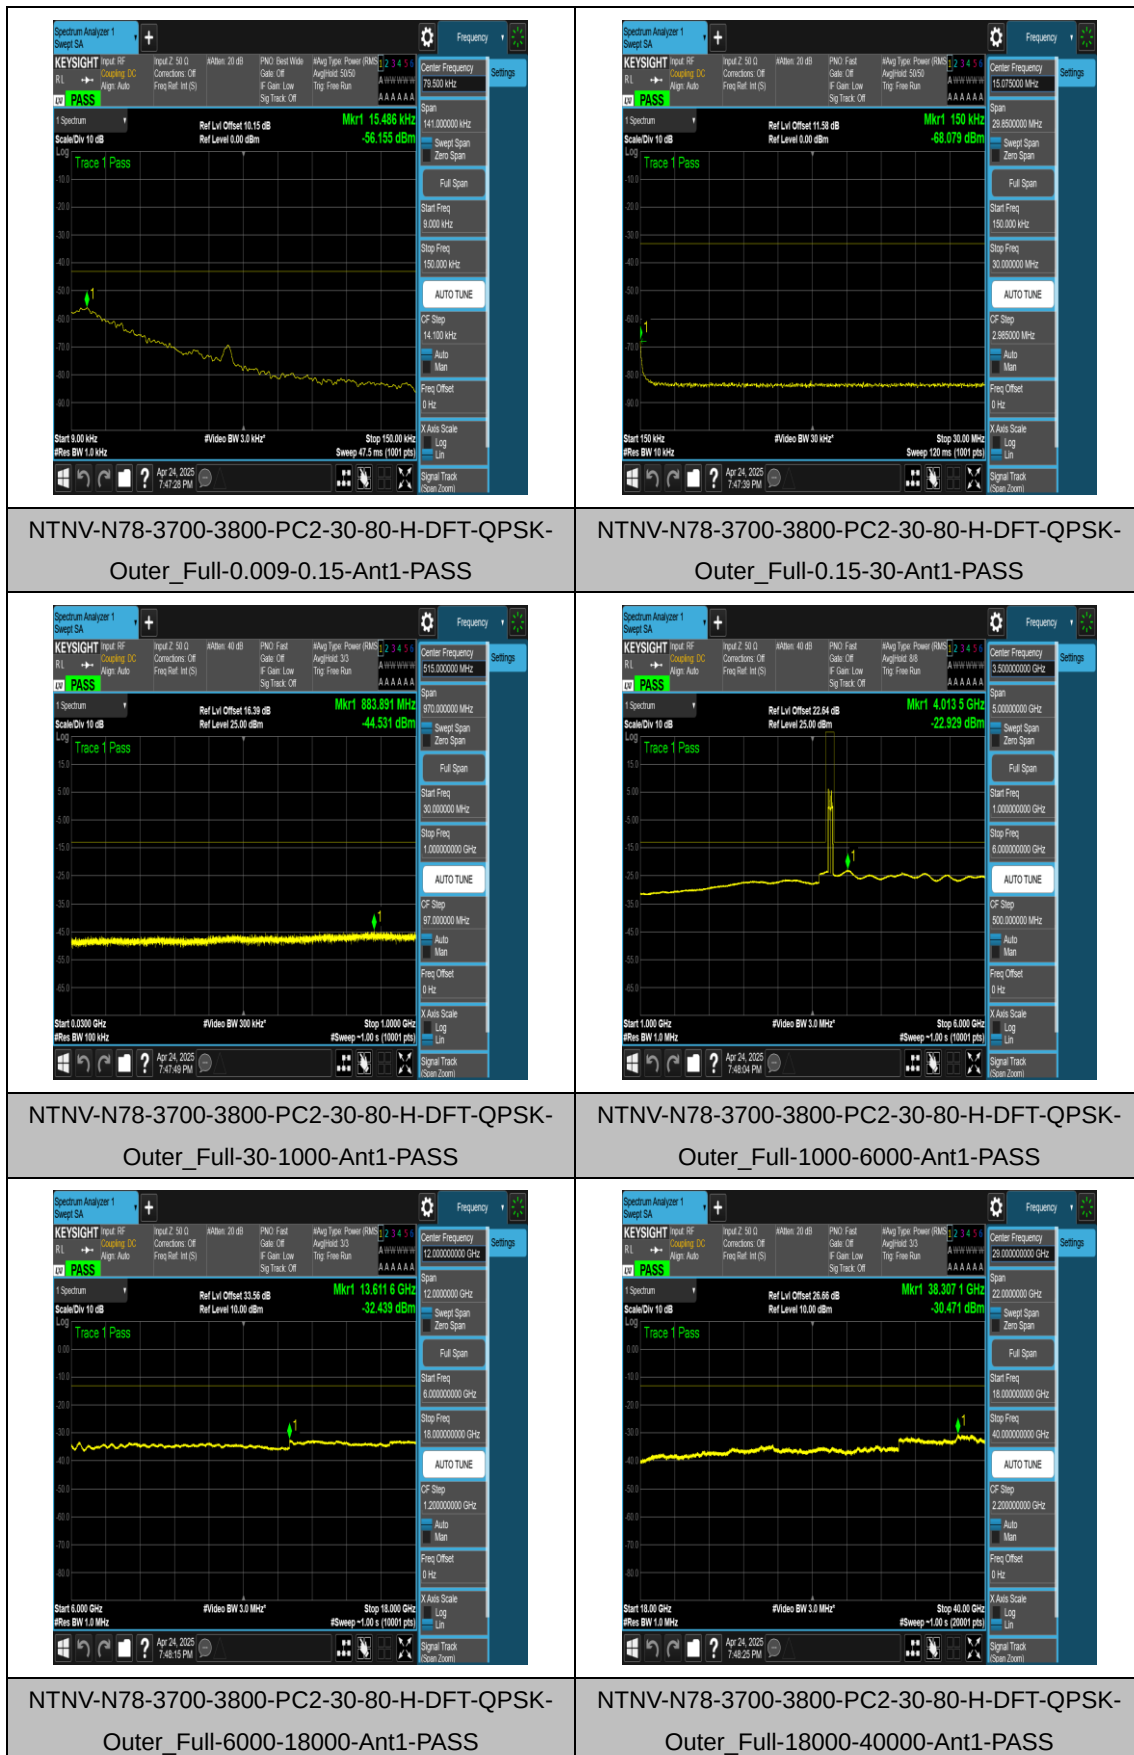

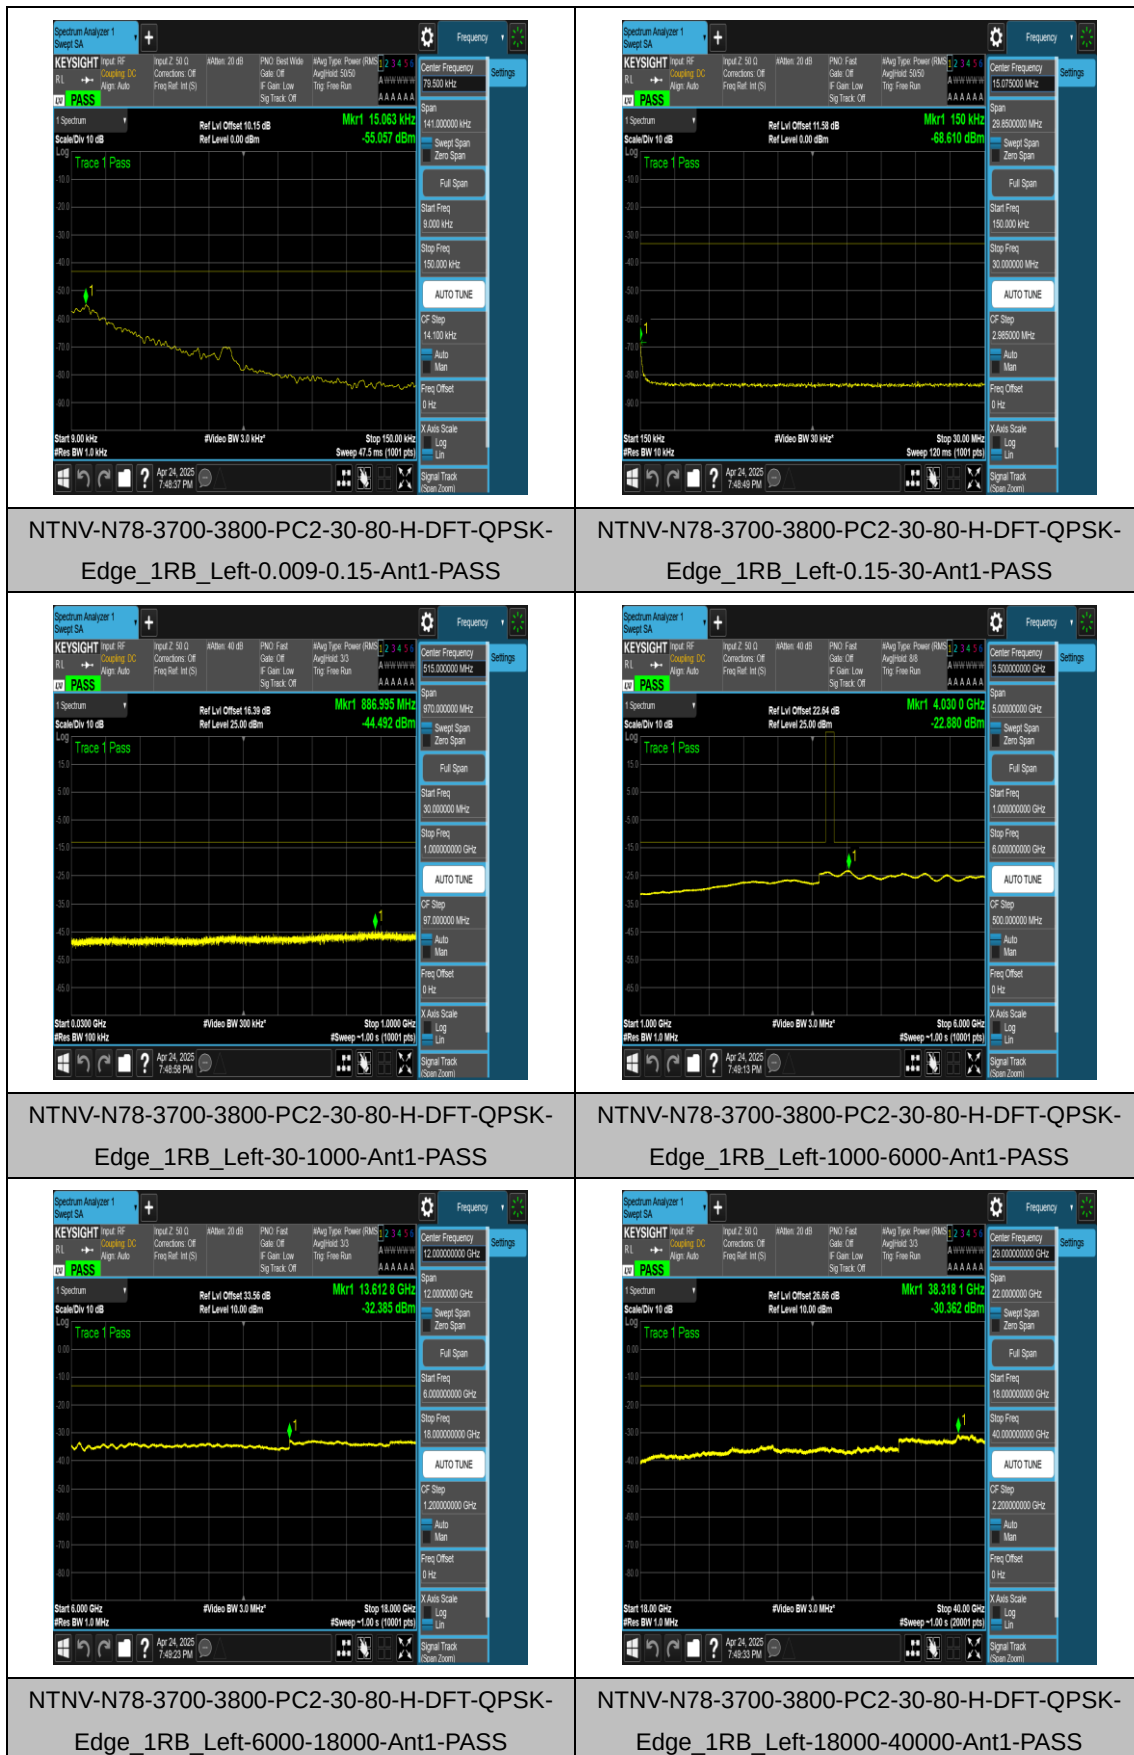

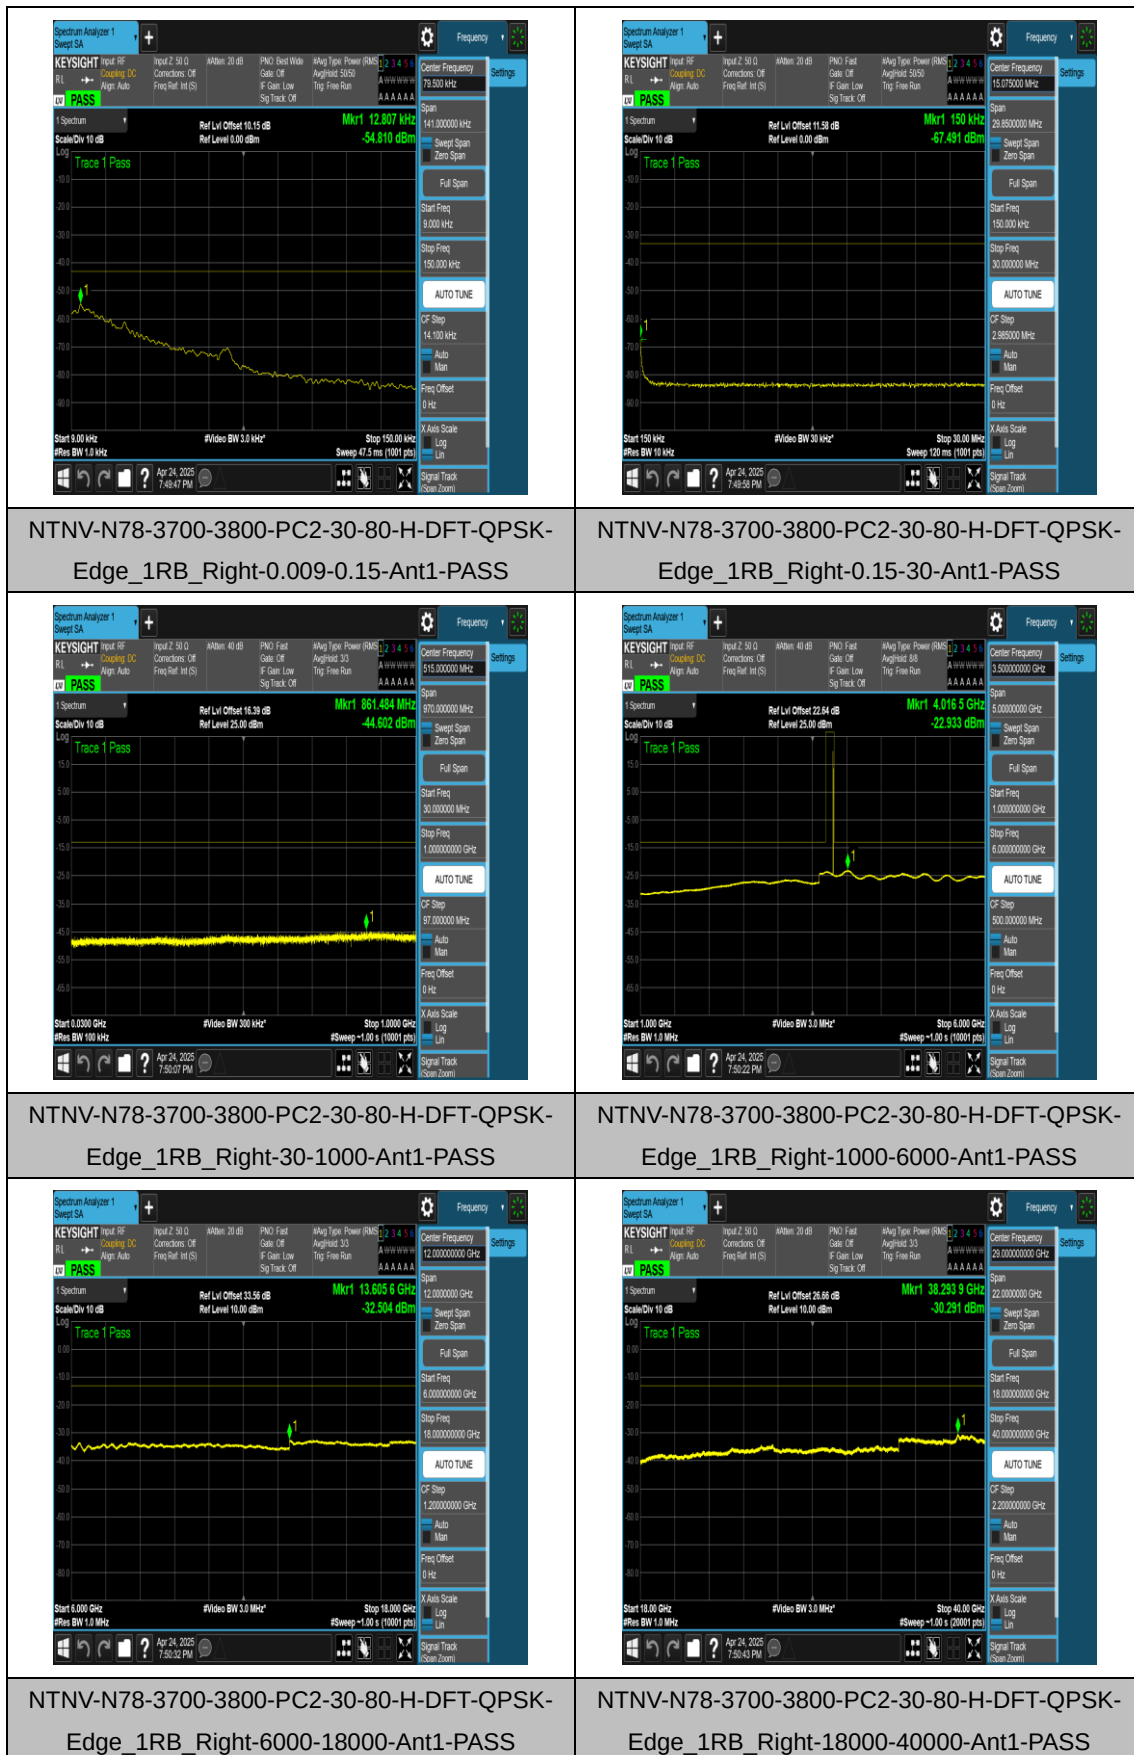

NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-0.009-0.15-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-0.15-30-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-30-1000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-1000-6000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-6000-18000-Ant1-PASS


NTNV-N78-3700-3800-PC2-30-80-H-DFT-QPSK-
Edge_1RB_Right-18000-40000-Ant1-PASS

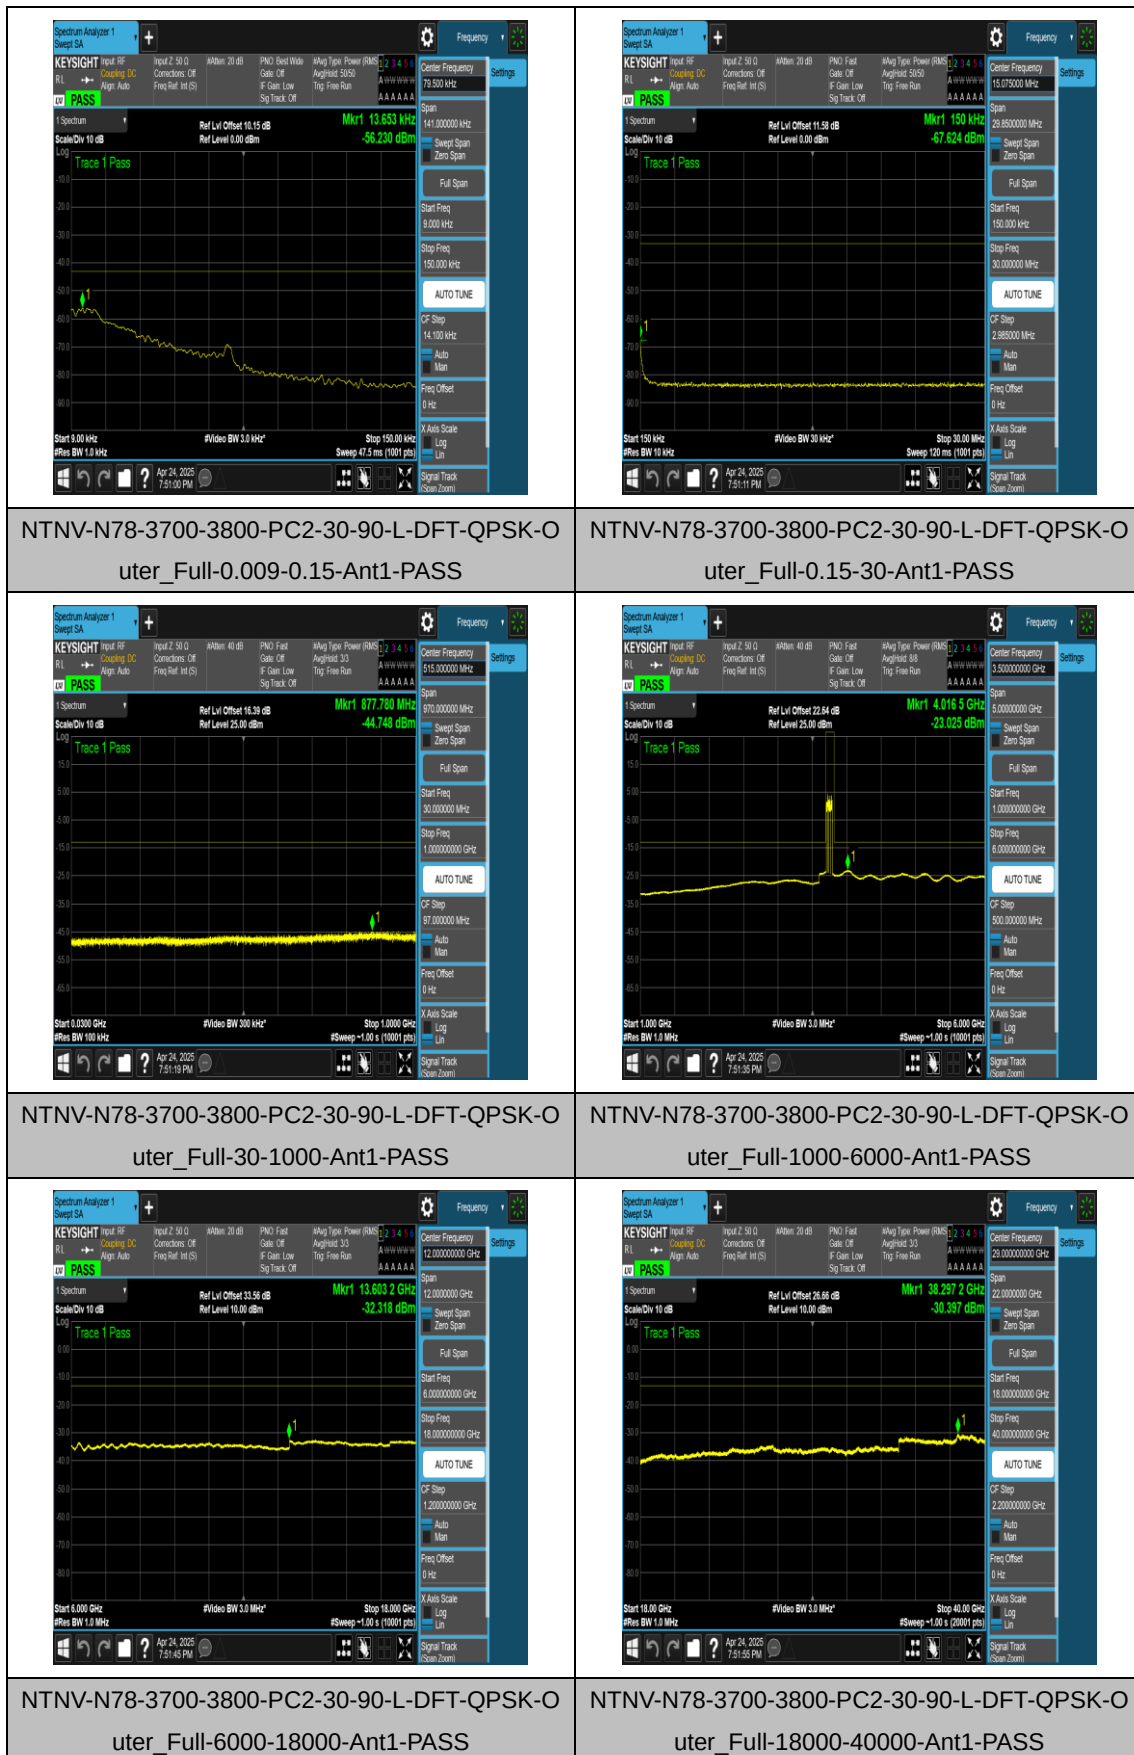


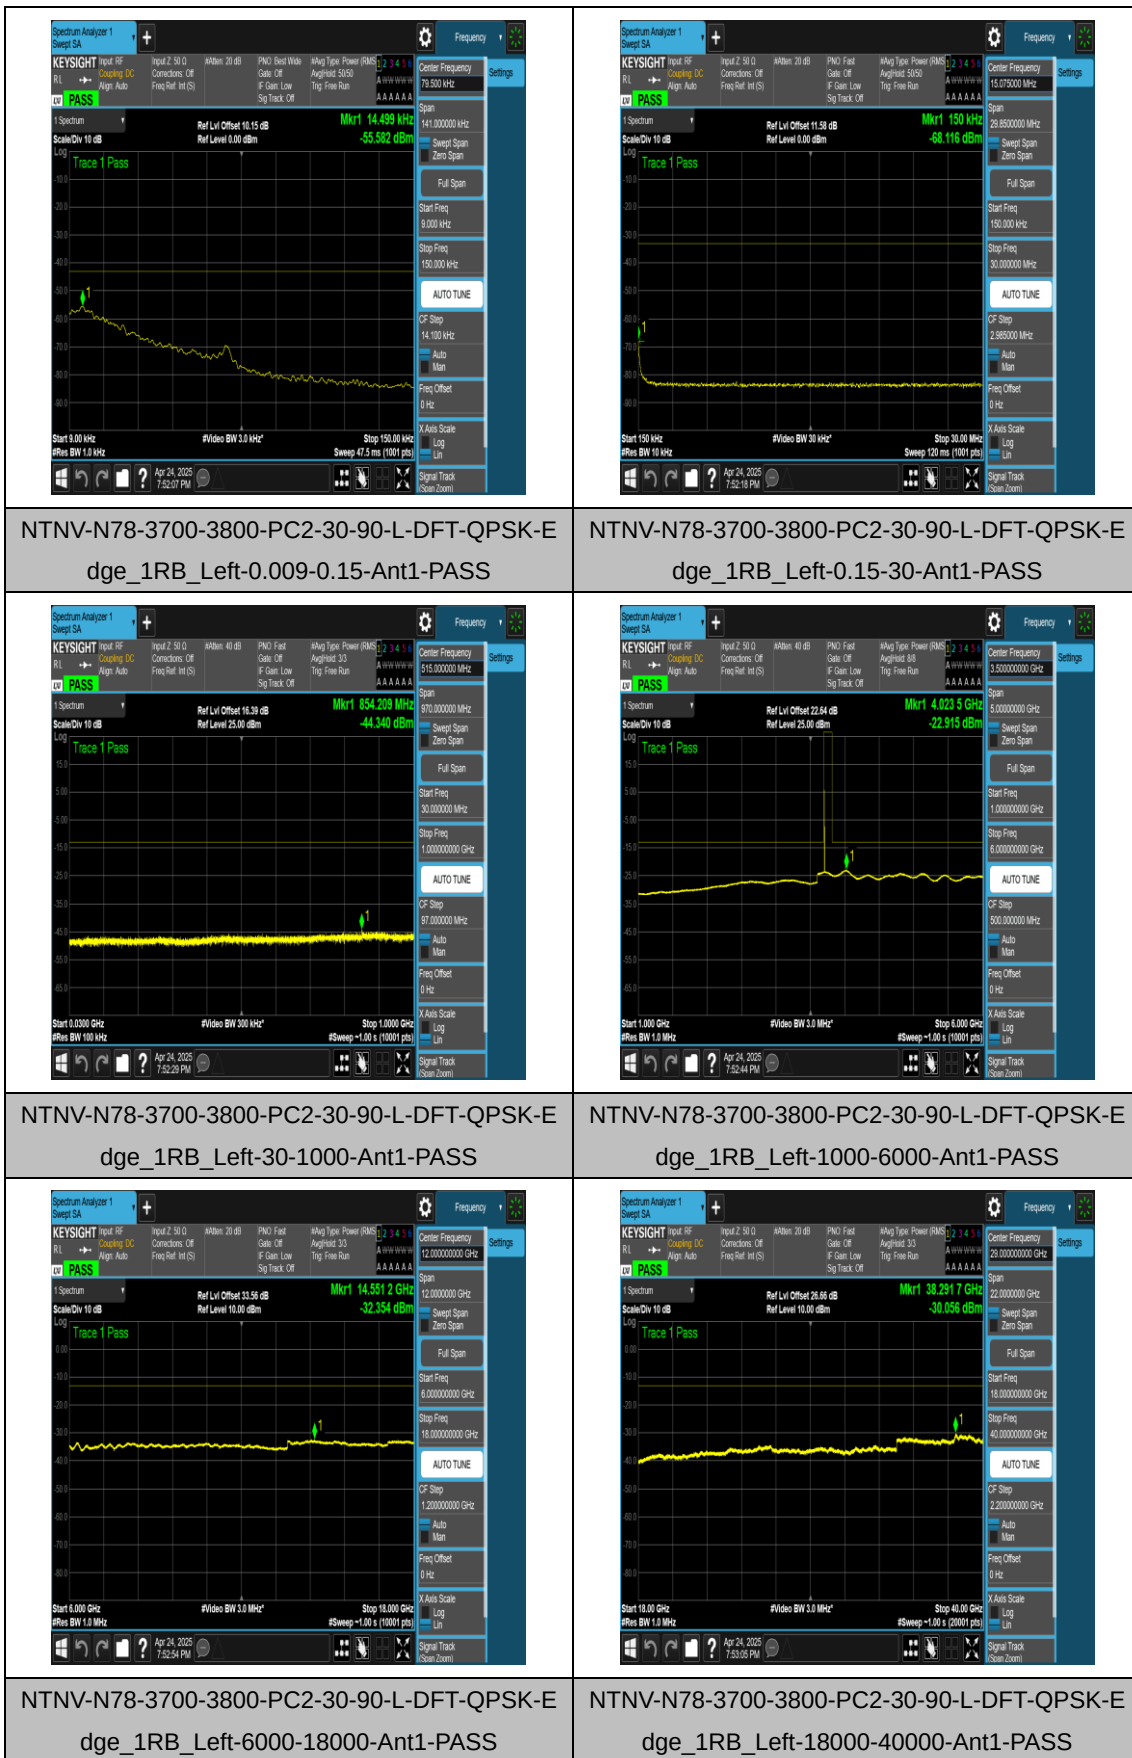


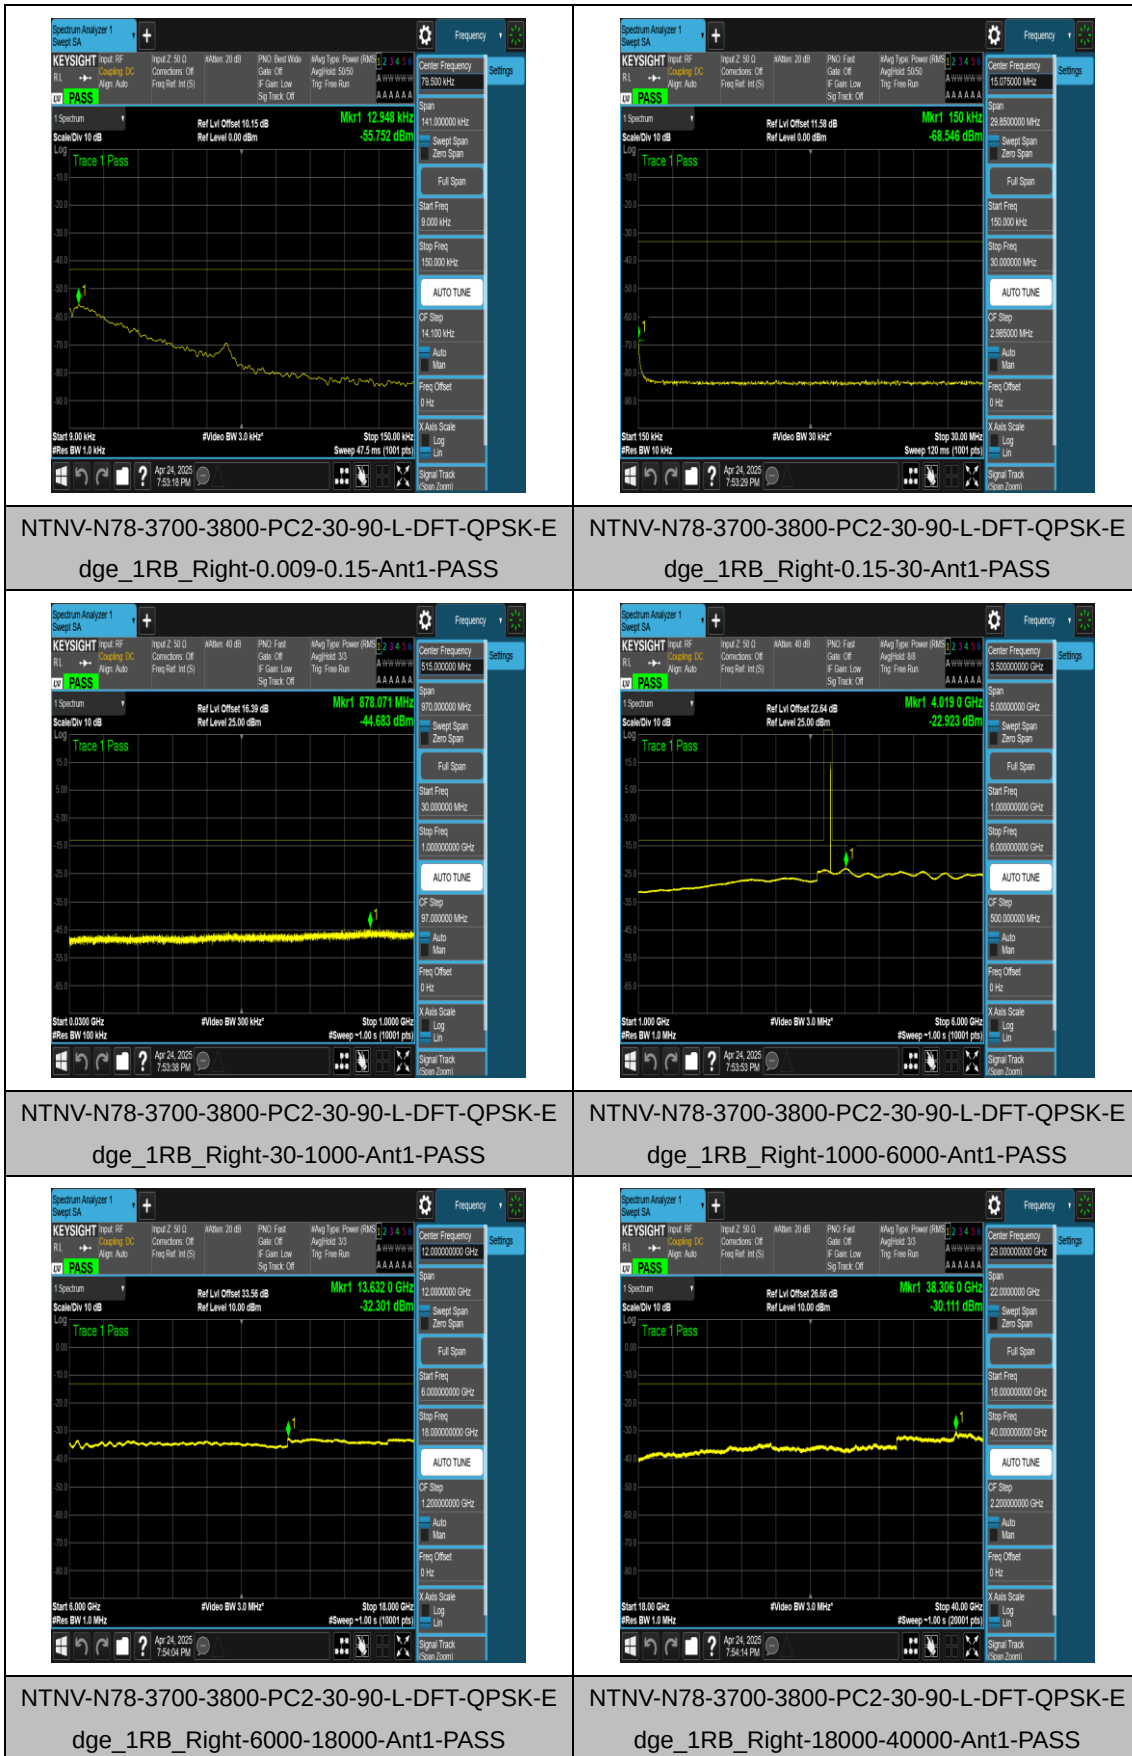


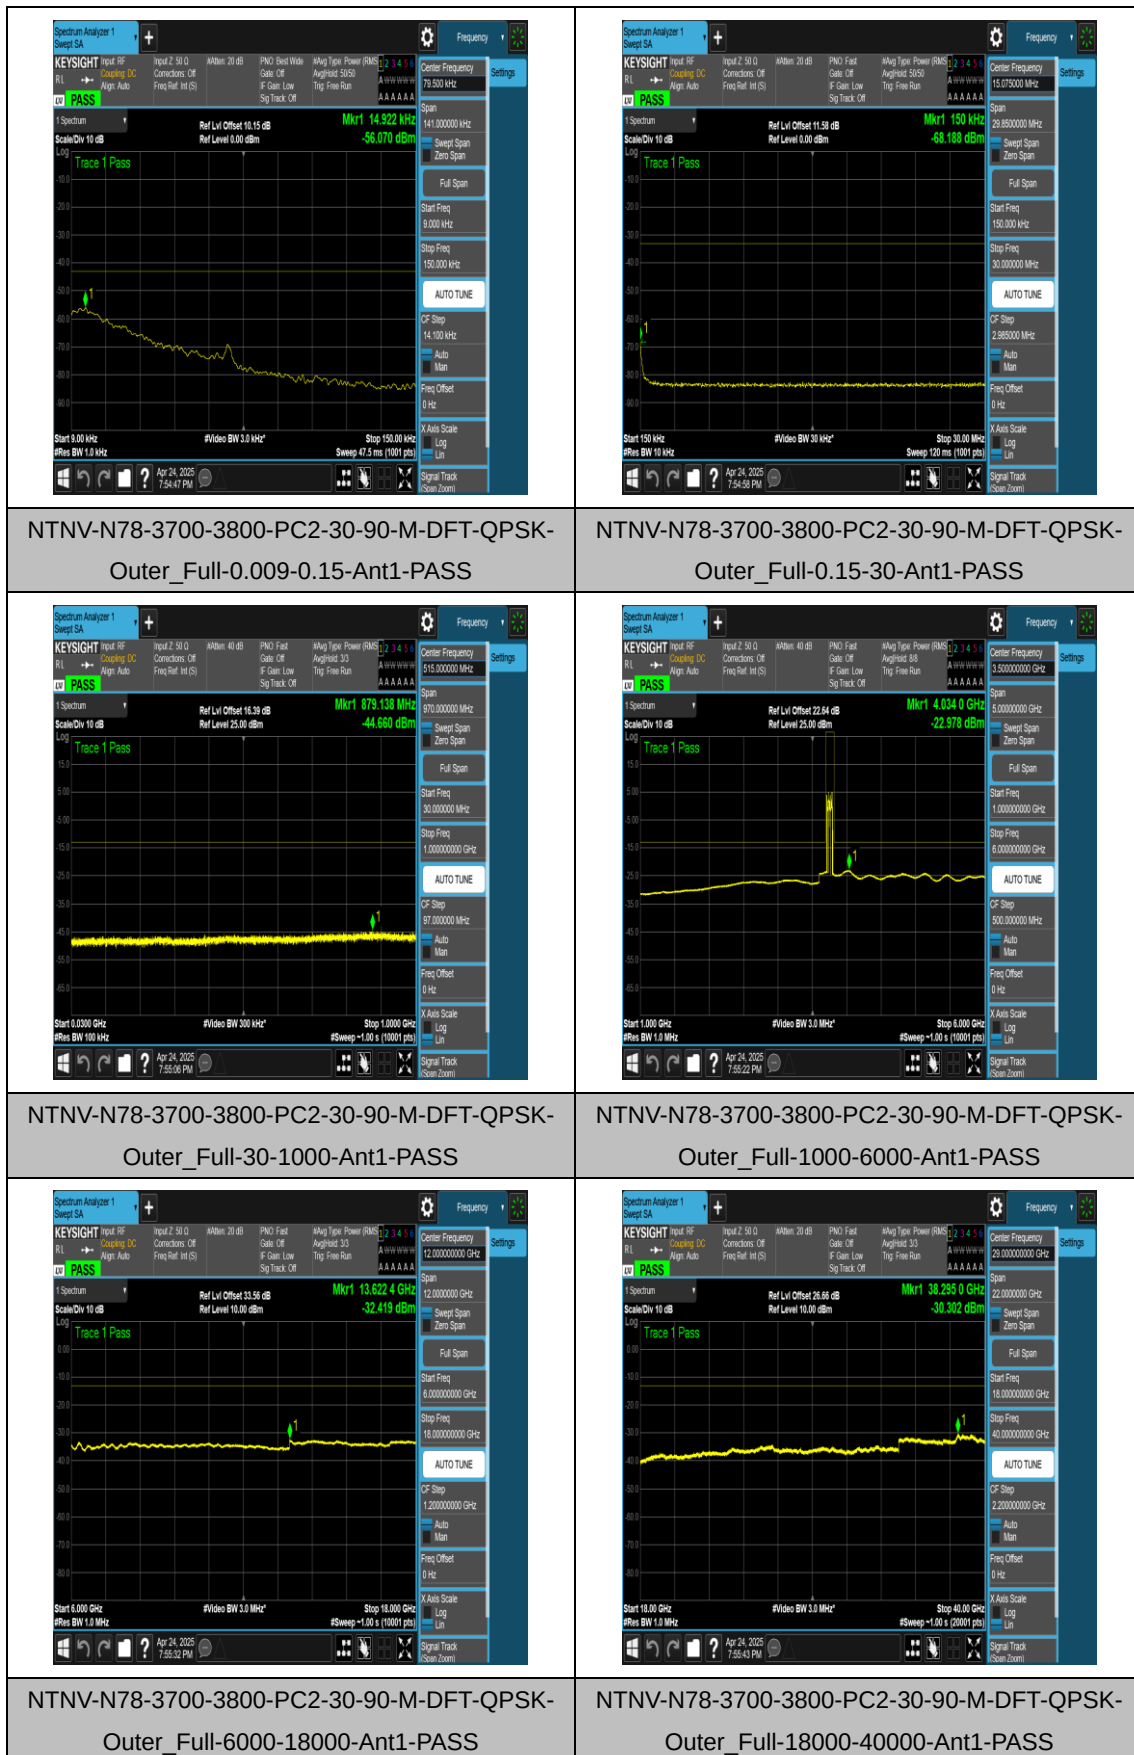

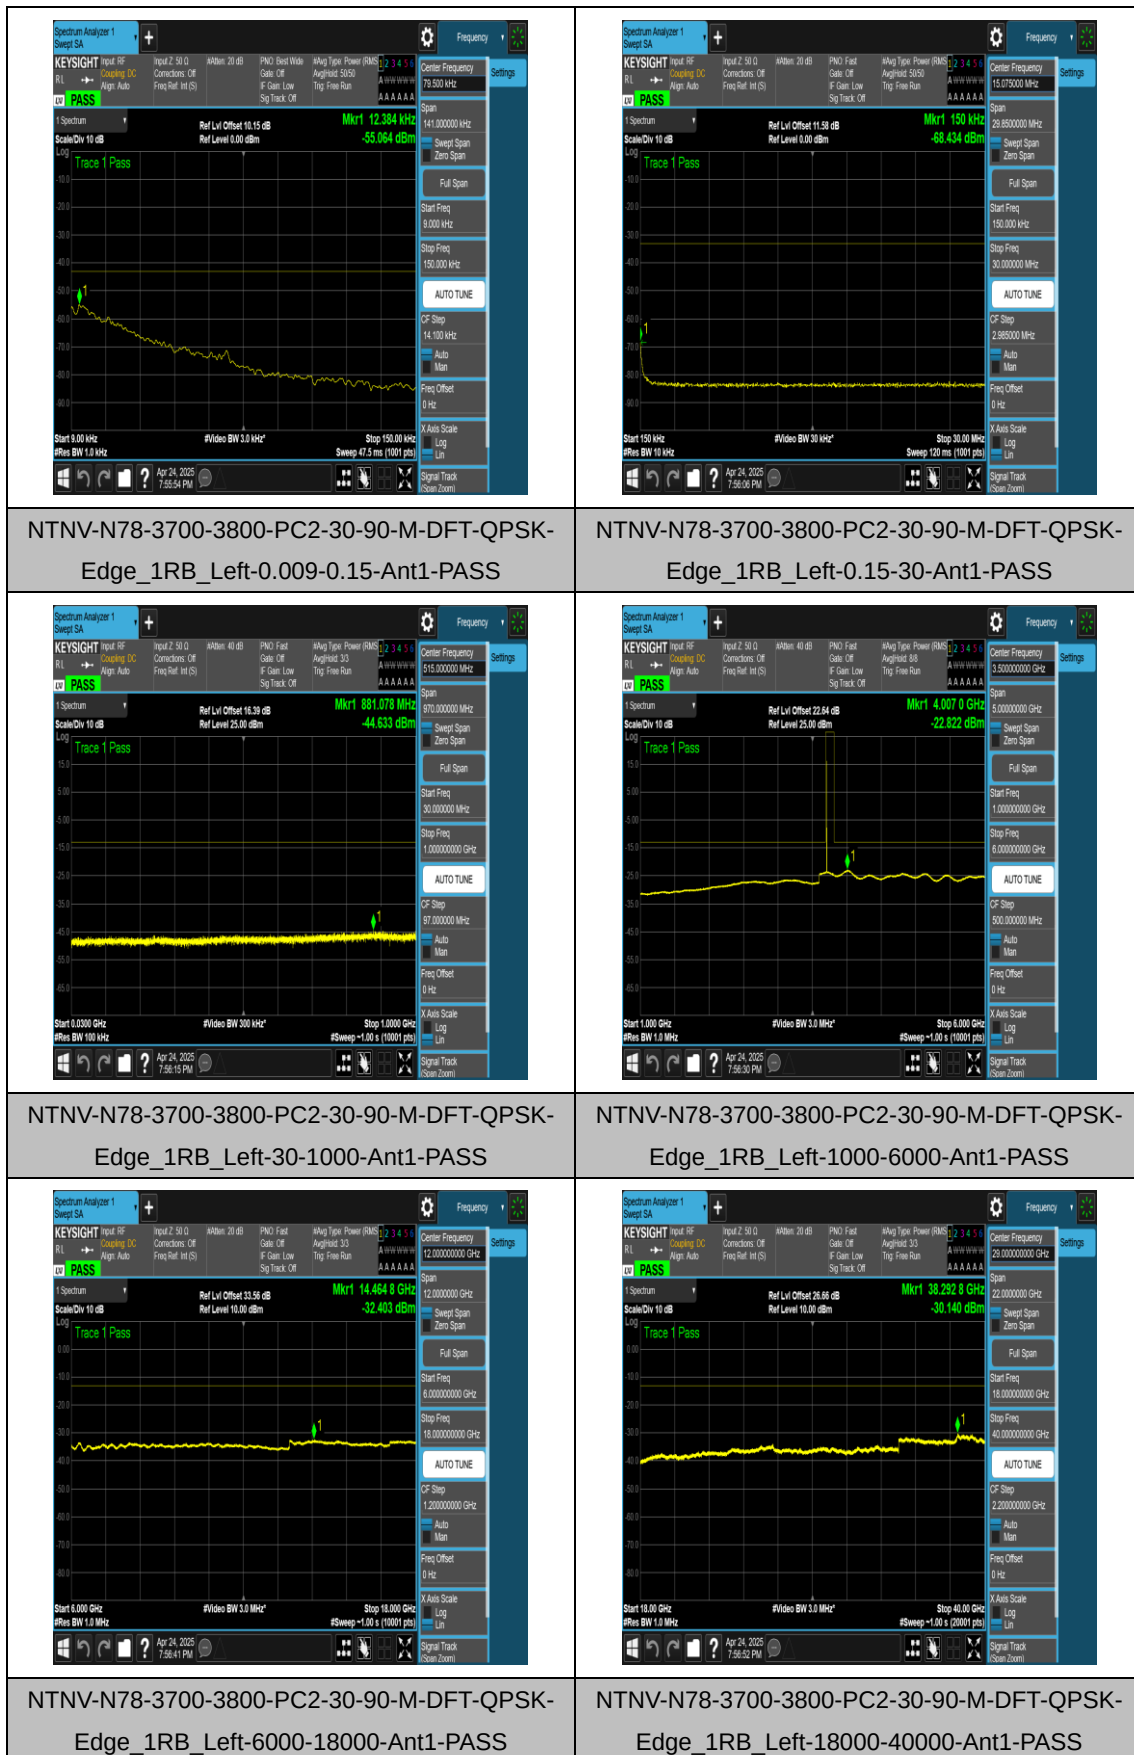

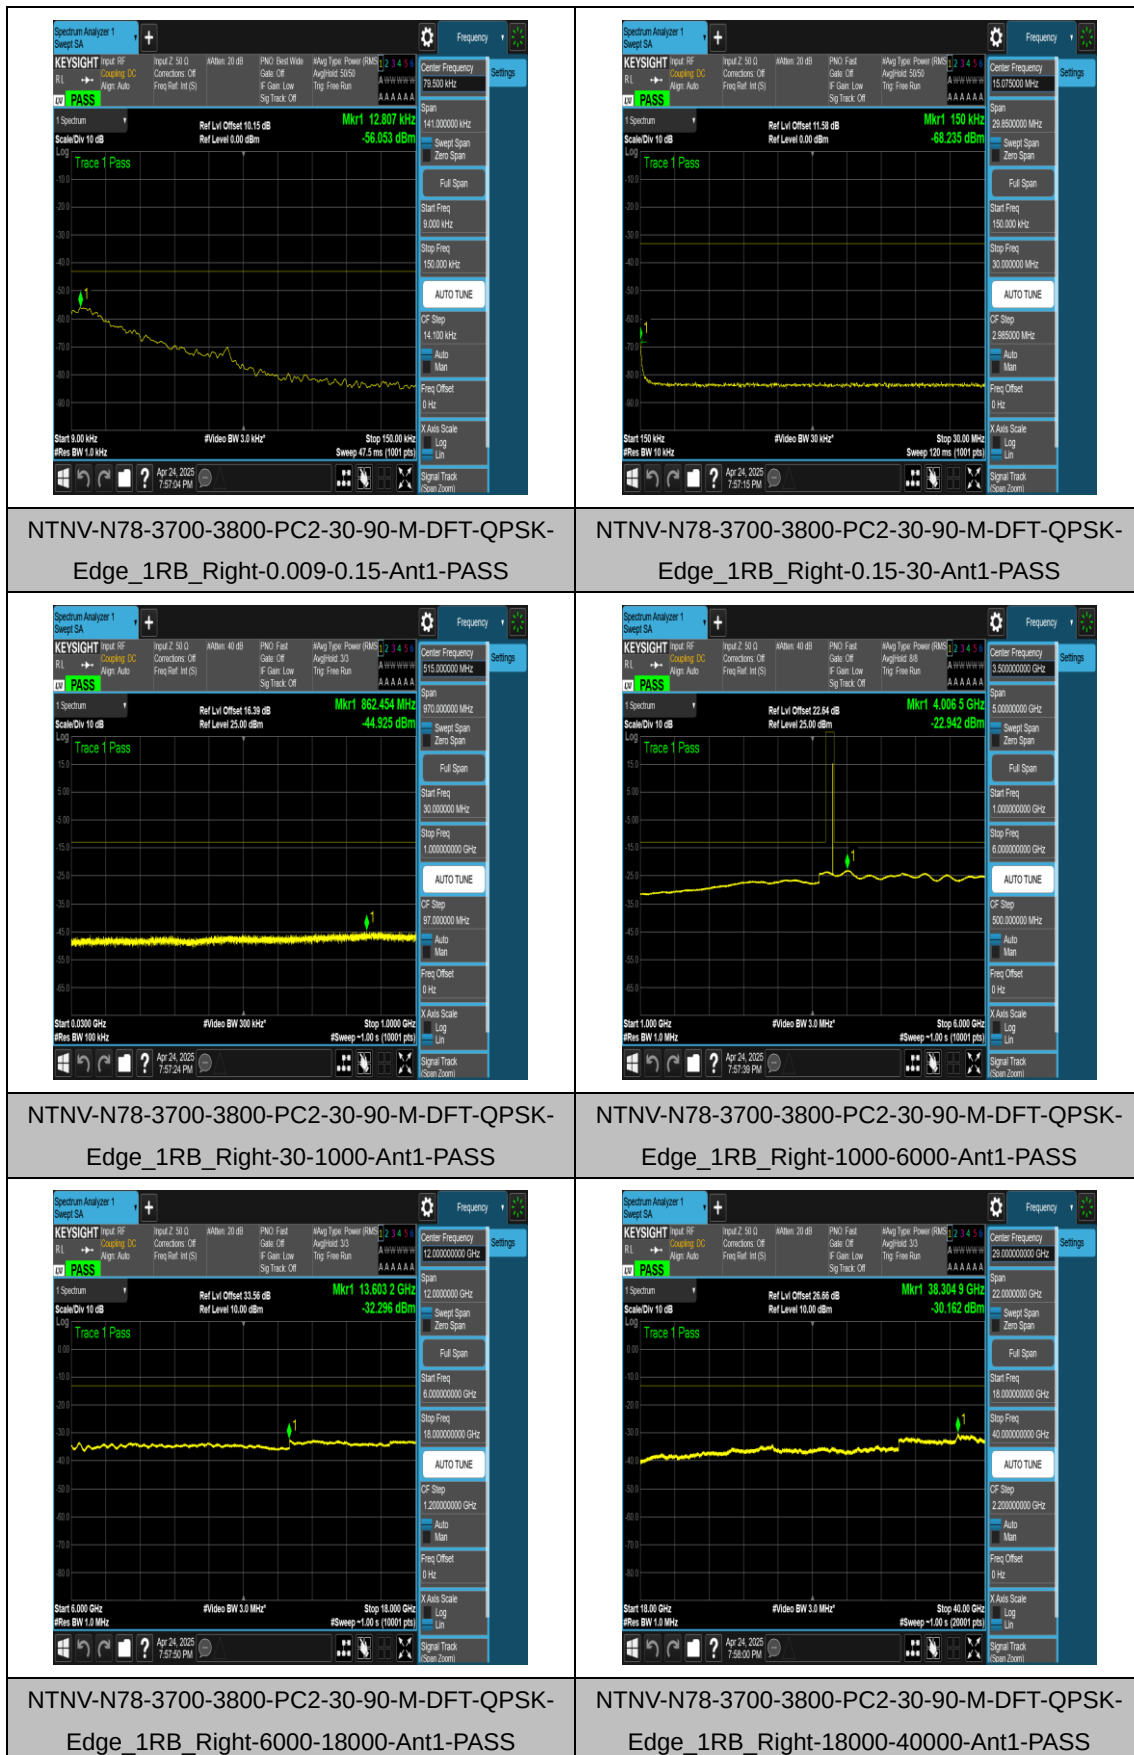

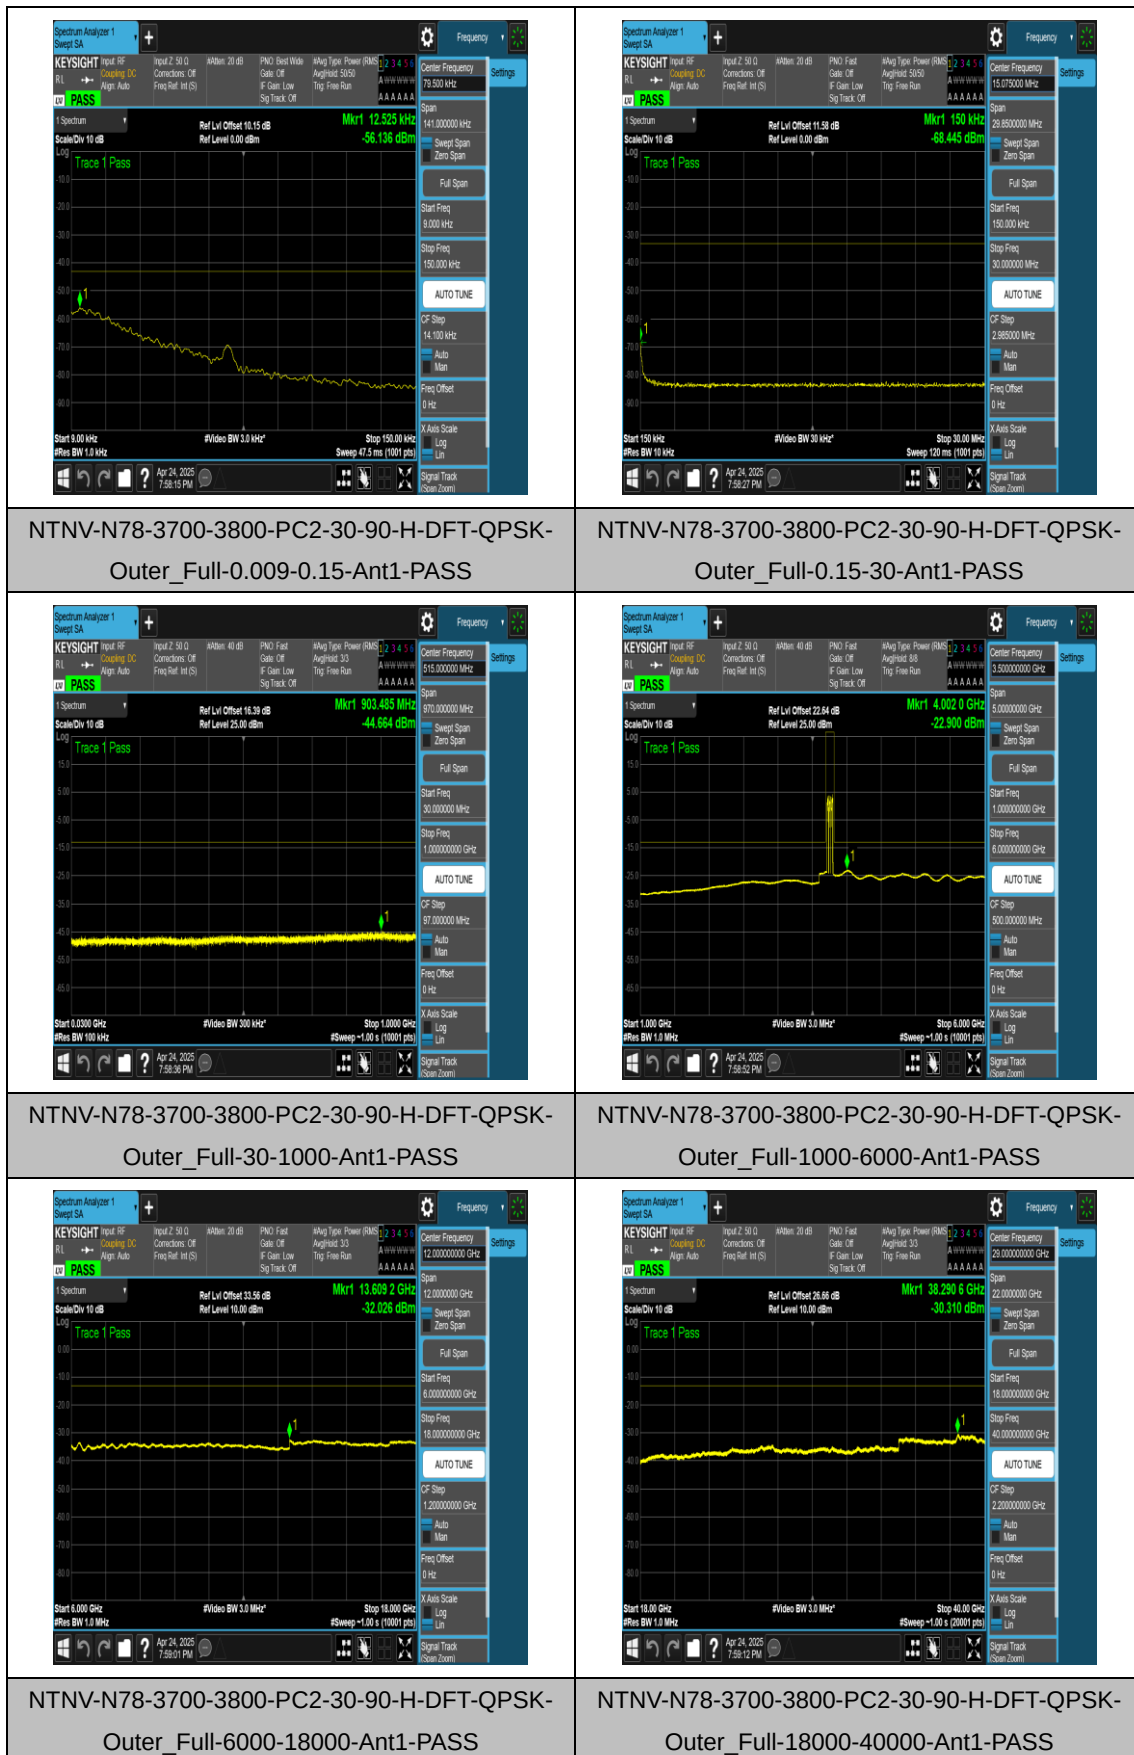

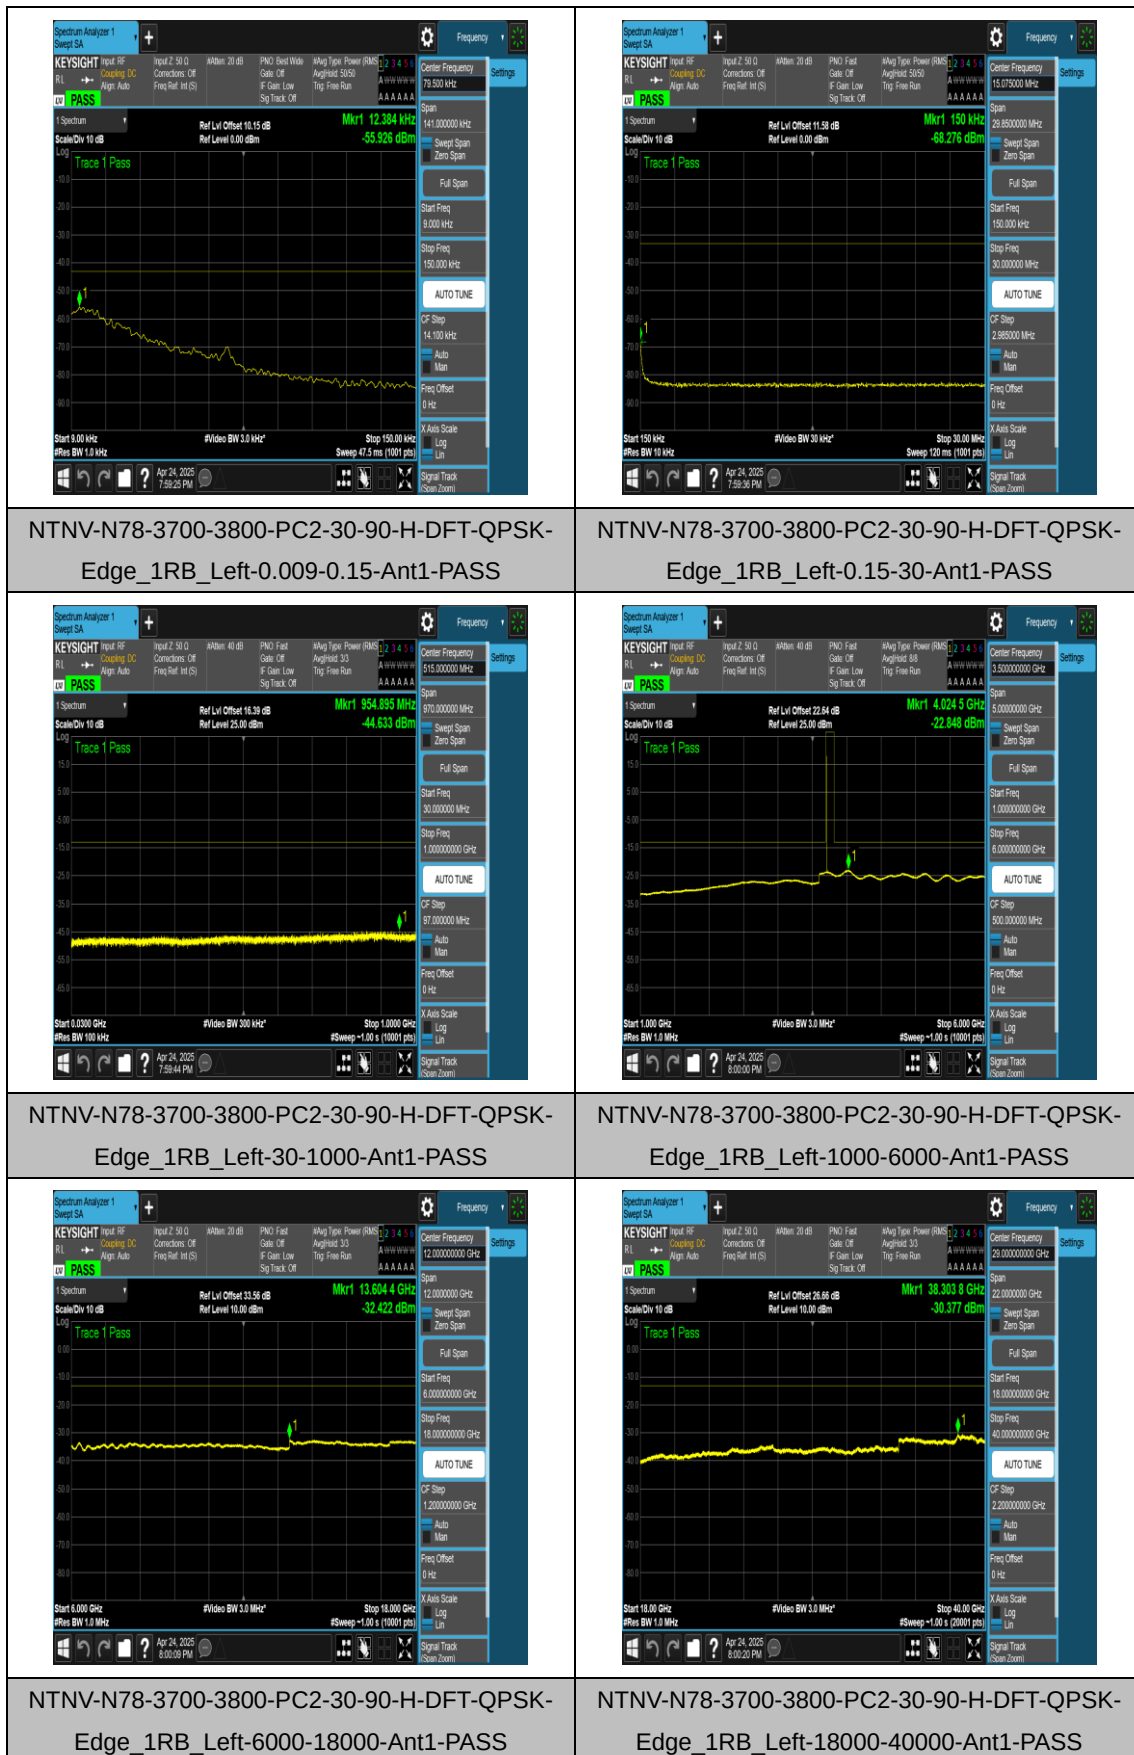

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-0.009-0.15-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-0.15-30-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-30-1000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-90-H-DFT-QPSK-
Edge_1RB_Left-18000-40000-Ant1-PASS