

NT-P801



User Manual

Content

1	Attention	4
2	Appearance and button.....	5
3	First use.....	6
	3.1 Battery management and Charge.....	6
	3.2 Connection with PC.....	6
4	Equipment operation interface.....	7
	4.1 Main interface describe	7
	4.2 Status bar describe	8
	4.3 Use touch panel.....	8
5	Equipment basic set setting.....	9
	5.1 Sound Volume.....	10
	5.2 Application	11
	5.3 Reset Option	12
	5.4 Storage.....	13
	5.5 Language & Keyboard.....	14
	5.6 Data & time setting.....	15
	5.7 About 8inch Tablet.....	16

6	File Manager.....	17
7	Problem Solution.....	18
7.1	Device can't open	18
7.2	Device shut down after start up.....	18
7.3	Headset can't hear the voice	18
7.4	Can't copy file or play music and so on	18

Google, Android and Google Play are trademarks of Google LLC.

1. Attention:

- Please don't be in high temperature, moisture or very dust place
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- please charge In the following condition,
 - A、 The battery power ICONS shows have no power
 - B、 The system automatically shut off, startup after power off soon
 - C、 Operation buttons no response
 - D、 The machine that the top right corner show red icons

When the device in the format or ongoing upload and download file, please don't suddenly disconnect, this could cause application error.

- Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products

2. Appearance and button:



size:211.2*126.2*9.0mm


3. First use

This 8inch Tablet is power on when you press power on button

3.2 Connection with PC

Use USB cable to connect with 8inch Tablet, first turn on, next step click on the left device will

pop up the USB connection window; last turn on USB storage to connect to PC

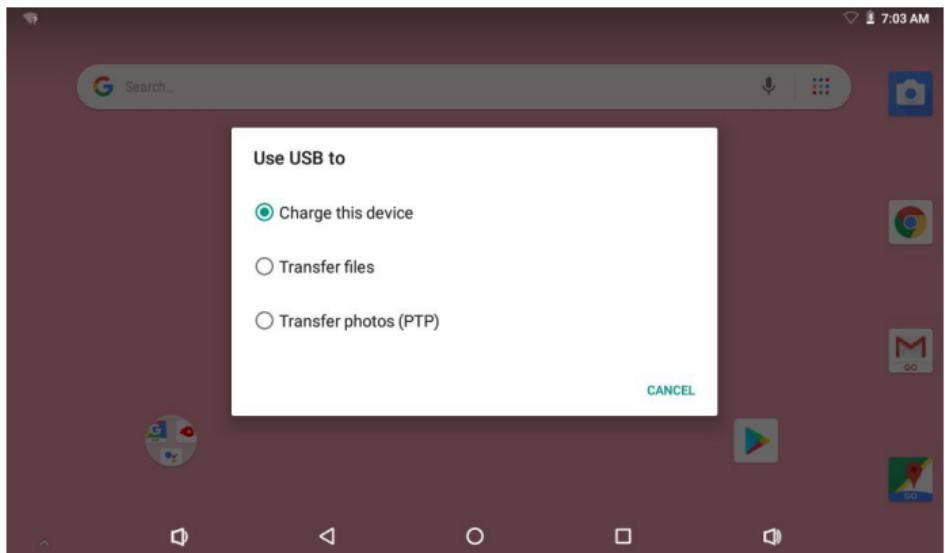

Into the load mode, you can copy; delete the file on the device and the file on the memory card.

4. Equipment operation interface

4.1 Main interface describe


After startup will enter the main interface, In the main interface, you can:

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box" Choose wallpaper from" as shown below



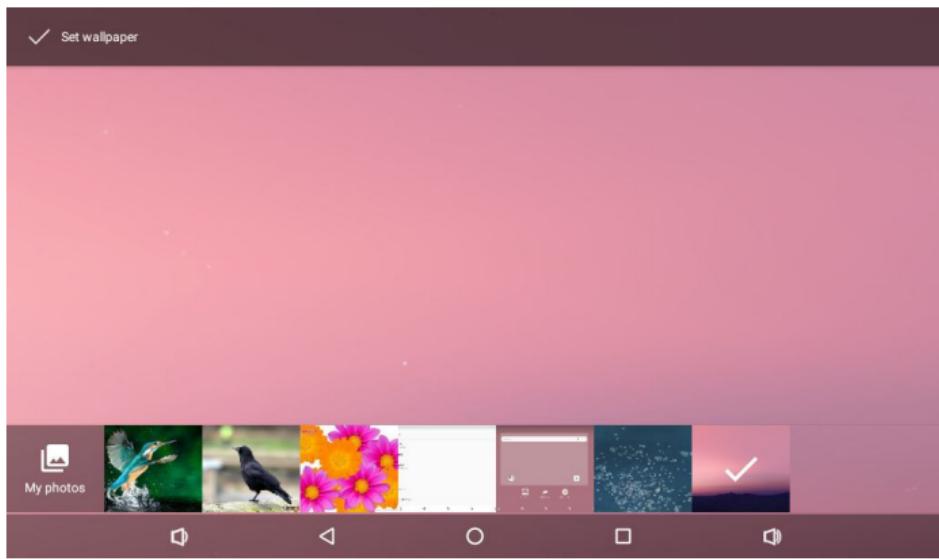

4.2 status bar describe

Bottom right display the battery, battery charge icons, current time, Settings Menu

4.3 Use touch panel

No matter which interface you are on the screen, can go back to main screen through pressing the



soft key  on the bottom middle corner of the main screen.



In different applications, by tapping the back soft key  on the bottom middle corner on the touch screen, you can return to its interface on the up floor.

5. Equipment basic set Setting:




Settings


enter setting

Click setting icons

interface

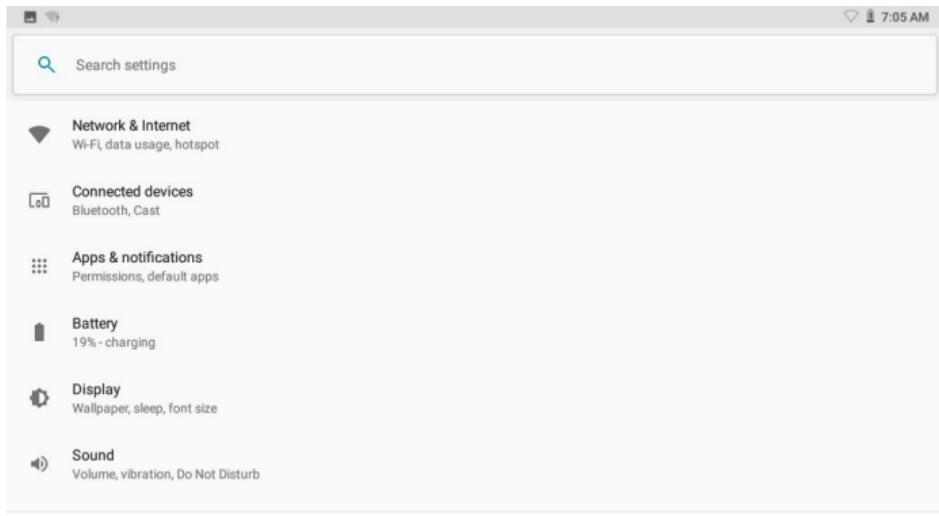


5.1 Sound Volume

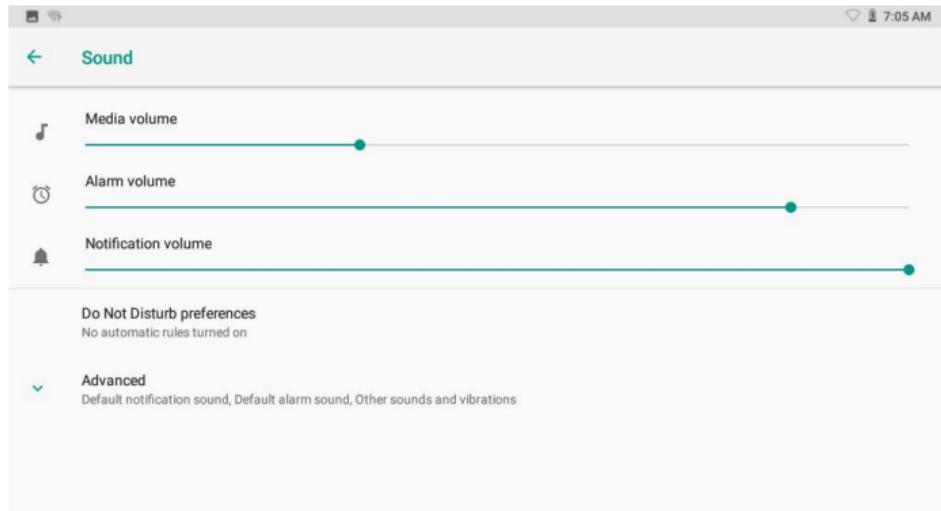

5.2 Application


Manage applications

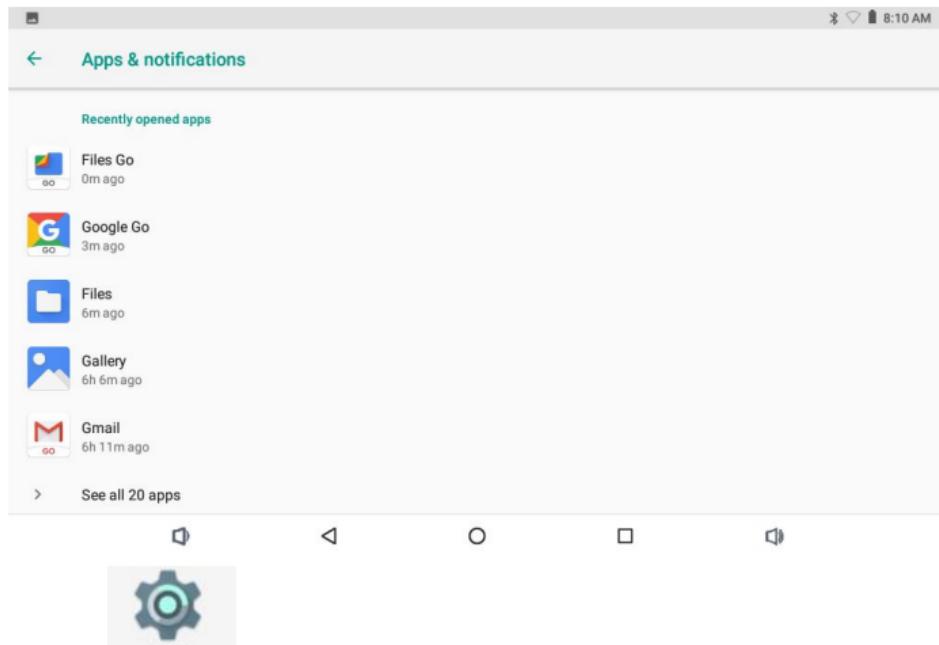

- A、enter “setting”>”Apps & Notifications” And then there will be App list
- B、Click you want to uninstall icons, will enter the following interface
- C、Click Uninstall, then you can delete the application

5.3 Reset Options

Please enter “Setting”>“System”>“Reset Options”

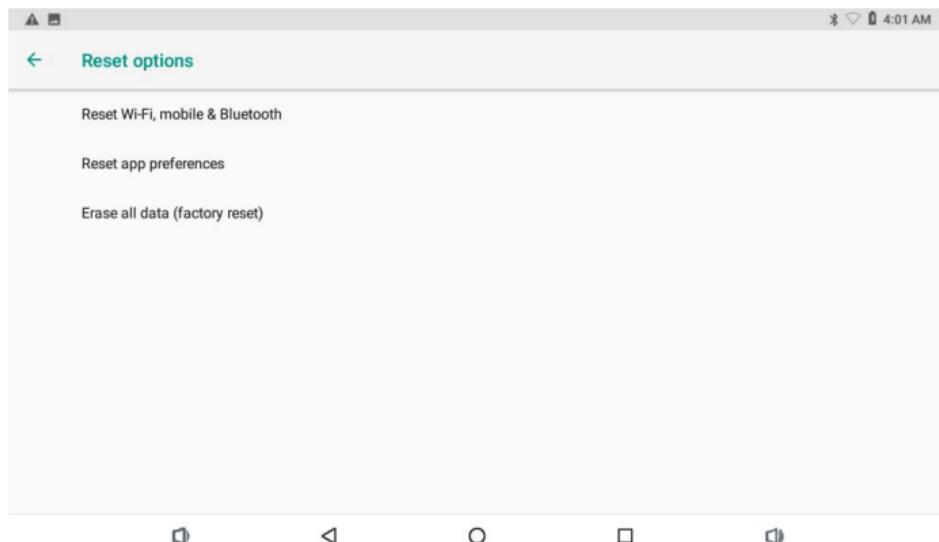

5.4 Storage


Remove TF card , view of the available storage space



【Remark】: please touch option" delete SD card", so that can safety to remove SD card

5.5 Language & keyboard


Setting: (Language), text input and automatic error correction options;

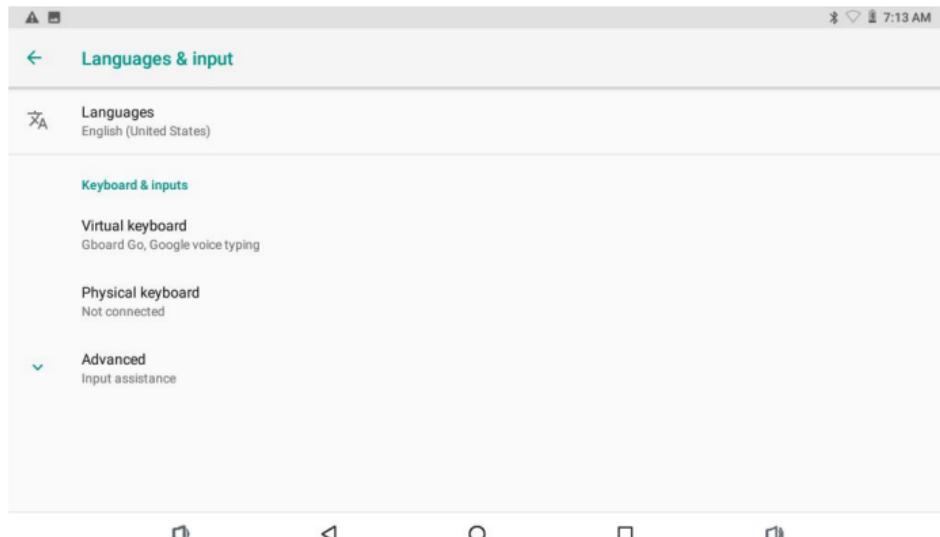

Select Language: 54 kind of national languages are available


5.6 Date & time setting

Set date, set time, Select time zone and select date format

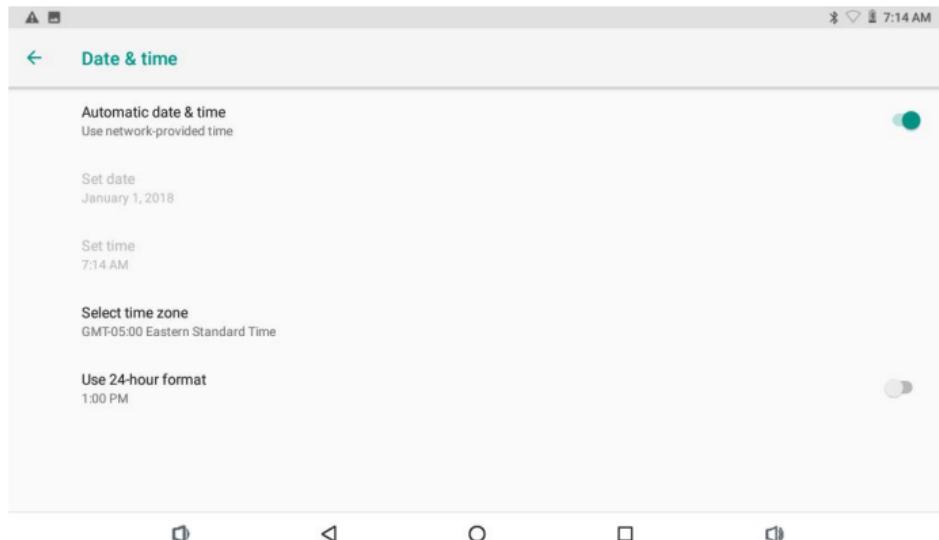

5.7 About 8inch Tablet


Please enter “Setting”>“System”>“About 8inch Tablet”

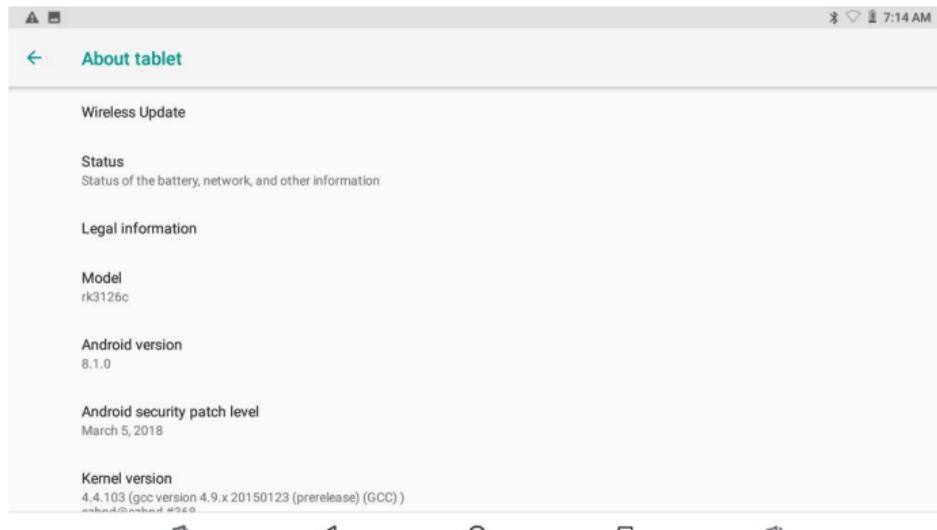

6. File Manager

This 8inch Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click “Files Go” APP to open, then you can check Apps, Images, Videos, Audio and Documents.

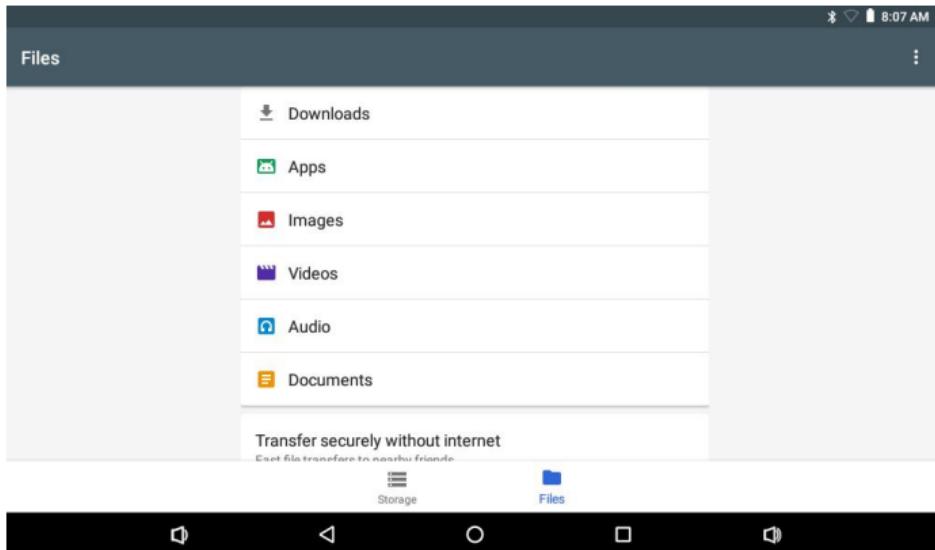

7. Problem solution

7.1 Device can't open

- A、Check the battery power
- B、Connect adaptor first, then check again
- C、Press the “reset” key first, then press “power” key
- D、After charging then can't open, please contact with the supplier

7.2 Device shut down after start up

After startup the screen or the opening picture has been appear, the device appear shutdown: Power is not enough, please charge

7.3 Headset can't hear the voice

- A Please check the volume whether set to 0
- B Check the music file whether damaged. Try playing other music.
- C If the file has damaged may lead to serious noise or hop sounds.

7.4 Can't copy file or play music and so on

- A、Please check between computer and device is correct connection
- B、check the memory storage space is already full
- C、check the USB cable is good or not
- D、USB connection is disconnected

Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

NOTE: The SIM card function has been disabled by software and is unavailable