 
 
440*160mm 普通书写纸 黑白印刷 正反面印刷

D-02B instruction manual 3 4 5 6 7 1 2 8 9 10 11 12 13 14 15 17 18 19 PRODUCT OVERVIEW 1.speaker 2.display 3.7 SET1-SET5 8 POWER 9.INFO/MENU butto 11.TUNE/SELECT knob 12.previous

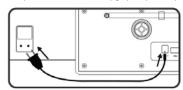

Turn on the antenna for optimal reception

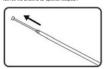

Turn on/off system power: Press the Power button on the radio

After pressing Power for the first time, it will automatically enter the FM radio search state.

Press the Power button on the radio to enter standby mode. Press again to enter the previous open Mode mode: Press the MODE button on the radio. Available modes: FM/Bluetooth/USB/AUX will be displayed on

the screen Press will like to select and confirm with the key volume/Tune/Select.

Adjusting the volume

Rotate the volume/Tune/Select knob on the radio or press VOL+or VOL - . The volume range is: 0 (minimum) -20 (maximum).

FM mode (30 preset stations)

Note: When starting the radio in FM mode for the first time, it will automatically search for FM stations

On the radio, press MODE and the display screen will display "FM". Press the volume/Tune/Select button to confirm, and the FM mode selection is successful.

Adjust the antenna on the back of the product to receive the best signal.

1. Conduct a radio search on the product, scanning stations displayed on the screen indicates automatic searching.

B. Long press ** for scanning station

C. Short press with for manually selection

- A. Long press scan or volume/Tune/Select to achieve automatic scanning stations
- B. Short press ◀▶ on the remote control ,Perform manual radio station search

Store your favorite radio stations

After successfully searching for a radio station in FM mode

1. Long press and hold the Preset button on the radio to access the Preset store list. Rotate volume/Tune/Select to select the numerical position of the preset list you want. Confirm storage by pressing volume/Tune/Select. The screen displays Favourite station set, indicating that the preset was successful.

1. On the radio, short press Preset to enter the Preset recall list, rotate volume/Tune/Select to select a radio station, and press volume/Tune/Select to confirm playback

Quickly store your favorite radio stations

There are 1-5 buttons below the display screen for storing your favorite radio stations.

In FM mode, after searching for a radio station, simply press and hold one of the buttons in 1-5 to quickly store the radio station. After successful storage, the Favorite Station Set will be displayed.

Quickly play your favorite radio stations

Press one of the buttons 1-5 on the radio to play your favorite radio station

Press Info in different modes to display different information on the display screen

The displayed information includes the following

- 1. Platform information
- 2. Signal strength/signal error 3. Program Type

Scan setting	Strong stations	When searching for radio statio automatically, only strong sign radio stations will be found.	
	All stations	Automatically search for all rac stations	
System settings	For more information, plea	For more information, please refer to the System Settings section	

On the radio, press Mode, rotate volume/Tune/Select, and go to the Bluetooth icon.

Waiting for Pairing.

- 2. Turn on Bluetooth on the Bluetooth electronic device
- 3. Find "Radio D-02" on the electronic device and connect it.
- 4. The screen displays "Connected" and the Bluetooth connection is successful 5. Music in Bluetooth electronic devices will be played from the radio

B: The radio can only be connected to one Bluetooth device at a time

c. Some old mobile phones need a password to connect to Bluetooth, and the default password is "0000".

Volume adjustment: On the radio, rotate volume/Tune/Select

Previous or Next Track: On the radio, briefly press

Note: Some applications and browsers do not support button manipulation

- 3. The music files in the flash drive will automatically start playing

Note: Only MP3 sound files are supported.

The USB flash drive cannot exceed 128GB

Music playback/pause: On the radio, press volume/Tune/Select Volume adjustment: On the radio, rotate volume/Tune/Select.

Previous or Next Track: On the radio, briefly press

13.earphone hole

15.PRESET

 
17.DC power

- 2. Insert the AUX cable into the AUX IN port on the back of the radio and into your phone/tablet/other sound playback device

14.next

18.USB port

3. Music from Bluetooth electronic devices will be played from the radio

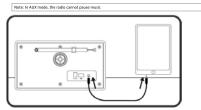

System settings

Press Power to return to the main interface, press INFO/MENU ->to enter System settings ->press volume/Tune/Select ->to enter the system settings page, and the following information will be displayed

Note: Pre	is the INFO/MENO	button again to exit the	system menu.
System	Backlight	Time out	Always On: Screen always on
settings			10 Sec-180 Secs, with a total of 8 brightness modes. The
			display light turns off and enters power-saving mode
			Set to ON to turn off power saving mode
		Level	Three gears in total (high, medium, and low)
	Time/Date	Set time/Date	Rotate the volume/Tune/Select key to adjust the numbers for both year, month, day, and time, and confirm by pressing the volume/Tune/Select button
		Set Hour System	24 hour mode, and 12 hour mode
		Set Date format	Display format for year, month, and day
		Clock style	Clock display style (clock, digital style)

odate the date and time through FM stations) lote: This function is applicable to FM radio station RDS time information transmission function Press volume/Tune/Select to enter the alarm clock. You can set up to to slarms. After successful setting, the main interface will display the alarn The options that can be set are as follows L ON/OFF (turn on alarm, turn off alarm) 2. Time: specific time point 3. Alarm ringtone: beep, FM mode, DAB mode 4. Ringing frequency Attention: A After setting the alarm clock, you cannot directly pres POWER to exit. Be sure to press the INFO/MENU key step by step to exit the main interface for the alarm clock to be set successfully B. Delay alarm time by 5 minutes, press any key to set C. To cancel the delayed alarm clock, press the Power ke Restore factory settings (YES, NO)

Sound System: Mono Bluetooth range up to 10 meters FM frequency: 87-108MHZ EIRP power (maximum): 4DbM Can preset 30 favorite FM stations USB supports up to 128GB 3.5mm AUX jack Speaker output: 5W

2.4 inch screen Rod antenna length: 63.5CM Antenna retraction length: 15.3CM Multi-languages Dimensions: 22 x 11 3 x 12 7 cm The nower adapter Input: 100-240V*60/Hz maximum 0.5A Output: 7 5V 1 2A 9 0W

Matters needing attention Cleaning and maintenance

Before cleaning, remove the power adapter from the AC power socket

Do not use strong cleaning solvents, brushes of any type, or any sharp objects. They will be damaged

Clean the product with a damp cloth. Before using the product, ensure that all parts are dry.

Place the product in a dry area and avoid direct sunlight

After sales guarantee

There is a one-year after-sales service guarantee. If you have any questions, please contact us via email and indicate your Amazon order number when sending the email.

. Directly click on the 'Ask' button on our store homepage to send us an email.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna nr transmitter.