

MID




Powered by Android™ 11 GMS Certificated

Quick User Guide


Picture 1



Picture 2

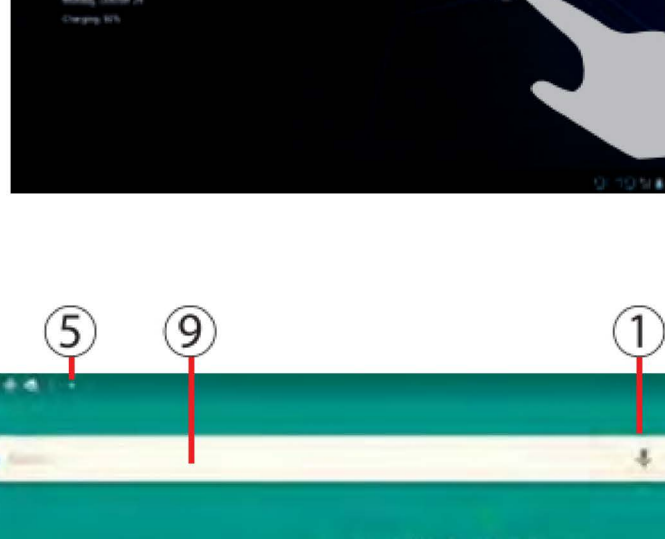

Picture 3

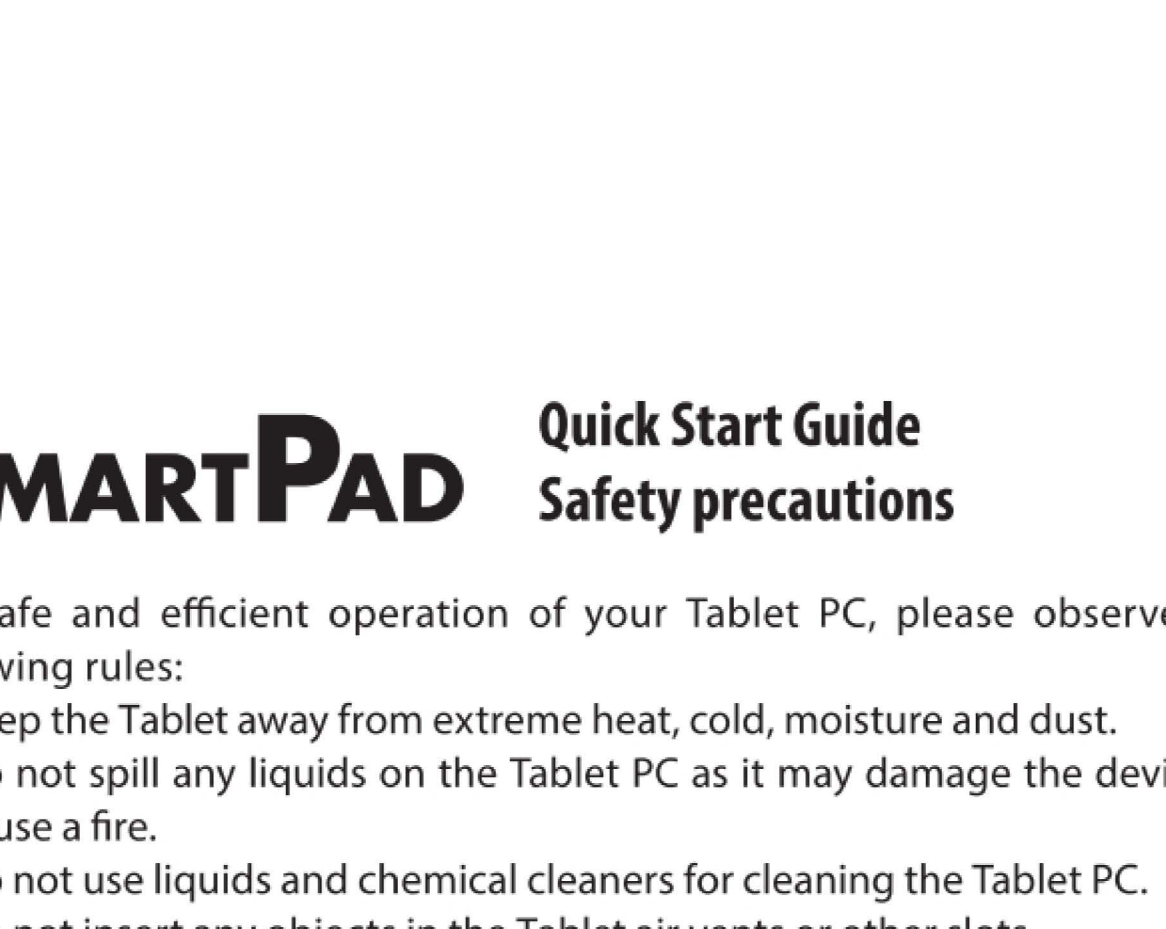

SMARTPAD Quick Start Guide Safety precautions

For safe and efficient operation of your Tablet PC, please observe the following rules:

- Keep the Tablet away from extreme heat, cold, moisture and dust.
- Do not spill any liquids on the Tablet PC as it may damage the device or cause a fire.
- Do not use liquids and chemical cleaners for cleaning the Tablet PC.
- Do not insert any objects in the Tablet air vents or other slots.
- Do not keep the device near magnetic sources, heaters, microwave ovens, heating up kitchen appliances, or in high pressure containers, as it may cause the battery leaking, the device overheating and inflammation.
- Do not disassemble the Tablet PC, only a certified service technician should perform repairs on your computer.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause fire or explosion.

Note: The device pictures, as well as data on the device appearance, color and design features are given in the manual for reference only. Mediacom reserves the right to change the appearance and technical parameters of its products without prior notice.

About your device (Picture 1)

- | | |
|--|------------------|
| 1. Power button | 5. Speaker |
| 2. Volume Buttons | 6. Earphone port |
| 3. USB port – connecting your computer | 7. Rear camera |
| 4. Micro SD card slot | 8. Front camera |

Switching on/off

To switch on the Tablet PC, press and hold the Power button. When startup window appears, release the button. The system initialization may take several minutes. Please wait patiently.

To switch off the tablet PC, press and hold the Power button. When "Power off" message appears, release the button. Touch the message, then press OK.

3

Recommendation: To save the battery charge, the device is set to sleep mode: the screen is locked and sensor functions become inactive (in accordance with the settings of screen lock time). To "wake up" the device, short press the power button.

Unlocking the screen (Picture 2)

If you do not use the screen during certain period of time, the screen will be locked. To unlock the screen, press the power button once and drag "Lock" image right.

Main screen (Picture 3)

1. Voice search (if available)
2. Application menu
3. Battery charge indicator
4. Time
5. Connected to PC
6. Recently used applications
7. Home
8. Back
9. Google search
10. Clock
11. Standard application button

Restarting the device

If the screen does not response to key press or tap, press the reset button (located in the hole) using any thin object (paper clip, pin, etc.) to restart your Tablet PC or keep power button for long time

Factory reset

Do delete all data and restore your Tablet PC to factory defaults, touch Settings > Recovery and reset; touch menu item Reset > Reset to factory defaults.

Contents

Tablet, USB Cable, Quick Guide

Charging the battery

Device is provided with built in rechargeable battery There is no need of supplemental batteries. Important: The battery must be charged before using it for the first time. When related Icon or warning message alerts you please charge the battery using proper adapter (do not use different adapter from original one).

4

Wireless networks

Prior to starting an Internet-application, activate Wi-Fi connection and set up Wi-Fi network.

1. Touch the icon "Applications" > "Settings" > "Wireless connections". Select Wi-Fi item and set the switch to On position.
2. The device will automatically start searching for available networks and will display them on the right panel.
3. Select any network from the list and press "Connect". If the network you selected is protected by WEP-protocol, type the security key, then press "Connect" button.

When the connection is successfully created, "Connected to" (Network name) message will appear on the screen.

Bluetooth (Optional)

Tap "Settings" > Select "Wireless connections/Bluetooth" > Tap "On" to switch on the Bluetooth function. The device will automatically search for available Bluetooth device.


Select the Bluetooth device and start data transmission.

After-service

If you encounter any problems or damage during use, you can contact us through the Amazon message . We promise a 5-year replacement service to accompany your child's happy childhood.

5

DISPOSAL REGULATIONS

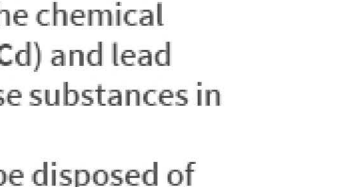

MADE IN CHINA



Disposal of obsolete electronic equipment

Warnings for the disposal of the product on which this symbol is affixed All electrical and electronic products must be disposed of separately from the municipal separate collection. Disposal must take place through specific collection facilities set up by public bodies or local authorities

The correct disposal of the unit no longer in use / obsolete helps to prevent possible harm to the environment and human health



Disposal of batteries/accumulators

This symbol, affixed e.g. on the battery included in the product may be associated with the chemical symbols for mercury (Hg), cadmium (Cd) and lead (Pb) depending on the content of these substances in the battery.

All batteries and accumulators must be disposed of separately from the municipal separate collection. They must be disposed of via collection facilities set up by the government or local authorities.

The correct disposal of the old / obsolete battery contributes to preventing possible harm to the environment and the health of individuals and all living species

For more detailed information on how to dispose of batteries and accumulators, contact the relevant municipal office or the local waste disposal service.

Safety standards and warnings

Warning: product intended for indoor use. Not water resistant! To avoid the risk of fire or electroshock, do not expose the device to moisture and avoid contact with liquids. In the event that such substances come into contact with the device, rinse it immediately and clean it. To avoid overheating, always leave it well-ventilated, the product while in operation, do not be exposed to direct or indirect (glass) sunlight, and do not use it in extreme weather conditions or in dusty places. Do not try to repair the product yourself to avoid the risk of electric shock, damage, and invalidation of the guarantee Do not drop the device or take strong blows

Do not use the device in the vicinity of strong magnetic fields.

The normal functioning of the product could be altered by electrostatic discharges or environmental interference. In this case, it is enough to try to move or use elsewhere.

Do not clean with chemicals to avoid the possibility of corrosion.

The manufacturer is not responsible for any damage or loss of data as a result of malfunctioning, inappropriate use, modifications, or replacement of the battery where present.

Use the supplied accessories and carefully follow the instructions contained in this manual for the correct use of the product. I design the actual shape and position of the details of this device may be different from those shown in the manual. This product is not intended for use by children. When equipped with batteries, if these are not replaced or recharged correctly, there could be a risk of explosion. Replace the battery only with the same or equivalent type.

ROM size: visible in the tablet's settings, less than the total nominal memory due to memory losses for Android system storage and software used for tablet functions. Actual memory available to the user may vary based on operating system version, apps installed, and after system or app upgrades are performed.

Important warnings for recharging

Please do not leave it charged for more than 8 hours. Otherwise, the phone battery could be damaged by overheating or exploding.

ATTENTION

Operating and storage temperatures (for devices and chargers): ambient temperature of use : 0° to 35C Storage ambient temperature: 10° to 35C Do not leave or store your device in your car. Temperatures of parked cars easily exceed this temperature range causing damage or malfunctions Damage resulting from use outside the specified temperature ranges will not be considered covered by the product warranty

6

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

7