

Tomarsy Pager & Buzzer

User's manual



Host model	TMS-127
Pager Size	240×155×37 mm
Buzzer Size	105×51×10 mm
Buzzer pcs	16
Frequency	315MHz
Transmission Distance	40~50 m/Multi-obstacle occasions 80~100 m/General indoor occasions
Input Voltage	(AC) 100 ~ 240 V / 50 ~60 Hz
Output Voltage	(DC) 12 V / 1A
Rated Power	18 W
Battery Capacity	200 mAh
Waterproof & dustproof grade	IP 32

* Using steps

1. Before using, it is necessary to put all the buzzers in the pager charging tank and charge them for 20 minutes to avoid invalid settings.
 2. Power on: Put all the buzzers in the pager charging tank, plug in, they will start automatically.
 3. Call: Enter the number from the pager keyboard, then press the [CALL] key, the buzzer will vibrate, beep & lights flashing, you can stop it by pressing the button on the side of the buzzer.
- Note:** When using it for the first time, if the buzzer doesn't respond, please reset the number. You can find how to set it in the setting section.
4. Shutdown: Put all the buzzers in the pager charging tank, enter '99' from pager keyboard, then press the [CALL] key.

Note: After shutdown, unplug the power plug.

* Buzzer number setting

1. Remove the acrylic card and number paper on the front of the buzzer;
2. Press the 'Stop' and 'Set' button at the same time, two lights on the side of the buzzer will flash, then you have 3 seconds to set the number;
3. Enter the number you would like to set from the pager keyboard and press the [CALL] key to save it within 3 seconds.

Tip: Please use a small tool to press the 'Set' button if you could not press it by your nail.

Tip: If you want to change the number of a buzzer, you can directly set a new number by the method above.

Note: Do not set the number to '99', this number is a shutdown command!

* Buzzer prompting time setting

1. Remove the acrylic card and number paper on the front of the buzzer;
2. Press the 'Set' button, the lights around the buzzer will on, you can adjust the number of lights that's on by press the 'Set' button, every light that's on means 7 seconds of prompting time.
3. After setting, it will save automatically in 3 seconds.

Tip: No light on means Vibration mode.

* Pager number setting

Turn off the pager and unplug it. Insert the power plug while holding down the [CALL] key, release the [CALL] key when the current number of the pager is displayed on the LED screen. Enter the new number in the range 1-99 and press the [CALL] key.

Note: Do not set the number to '0'

Note: After changing the number of the pager, all buzzers need to be set number again to use it.

Note: If all buzzers cannot be called, the Pager number may be changed by misoperation. You need to re-number all buzzers.

Tomarsy 呼び出しベル 取扱説明書



製品型番	TMS-127
サイズ	240×155×37 mm
サイズ	105×51×10 mm
子機の数	16
周波数	315MHz
送受信距離	40~50 m / 障害物が多い場合 80~100 m / 一般的な屋内の場合
入力電圧	(AC) 100 ~ 240 V / 50 ~ 60 Hz
出力電圧	(DC) 12 V / 1A
定格電力	18 W
バッテリー容量	200 mAh
防水・防塵グレード	IP 32

※使い方

① 起動：受信機を送信機の充電槽に入れ、送信機の電源を差し込むと、送信機と受信機が自動的に起動する。受信機は自動的に充電を開始する。

注意：初めて使う時は、受信機を送信機の充電槽に入れ、20分ほど充電してから使う。

② 呼び出し：送信機のキーボードに番号を入力して「Call」キーを押すと、受信機はピープ音/振動/LED光点滅。受信機側面の「停止」ボタンを押すと、リマインダーを止めることができる。

注意：初めて使用するとき、受信機が応答しない場合、受信機は番号を再設定してから正常に使えます。

③ シャットダウン：受信機を送信機の充電槽に入れ、送信機のキーボードに「99」を入力して「Call」キーを押すと。

注意：シャットダウン後、電源プラグを抜いてください。

※受信機番号を設定

まず受信機正面の番号札をはがす、受信機正面の金属点「機能」ボタンと側面の「停止」ボタンを同時に押して（操作が成功したら、受信機の側面に青色のランプが2つ点灯します、設定モードに入りました）、3秒以内に送信機のキーボードに番号を入力して「Call」キーを押します。成功した場合です、子機は振動してブザーを鳴らします。最後に、あなたが設定した番号に従って、その番号の番号紙を入れます。

注意：受信機番号は「99」を設定しないでください、この番号はシャットダウン命令です！

注意：受信機番号を変更したいなら、新しい番号で古い番号をカバーすればいいです。

※鳴動の持続時間を設定

まず受信機正面の番号札をはがす、受信機正面の金属点「機能」ボタンを押す、LEDライト1個の点灯に6回の鳴動が加増え、最大30回鳴動する。設定後、待機3秒で自動保存して退出します。（約1.2秒/鳴動）

※送信機番号を設定

電源プラグを抜いた場合は、「Call」キーを押しながらプラグを差し込みます。送信機のLEDウィンドウのスクリーンが現在の番号をフラッシュしてから手を離します。送信機から新しい番号を入力し、範囲「1-99」、「Call」キーを押して保存して終了します。

注意：台座番号は「0」にしないでください！

注意：特別な需要がない場合、勝手に送信機の番号を変更しないでください。送信機の番号を変更した後、全ての受信機の番号を再設定しなければ使用できません。

注意：もし、すべての子機が呼び出し不能になった場合、誤作動で本体の番号が修正された可能性があります。全ての子機の番号の再設定をお願いします。

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement. the device can be used in portable exposure condition without restriction