

## DOG TRAINING COLLAR

Model M100

### User Manual

Package List
1 x Transmitter 2 x Receiver (including a Collar) 3 x Type-C Charging Cable 4 x Test Light 5 x Contact Point 6 x Conductive Silicone Cap 7 x Strap 8 x User Manual

## Product Description

## How to Use

1. Charging the device

1.5h

2. Operation

1.5h

3. Channel Matching

Turn off the receiver and then long press the power switch for 5 seconds

Press the channel button to select a channel

Press one of the mode buttons on the transmitter to match the channel

4.1 Warning Tone Mode

For each short press of the tone mode button, the receiver will emit a short beep.

4.2 Vibration Mode

For each short press of the vibration mode button, the receiver will have a short vibration.

4.3 Shock Mode

For a long press of the button, it will emit an electric shock every 2 seconds and stop vibrating as soon as you release the button.

4.4 Level Adjustment

For each short press of the shock mode button, the receiver will emit an electric shock.

For a long press of the button, it will emit an electric shock every 5 seconds and stop as soon as you release the button.

**Note:**  
To avoid prolonged stimulation to your pet, it will automatically stop the electric shock after 15 seconds, even if you still hold the button. It will only vibrate again when you press the button again.

1.1 It takes about 1.5 hours to fully charge the device via the Type-C cable.

1.2 When it is charging, all the training functions will be shut off, which means the device won't work even if you press the button.

1.3 When charging is completed, close the rubber cover to protect the charging port from water. The rubber cover is IPX7 waterproof.

1.4 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.5 Unlock: Push the lock button down to unlock the transmitter.

**Receiver**

Short press the power switch

Long press the power switch for around 3 seconds

Indicator light turns blinking red

**Transmitter**

Power on

Power off

Low battery

1. Power on: Short press the power switch, and the transmitter vibrates along with the indicator light on.

2. Power off: Long press the power switch for around 3 seconds till the receiver vibrates along with the indicator light turning red.

3. Lock: Push the lock button up to lock the transmitter.

**Note:**  
The indicator light turns blinking red when the battery is running low.  
If the device fails to switch on, please charge it first.

1.6 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.7 When charging is completed, close the rubber cover to protect the charging port from water. The rubber cover is IPX7 waterproof.

1.8 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.9 Unlock: Push the lock button down to unlock the transmitter.

**Receiver**

Short press the power switch

Long press the power switch for around 3 seconds

Indicator light turns blinking red

**Transmitter**

Power on

Power off

Low battery

1. Power on: Short press the power switch, and the transmitter vibrates along with the indicator light on.

2. Power off: Long press the power switch for around 3 seconds till the receiver vibrates along with the indicator light turning red.

3. Lock: Push the lock button up to lock the transmitter.

**Note:**  
The indicator light turns blinking red when the battery is running low.  
If the device fails to switch on, please charge it first.

1.10 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.11 When charging is completed, close the rubber cover to protect the charging port from water. The rubber cover is IPX7 waterproof.

1.12 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.13 Unlock: Push the lock button down to unlock the transmitter.

**Receiver**

Short press the power switch

Long press the power switch for around 3 seconds

Indicator light turns blinking red

**Transmitter**

Power on

Power off

Low battery

1. Power on: Short press the power switch, and the transmitter vibrates along with the indicator light on.

2. Power off: Long press the power switch for around 3 seconds till the receiver vibrates along with the indicator light turning red.

3. Lock: Push the lock button up to lock the transmitter.

**Note:**  
The indicator light turns blinking red when the battery is running low.  
If the device fails to switch on, please charge it first.

1.14 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.15 When charging is completed, close the rubber cover to protect the charging port from water. The rubber cover is IPX7 waterproof.

1.16 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.17 Unlock: Push the lock button down to unlock the transmitter.

**Receiver**

Short press the power switch

Long press the power switch for around 3 seconds

Indicator light turns blinking red

**Transmitter**

Power on

Power off

Low battery

1. Power on: Short press the power switch, and the transmitter vibrates along with the indicator light on.

2. Power off: Long press the power switch for around 3 seconds till the receiver vibrates along with the indicator light turning red.

3. Lock: Push the lock button up to lock the transmitter.

**Note:**  
The indicator light turns blinking red when the battery is running low.  
If the device fails to switch on, please charge it first.

1.18 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.19 When charging is completed, close the rubber cover to protect the charging port from water. The rubber cover is IPX7 waterproof.

1.20 When the transmitter is locked, the screen displays only the lock mark and battery level.

1.21 Unlock: Push the lock button down to unlock the transmitter.

**Receiver**

Short press the power switch

Long press the power switch for around 3 seconds

Indicator light turns blinking red

**Transmitter**

Power on

Power off

Low battery

1. Power on: Short press the power switch, and the transmitter vibrates along with the indicator light on.

2. Power off: Long press the power switch for around 3 seconds till the receiver vibrates along with the indicator light turning red.

3. Lock: Push the lock button up to lock the transmitter.

**Note:**  
The indicator light turns blinking red when the battery is running low.  
If the device fails to switch on, please charge it first.

4.5 Channel Switching

Press the channel switching button to switch between 1-4 channels

-1-

5. How to Put the Collar on Your Pet Properly

Please follow the steps below.

A. Make sure the receiver is turned off before putting it on your pet.

B. Measure your pet's neck size and adjust the collar length to fit your pet. You can tuck a finger between the collar and your pet's neck when the collar is at an appropriate length. Note: The product may not work well if it is too tight or too loose.

C. Have your pet standing comfortably.

D. Place the receiver in the middle of the pet's neck and buckle up the collar.

Make sure the receiver is turned off before putting it on your pet.

A

B

C

D

-10-

**Parameters**

Radio Frequency	433.137MHz
Modulation	FSK
Operating Temperature	-10°C - 45°C
Power Supply of Transmitter	3.7V 800mAh Li-Poly Battery
USB-C Charging of Transmitter	DC 5V 275mA
Power Supply of Receiver	3.7V 250mAh Li-Poly Battery
USB-C Charging of Receiver	DC 5V 275mA
Waterproof Level of Receiver	IPX7

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-11-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-12-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-13-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-14-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-15-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-16-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-17-

**FAQ**

Q: Is there an age limit for the use of this collar?  
A: This collar can be used on small, medium and large pets aged over 6 months.

Q: How many receivers can be connected to the transmitter?  
A: One transmitter can be connected to a maximum of 4 receivers. If you need more than one receiver, please purchase them separately.

**Attention**

**Risk of Skin Injury**

- Choose the appropriate contact length and adjust the

-18-

Fluffee

Contact us

SHENZHEN SHI HENG YI GONG YE KAI YI YU XING SI

Room 201, Building B, Lishan Gongye Yuan, No. 8, Bule Street, Longgang District, Shenzhen, China

<http://www.fluffee.com/>

[support@fluffee.com](mailto:support@fluffee.com)

Made in China

UK: PBP LTD  
The Mainland China Distributor  
13th Floor, No. 1222 Meitong Street, Shenzhen, China

CE: PBP LTD

EU: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

WEEE: PBP LTD

RoHS: PBP LTD

REACH: PBP LTD

<div data-bbox="

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.