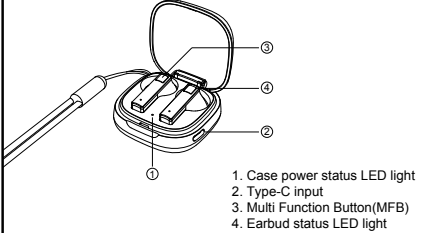


说明书材质： 105G铜版纸，正反两面单色印刷，Size: 63x73mm

TWS Earbuds Instruction Manual	PRODUCT KEY 	INCLUDES 1 Pair of wireless earbuds 1 Portable charging case 1 12-in (30 cm) Type-C charging cable 1 Instruction manual	EARBUD BUTTON FUNCTIONS Power ON: Press+hold(3s) L/R earbud Power OFF: Press+hold(5s) L/R earbud Play/Pause: Press once L/R earbud Increase Volume: 2x Press R earbud Decrease Volume: 2x Press L earbud Next Track: Press+hold(1.5s) R earbud Previous Track: Press+hold(1.5s) L earbud Activate Voice Assistant: 3x Press L/R earbud	There is something wrong with the wireless earbuds while using them Please try to re-connect with the smartphone after turning it on and restarting the earbuds. Check the charging status of the earbuds by putting them into the charging case until the red LED indicator is on. Then take them out and let them try to re-connect with your device.	Proper Handling: Do not open, disassemble, crush, or burn battery. Do not pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it. Do not strike, throw or subject the battery to severe physical shock. Do not attempt to disassemble or modify the battery in any way.	After eye contact: Flush eyes cautiously with plenty of water for at least 15 minutes, occasionally lifting the upper and lower eyelids to assure adequate flushing. Get medical aid. After skin contact: Remove contaminated clothing and rinse skin with plenty of water or shower for 15 minutes. Get medical aid. After inhalation: If inhaled, quickly leave the site to fresh air immediately. Administer artificial respiration if breathing is difficult. Get medical attention. After swallowing: If swallowed, wash out mouth with water provided person is conscious. Get medical attention.  Battery may burst and release hazardous decomposition products when exposed to a fire situation. Lithium-ion batteries contain flammable electrolyte that may vent, ignite, and product sparks when subjected to high temperature, when damaged or abused (e.g. mechanical damage or electrical overcharging), may burn rapidly with flare-burning effect, may ignite other batteries in close proximity. Fire-extinguishing measures: Use copious amounts of cold water. May use dry powder, sand, earth. Questions? Comments? Contact contact@culturefly.com	FCC STATEMENT NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2BAPW-XP1318
	SPECIFICATIONS Bluetooth® version: 5.3 Signal distance: 32 FT (10 m) Continuous playback/talk time: about 3 hours Standby time: about 80 hours Charging time: about 1.5 hours Battery type: Rechargeable lithium ion battery 3.7V/30mAh for earbuds, 3.7V/250mAh for charging case	CONTROLS Charging the earbuds Put the earbuds into the charging case, the earbuds will be charged automatically. The red status LED light will be on during charging and will turn off when fully charged. Charge the charging case Use a Type-C cable connected to a USB charger (DC 5V-1A) The Steps for dual earbud pairing (First use only) Take out both earbuds from the charging case at the same time. The LED light on both earbuds will be flashing blue and red. One of the earbuds LED will turn off after 2 seconds. This means that both earbuds are ready to pair. Turn on Bluetooth® on your device and search for a new device then select "pride airpods" to connect. How to re-connect The earbuds will automatically try to re-connect with the last paired device after re-start. If not put the earbuds back into charging case and try again, or connect manually.	ANSWER/END/REJECT INCOMING CALLS Answer/End: Press once L/R earbud when incoming calls Reject: Press+hold(2s) L/R earbud	The wireless earbuds power status is low, please re-charge it. There is an obstruction between the mobile device and the wireless earbuds, or the wireless distance is beyond the signal range. Please do not cover the wireless earbuds with your hands in order to maintain the continuous stability of the signal. Try to keep the wireless earbuds and the smartphone in the same direction.	Proper Storage: Store in a cool, dry, and well-ventilated area. Keep away from heat, fire, and direct sunlight. Keep out of the reach of children. Disposal considerations: Recycle in accordance with government, state and local regulations, to ensure proper disposal. If exposed to the battery – vapor fumes may be irritating to the eyes and skin. First aid measures:		
		The Steps for dual earbud pairing (First use only)	FREQUENTLY ASKED QUESTIONS The smartphone cannot find the wireless earbuds Check whether the earbuds power is switched on or not. Does the status LED light flash red and blue alternatively? If the wireless earbuds still haven't been found after switching power on, please restart both the earbuds and Bluetooth® search on your phone.	 THIS IS A BATTERY-OPERATED PRODUCT. THIS IS NOT A TOY. INTENDED USE OF THE PRODUCT SHOULD NOT RESULT IN EXPOSURE TO THE INTERIOR BATTERY. In case of abuse, there is risk of rupture, fire, heat, leakage of internal components. Abuses include but are not limited to charging for a long time, short circuit, put into open flame, put into water, whacked with hard object, punctured with acute object, crushed, and broken.			