
说明书成品尺寸: 73X93mm 128铜版纸覆哑膜钢琴折

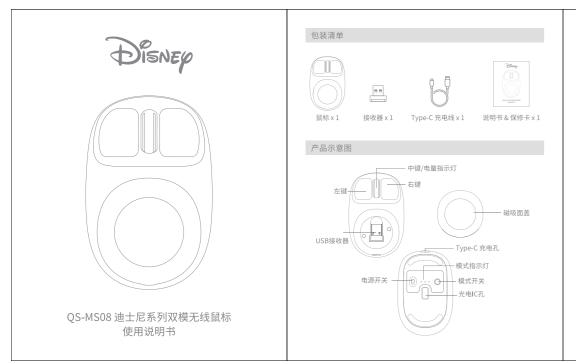

Packing List


- 1、除说明书有特殊标示的操作方式以外,请勿尝试拆卸或更换产品内的任何零件。
- 2、请勿将产品放入水或其他任何液体中,此产品非防水设计。
- 3、如果有任何液体不小心进入产品内时,请立即断开连接并移开此产品。
- 4、为避免触电,请在安装或卸载产品时,确保手上没有沾水。 5、请勿将此产品放置于热源附近或直接暴露在火源附近。
- 6、请勿将本产品放置在有强大电磁力的环境中,否则会导致产品故障。

产品规格	
试	2.4G+BT5.0
[作距离	
池容量	300mAh/3.7V
:池电压	3.7V
:电电压	4.2V
:电电流	1A MAX
:电时间	
L标解析度	1600DPI
报率	125Hz
标尺寸	63.8*97.7*39mm

鼠标支持与安装了 Windows 8 及以上版本的 Windows OS, Mac OS 10.10 及以 上操作系统与 Google Chrome OS 的电脑配对。

USB 接收器安装

 沿磁吸面盖边缘开口,将磁吸面盖取出,然后取出 USB 接收器,最后将接收器 插入电脑 USB 接口。







直接使用,出厂默认 2.4G 模式。 ● 24G 電財码模式・

● 2.4G 模式:

长按中键和右键3秒以上,鼠标将进入强对码模式,此时插入 USB 接收器,即可完

● 蓝牙模式:

鼠标模式说明

1. 短按模式开关按钮切换至BT1或BT2模式,然后长按中键和右键 3 秒以上,鼠 标将进入配对模式。

模式指示灯

● BT2 蓝灯 ● BT1 蓝灯 ● 2.4G 绿灯

将 USB 接收器插入电脑,短按模式开关按钮,将模式开关切换到 2.4G 档位即可

2. 随后在电脑桌面底部打开蓝牙图标,点击添加蓝牙设备,搜索对应的鼠标设 备名称,当出现后直接点击配对,当显示已连接就可以开始使用鼠标。

鼠标名称描述

●蓝牙 5.0 名称: Disney BT5.0 Mouse

● 电量低:闪红灯 ● 充电中:绿灯常亮 ● 充满电:绿灯熄灭

产品中有害物质名称及含量

	部件名称	有害物质						
		铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
	印刷电路组件	0	0	0	0	0	0	
	外壳等小结构件	0	0	0	0	0	0	
	本表格依据SJ/T113	364的规定	编制					

- 0:表示该有害物质在该部件所有均质材料中的含量均在 B/T26572规定限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材料中的含量超出
- GR26572抑定的限量要求 表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害
- 本表格依据SJ/T11364的规定编制

印刷电路板组件*:包括印刷电路板及其零部件,电子元器件等, 根据产品型号不同 您听购买的产品可能不会含有以上所有部件



物质的替代。

指不含有6种有毒有害物质或含有但小于限量值,字母 "e" 代表英 字母电子(electronic);电子(electrical)和环境(env 设;环绕的曲线箭头表示可回收利用。



本使用手册没有任何形式的担保。 立场表达或其他暗示 本使用手册所提到的产品 规格 及信息仅供参考,内容亦会随时更新于网页,恕不另行通知。

就本文件附随的产品做如下保证:如产品在您购买日起十二(12)个月("保修期")内 在 正常使用情况下因质量瑕疵发生损坏,能修理的,免费修理;经厂家确认无法修理的,免 买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)

如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提 供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况: 1 超付三句有效期的


2.涂改保修卡、产品编码与产品本体不符;

- 3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
- 4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
- 5 拉链、 塔扣因受力过大而损坏: 6.因承载过重造成的脱线或撕裂;
- 7.任何因尖锐物体造成的损坏
- 8.有烧损或水浸迹象的产品:
- 9.因擅自拆改导致的损坏: 10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。
- 11.如产品原有标识标签被更改或损毁,本保证将失效。 产品及随附物料的齐备和外观完好不属于保证范围、您应在接收产品时当场检验并对任何

以上保证是我们就产品做出的全部保证,且仅在中国大陆地区境内适用。本文件的任何内


容均不影响根据法律规定不能排除或限制的消费者权利。

服务监督热线:400-885-8808

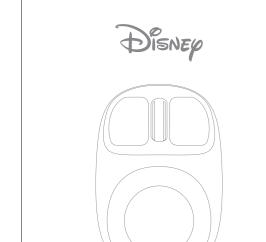

QS-MS08 Disney Series Dual-mode

Wireless Mouse Instruction Manual

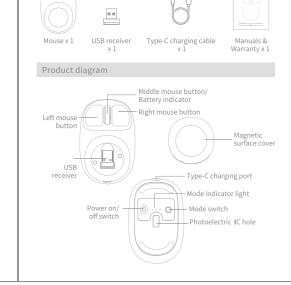

Kindly reminder


- 1. Do not attempt to disassemble or replace any parts inside the product, except for the operation methods indicated in the manual.
- 2. Do not put the product in water or any other liquid. This product is not designed to be waterproof.
- 3. If any liquid accidentally enters the product, please disconnect it immediately and remove the product.
- 4. To avoid electric shock, please ensure that your hands are not wet when installing or uninstalling the product. 5. Do not place this product near a heat source or directly expose it to a fire
- 6. Do not place this product in an environment with strong electromagnetic force, otherwise it may cause product malfunction.

lode	2.4G+BT5.0
Orking distance	10N
attery capacity	300mAh/3.7\
attery voltage	3.7\
harging Voltage	4.2\
harging current	1A MAX
harging time	
louse DPI	1600DP
eturn rate	125H;
louse Size	63.8*97.7*39mm

System Support

The mouse supports pairing with computers that have installed Windows 8 and above, Mac OS 10.10 and above operating systems, and Google Chrome OS.

Open along the edge of the magnetic surface cover, remove the magnetic surface cover, then take out the USB receiver, and finally insert the receiver into the computer USB port.

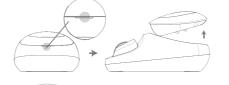







Mouse mode description

Mode indicator light ■ BT2 Blue light
■ BT1 Blue light
■ 2.4G Green light

2.4G mode:

Insert the USB receiver into the computer, press the mode switch button briefly, and switch the mode switch to the 2.4G mode to use it directly. The factory default mode is 2.4G.

2.4G Strong Code Matching Mode:

Press and hold the middle and right buttons for more than 3 seconds, and the mouse will enter strong pairing mode. At this time, insert the USB receiver to complete the connection

Bt mode:

1. Short press the mode switch button to switch to BT1 or BT2 mode, then long press the middle and right buttons for more than 3 seconds, and the mouse will enter pairing mode. 2. Then open the Bt icon at the bottom of the computer desktop, click on

'Add Bluetooth Device", search for the corresponding mouse device name, and when it appears, click on "Pair" directly. When it shows "Connected", you can start using the mouse.

Mouse name description

Bt 5.0 Name: Disney BT5.0 Mouse

Battery Indicator

- Low battery: Fashing red light
- Charging in progress: Green light constantly on
- Fully charged: Green light off

Name and content of harmful substances in the product

	Harmful Substances					
Part Names	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	0	0	0	0	0	0
Small structural parts such as shell	0	0	0	0	0	0

is form is compiled in accordance with SJ/T 11364. Indicates that the content of the hazardous substance in all mogeneous materials of the part is in below the limit required by

X:Indicates that the hazardous substance at least in a certain omogeneous material of the part exceeds The limit requirements specified in GB/T 26572.

The parts marked with "X" on the form are all harmful due to the nitations of global technological development. Substitution of

acluding printed circuit boards and their parts, electronic component etc. and depending on the product model the earbuds you purchased may not contain all the above components.



Refers to not containing 6 toxic and harmful substances or containing but less than the limit value, with the letter "e" representing the English letter "electronic"; The first letters of electronic and environmental; he curved arrows surrounding indicate recyclability

> Certificate of Approval Product No: Production Time: (PASS)

Warranty statement

Disclaimer

This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the web at any time.

Warranty statement:
The product attached to this document is guaranteed as follows:If the product is twelve (12) months from the date of purchase("Warranty Period") under normal conditions of use due to quality defects damaged,can be repaired. Free repairies replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 (13) months as If you apply for a warranty, please call the product service hatline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1.Exceeding the volidity period of the three packs;
2.Altering the warranty card and product code does not match the product body;
3.Causes caused by misuse,abuse or improper transportation,use,maintenance or 3. Causes caused by misuse abuse or improper transportation, use, maintenance of storage obstacles or damage;
4. Failure or damage caused by force majeure (such as earthquake, war, disaster, etc.) or accident bad;
5. The zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects:
8. Products with signs of burning of flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discolaration, advantaged and other losses that occur during the normal use of the product.
11. If the original identification label of the product is changed or damaged this

Thinking of the product.

11.If the original identification label of the product is changed or damaged,this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit

E-mail: service@keesion.com





FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.