 


TF-T30说明书 成品尺寸: 73X93mm 材质: 105克铜版纸 双面印刷 钢琴折

英文

TRANSFORMERS

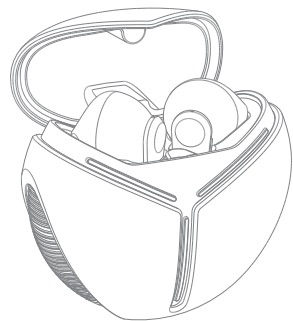 


TF-T30 True Wireless BT headphones user manual

Packing list



Product diagram

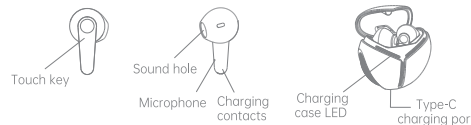

Warm reminders

- Do not attempt to remove or replace any parts in the product except for the operation method specifically indicated in the instruction manual.
- Do not put the product into water or any other liquids. This product is not waterproof.
- If any liquid accidentally enters the product, immediately disconnect and remove the product.
- To avoid electric shock, please make sure that your hands are not stained when installing or uninstalling the product.
- Do not place this product near the heat source or directly expose it to the fire source.
- Do not place this product in a strong electromagnetic environment, otherwise it will cause the product to fail.

Product specifications

BT version: V5.4
Transmission distance: ≥10m
Music time: about 3.5h
Speaker size: Φ13mm
Charging time: about 1.5h
Battery capacity: 30mAh
Rated input: 5V=30mA

Specifications of charging compartment

Battery capacity: 300mAh
Charging time: about 1.5h
Rated input: 5V=300mA
(All technical information is subject to actual performance)

To charge the charging compartment
The Type-C charging cable is connected to the charging compartment to the 5V power adapter
Tips: When the headphone battery announces a low-power reminder (sound prompt: battery low), please charge the headphones in time



Rated input: 5V=30mA (headphones)



Rated input: 5V=300mA (charging silo)

LED indicates the status


Start	The blue light is on for 1 second	The tone "power on"
Shut down	The red light is on for 1 second	Tone "power off"
TWS pairing status	The red and blue lights flash alternately	Thump
Enter the device pairing state	The red and blue lights in the main ear flash alternately, and the secondary ear goes out	Prompt to "pairing"
Disconnect	The red and blue lights in the main ear flash alternately, and the secondary ear goes out	The tone "disconnected" "pairing"
Tips for low power of headphones	Headphones red light flash	Tone: "battery low"
Headphone charging	The red light of the headphones is on	/
The headphones are fully charged	The red light of the headphones is off	/
Clear the pairing	The red light is on for 1 second	Tone "power off"

Instructions for charging compartment (for reference only, subject to the physical object)

Charging status of charging bin	Charging compartment indicator light flashing
The charging compartment is fully charged	Charging compartment indicator light is on permanently
The charging compartment charges the headphones	Charging compartment indicator light is on for 4 seconds
The charging compartment is fully charged to the headphones	Charging compartment indicator off
Low power state of the charging compartment	The light flashes for 4 seconds and goes out (the power of the charging compartment is 15%, and the light flashes)

Product how-to instructions

 - ① Start up
Method 1: Open the lid of the charging case and turn on the headphones automatically
Method 2: Long press the left/right multi-function button for 3 seconds, and the headphones turn on (Power-on tone: "power on")
- ② Shut down
Method 1: Put it back in the charging compartment, and the headphones will automatically turn off within 5 minutes.
Method 2: The headphones will automatically shut down without connecting the device (Shut down tone: "power off")
- ③ Pairing
Step 1: After turning on, the left and right headphones will automatically interconnect and enter the pairing state with the mobile phone (prompt tone: "pairing")
Step 2: Open the BT list of smart devices, search for "TF-T30" and connect
- Tips: When the left and right headphones are not paired, please restore the factory settings, put them back in the charging case and then open the automatic pairing.



Touch operation

General mode

- Volume -: Click the left headphone Touch key (minimum tone "Dong")
- Volume +: Click the right headphone Touch key (the maximum tone "Dong")

Music control

- Play/Pause: Double-click the Touch key
- Previous song: Triple-click the Touch key of the left headset
- Next song: Three-click the Touch key on the right earphone

Call mode

- Answer the call: double-click the left/right headphone Touch key
- End the call: Double-click the left/right headphone Touch key
- Reject the call: Long press the left/right headphone Touch key 2S

Game/Music Mode

- Long press the left headphone Touch key for 2 seconds to start/off the voice assistant
- Long press the right headphone Touch key for 2 seconds to switch game/music mode

Restore factory settings

Method 1 Power-on unconnected status: After 5 consecutive clicks on the left/right headphones, the red light turns off for 1 second and clears all information about pairing and connection. The left/right ear is turned off

Method 2 Power-on connection status: Click the left/right headphones 5 times in a row, and then long press 1S with a prompt tone "du" and continue to press until 10 seconds the headset is turned off to clear the pairing information between the headphones and the BT device and then turn off (the prompt tone "power off")

The name and content of harmful substances in the product

Part name	Harmful substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit board components	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with the provisions of SJ/T 11364.

○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.
×: Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.

Note: 1. The parts marked with "×" on the table are unable to achieve the replacement of harmful substances due to limitations in global technological development;
2. Printed circuit board components: including printed circuit boards and their parts, electronic components, etc;
3. Depending on the product model, the product you purchased may not contain all of the above components.

	Electronic and electrical products sold in the People's Republic of China must mark this logo, the number in the logo represents the product under normal use environmental protection use period.
--	--



Warranty statement

Disclaimer:
This user manual does not have any form of guarantee, position expression or other implication. The products, specifications and information mentioned in this user manual are for reference only, and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired, free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product, continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). The date of purchase is subject to the date of the sales invoice, if the date of purchase cannot be determined, the warranty period shall be thirteen (13) months from the date of production. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

The above guarantee does not apply to the following situations:
1. Exceeding the validity period of three guarantees;
2. Altering the warranty card, the product code does not match the product body;
3. Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;
5. Zipper and tower buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or flooding;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product;
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should inspect the product on the spot when you receive it and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in Chinese Mainland. Nothing in this document affects consumer rights that cannot be excluded or restricted by law.

Service supervision hotline: 400-885-8808

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User info			
User name		Email	
Contact number		Postal code	
Mailing address			
Product information			
Product name		Product number	
Product barcode / Serial number / Batch number			

Vendor information			
Name			
Address			
Contact number		Postal code	
Sales date		Invoice number	
Remark			

Certificate Of Approval

Product number: _____
Production Time: _____
QC: _____

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.