


TRANSFORMERS

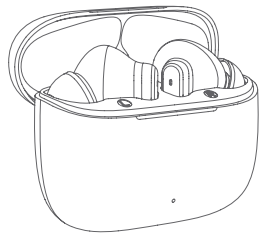

Packing list

	Earphones x2		Charging case x1
	Ear cap x6		Type-C charging cable x1
	Instructions and warranty card x1		

Tips

1. Except for the operation methods specifically marked in the manual, do not try to disassemble or replace any parts in the product.
2. Do not put the product in the water or any others liquid, the product is not waterproof.
3. If any liquid accidentally enters the product, please disconnect and remove the product immediately.
4. To avoid static shock, please make sure that there is no water on your hands when installing or uninstalling the product.
5. Do not put the product near a heat source or directly expose it to a fire source.
6. Do not put the product in an environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product specifications

Earphones specifications


BT version: V5.4
Transmission distance: $\geq 10\text{m}$
Speaker type: $\Phi 13\text{mm}$
Frequency response: 20Hz-20KHz
Battery capacity: 3.7V / 35mAh
Rated input: 5V $\sim$ 30mA
Charging time: ≈ 1.5 hours
Play music time: ≈ 5 hours

Charging case specifications

Battery capacity: 3.7V / 320mAh
Rated input: 5V~300mA
Charging time: ≈1.5 hours
(All technical information is subject to actual performance.)

Product diagram

- ① Sound hole
- ② Call microphone
- ③ Earphone indicator light
- ④ Touch key
- ⑤ Charging contacts
- ⑥ Charging case indicator light
- ⑦ Type-C charging interface

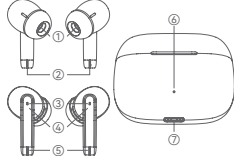

Product operation instructions

1. **Power on**
Method 1: Open the top cover of the charging case, and power on the earphones automatically.
Method 2: Long press the left / right earphone touch key for 3 seconds, and power on the earphones.
2. **Power off**
Method 1: Put the earphones back into the charging case, close the cover, and the earphones will automatically power off.
Method 2: If the earphones are not connected or disconnected for more than 3 minutes, the earphones will automatically power off.
Low power alarm and automatic shutdown function: When the battery voltage is lower than 3.4V, the earphones will emit a voice prompt, and the earphones should be charged in time. When the battery voltage is lower than 3.2V, the earphones will automatically power off.
3. **Pairing**
After the earphones are power on, the left earphone will automatically connect, the voice prompt will turn on for 10 seconds of smart device, search for "TF-739" and click connection, the voice prompt will sound after the connection is successful.
Note: When the left and right earphones are not interconnected, they will be put back in the charging compartment after restoring the factory settings, and will be automatically interconnected when they are turned on.
4. **Volume**
Turn down the volume: Click the left earphone touch key, and there will be a prompt tone at the minimum volume.
Turn up the volume: Click the right earphone touch key, and there will be a prompt tone at the maximum volume.
5. **Music**
Play / pause music: Double-click the left / right earphone touch key.
Previous song: Triple-click the left earphone touch key.
Next song: Triple-click the right earphone touch key.
6. **Phone call**
Answer / end call: When calling, double-click the left / right earphone touch key.
Reject call: When calling, long press the left / right earphone touch key for 2 seconds.
7. **Voice assistant**
Turn on the voice assistant: Long press the left earphone touch key for 2 seconds.
8. **Switch mode**
Game / music mode (power-on default): Long press the right earphone touch key for 2 seconds.

Restore factory settings

- **Method 1:** When the phones are power on but not connected to BT, five clicks the left / right earphone touch key. The white light is on for 1 second and then goes out, and the earphones are power off.
- **Method 2:** When the earphones are power on and connected to BT, five clicks the left / right earphone touch key, and then immediately long press the left / right earphone touch key for 10 seconds. The white light is on for 1 second and then goes out, and the earphones are power off.

LED indicator light status

Earphone	Voice prompt	Lamp display
Power on / Clear pairing	"Power on"	The white light is on for 1 second and then goes out.
Power off / Clear pairing	"Power off"	The white light is on for 1 second and then goes out.
TWS pairing	"Dong"	The white light flashes
BT pairing	"Pairing"	The white light of the main earphones flashes, and the white light of the secondary earphones goes out
Connected	"Connected"	The white light goes out
Disconnected	"Disconnected"	The white light of the main earphones flashes, and the white light of the secondary earphones goes out
Low power alarm	"Battery low"	The white light flashes every 5 seconds
Charging status	—	The white light is steady on
Charging completed	—	The white light goes out

Charging case	Lamp display
Charge the earphones	The green light is steady on
Charging the earphones is complete	The green light goes out
Low power alarm	The green light flashes
Charging status	The orange light flashes
Charging completed	The orange light is steady on

The name and content of harmful substances in the product

Part name	Harmful substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit board components	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with the provisions of SJ/T 11364.

- Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.
- Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.

Note:

- (1) The parts marked with “*” on the table are unable to achieve the replacement of harmful substances due to limitations in global technological development;
- (2) Printed circuit board components: including printed circuit boards and their parts, electronic components, etc.;
- (3) Different from the RoHS model, the product you purchased may not contain all of the above components.



Electronic and electrical products sold in the People's Republic of China must mark this logo, the number in the logo represent the environmental protection period of the product under normal use.



Warranty statement

Disclaimer:
This user manual does not have any form of guarantee, position expression or other implication.
The products, specifications and information mentioned in this user manual are for reference only,
and the content will also be updated on the web at any time without additional separate notice.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired, free repair; free replacement if the manufacturer confirms that it cannot be repaired, repaired or replaced product, continue to enjoy the warranty. The warranty period is limited to the shortest, not less than 30 days). The date of purchase is subject to the date of the sales invoice, if the date of purchase cannot be determined, the warranty period shall be thirteen (13) months from the date of production. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice.

have a guarantee does not apply to the following situations:

- Exceeding the validity period of three guarantees;
- Altering the warranty card. The product does not match the product body;
- Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
- Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;
- Zipper and towel buckle are damaged due to excessive force;
- Disconnection or tearing caused by excessive load;
- Any damage caused by third objects;
- Products with signs of burning or flooding;
- Damage caused by unauthorized disassembly;
- Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of the product.

11. If the original identification label of the product is changed or damaged, this guarantee will become invalid.

The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should inspect the product on the spot when you receive it and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in Chinese Mainland. Nothing in this document affects consumer rights that cannot be excluded or restricted by law.

Service supervision hotline: 400-885-8808

Warranty card

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User information

User name		Email	
Contact number		Postal code	

Mailing address

Product information			
Product name		Product number	

Vendor information

Name			
Address			
Contact number		Postal code	
Sales date		Invoice number	
Remark			

Certificate Of Approval

Product number: _____
Production time: _____
QC: _____

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.