 
 
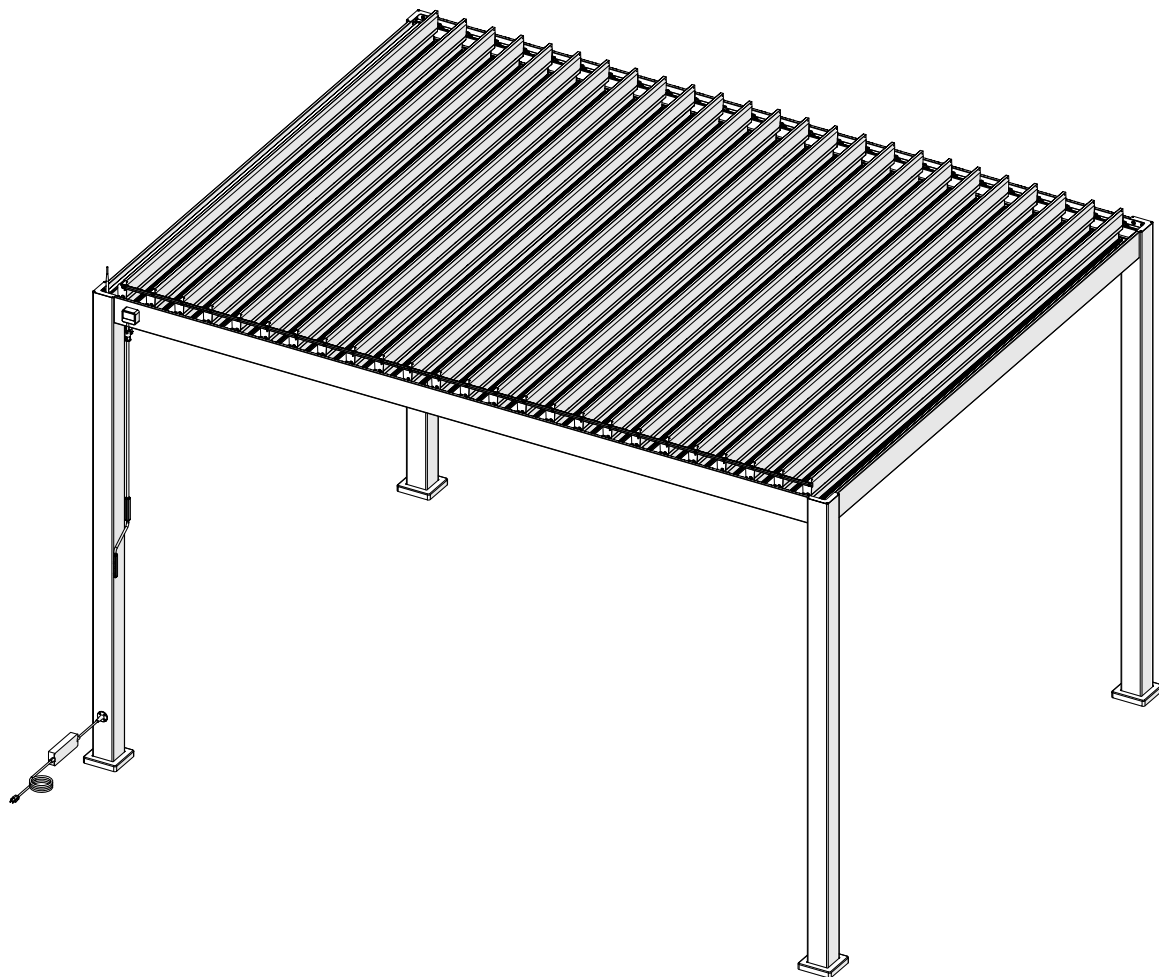 


13. End of installation


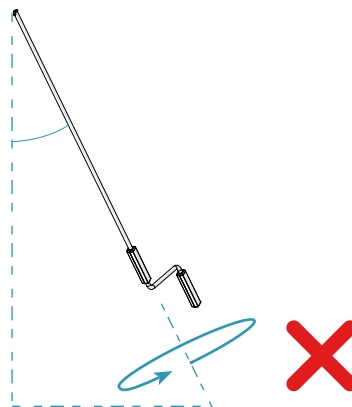


OPERATING YOUR PERGOLA

When opening/closing the louvers, please ensure the crank remains in a vertical position next to the pillar.
Do not move the crank too far away from the pillar.

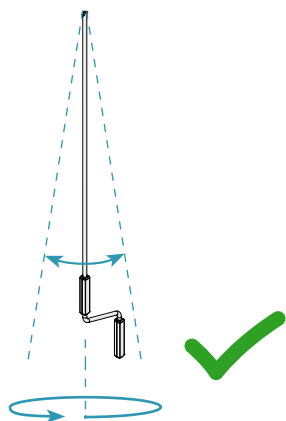


To open the louvers, turn the crank handle clockwise;
To close the louvers, turn the crank handle anti-clockwise.

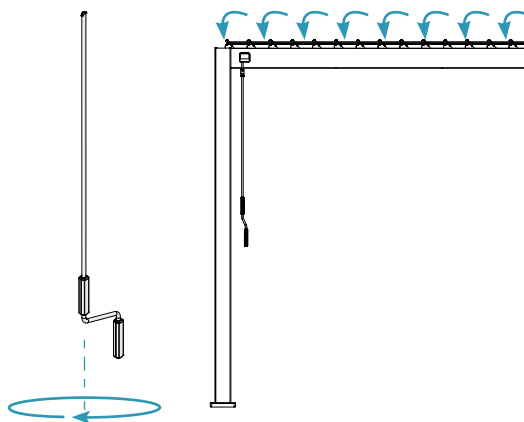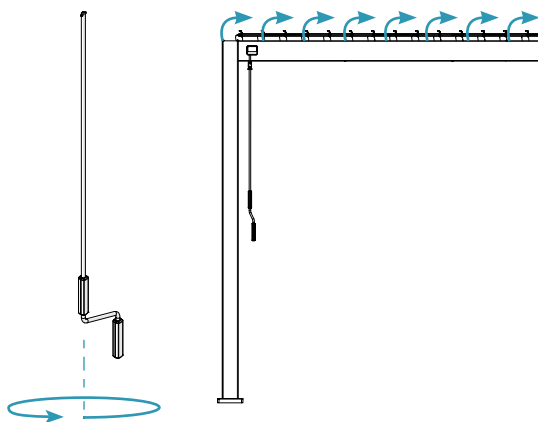

LIGHT STRIP REMOTE CONTROL GUIDE

How to use the remote control

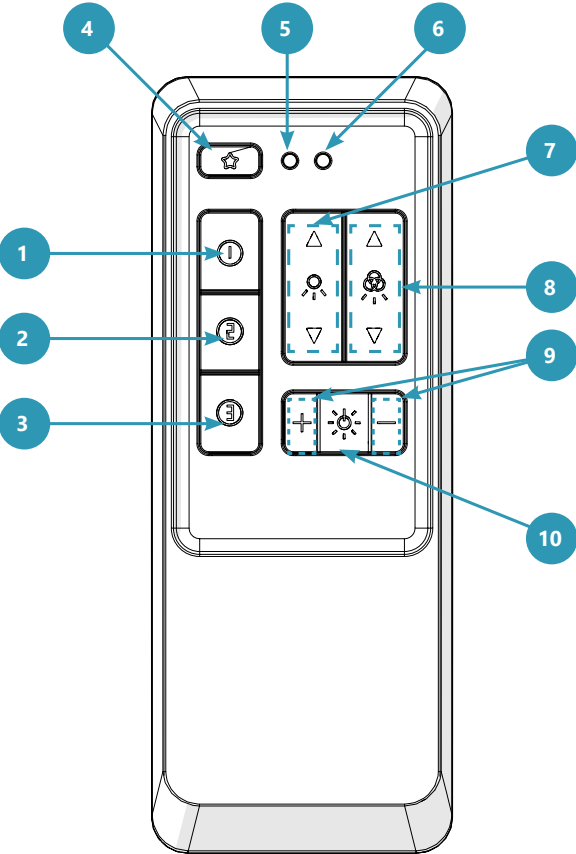

Key	Button/Light	Function
1	Stored favorite 1	Three favorite light modes can be stored. To store your favorite light mode, press and hold the star button 4. When the left light 5 starts flashing, press buttons 1, 2 or 3 to save your favorite light settings. The settings will be saved successfully after releasing the button. The left light 5 will then turn off.
2	Stored favorite 2	
3	Stored favorite 3	
4	Add favorite light setting	Long press for 2 seconds, light 5 will then flash to activate the favorites mode setting
5	Left Light	LED to show favorites mode setting status
6	Right Light	LED indicator for sending signals
7	Select color (△ and ▽)	Toggle between single colors R, G, and B (seven variations in total)
8	Select Dynamic lighting (△ and ▽)	Select from 8 dynamic lighting modes
9	Increase/Decrease brightness	Press + to increase and - decrease brightness (5 levels)
10	ON/OFF	Light Strip On/Off Automatically returns to the last closed state when switched on

Pairing:

Power on and initiate pairing, simultaneously press and hold both 1 and 2 on the remote control. After successful pairing, the light strip will flash twice.



Supplier's Declaration of Conformity Compliance Information

Unique Identifier	
Product Description	LED Pergola
Model Number	111 LED DA / 111 LED S
Trade Name	MIRADOR
FCC Compliance Statement	
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	
Responsible Party - U.S. Contact Information	
Company:	Sorara Outdoor Living USA, Inc.
Address:	15271 Fairfield Ranch Rd. Ste# 180 Chino Hills, CA 91709
Telephone or internet contact information:	1-800-867-9018 – Hello@Sorara.com

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.