

(Fold Inward) — — — — ▶

(Back Cover)

(Front Cover)

Re-Pairing the Earbuds The AR-TWS200 earbuds should pair to each other automatically when powered ON. If the earbuds come un-paired from each other, or only one earbud pairs to your device, try following these instructions to re-pair: - Go to your device's Bluetooth settings and find the earbuds on the list of Bluetooth devices. Tap to manually "Forget" the earbud(s), then turn your device's Bluetooth OFF. - Place the earbuds in their case to power them OFF, then remove them to power them ON again. - After a moment, the earbuds should automatically re-pair to each other. A voice will be heard indicating that they have paired to each other. - Once re-paired, you can now pair the earbuds to your mobile device. Turn your device's Bluetooth back on again. Follow the instructions in the Bluetooth Pairing section of this manual to try pairing again.	Compliance Information FCC Information This device complies with Part 15 of the FCC Rules. Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Radiation Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. WARNING Li-Ion Battery Inside This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F). Rating Label Definitions Direct current symbol. This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency. This symbol signifies that this is a wireless device powered by Bluetooth® technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. used under license. This symbol represents FCC Declaration of Conformity and compliance. RECYCLE 1-800-822-8837
--	--

Before You Begin... Questions and Customer Support For questions, troubleshooting, or any other assistance, please visit our customer support portal at www.customersupport123.com, and click "Support." ⚠️Caution READ THIS MANUAL CAREFULLY AND SAVE FOR FUTURE REFERENCE To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies. • THIS DEVICE IS NOT A TOY, do NOT allow children or pets to use or play with this device. • Do not disassemble, modify, or repair the device. • Do not expose the device to extreme temperatures (heat or cold), open flames, humid, or wet conditions. • Do not submerge in water. • Low power may cause poor Bluetooth connection or sound distortion. • Do not overcharge battery. • If using with a USB adapter, make sure the adapter is not damaged. • Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc. • This device contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device. Technical Specifications • Bluetooth Version: 5.4 • Charging Case Battery: 180 mAh • Charging Case Charge Time: 2 hrs • Earbuds Battery: 30 mAh • Total Playtime: 10 hrs (varies depending on settings and usage) In the Box • AR-TWS200 Wireless Earbuds (x1) • Charging Case (x1) • Charging Cable (x1) • User Manual (x1)	Location of Controls Function Button(s) LCD Battery Display Charging Port (On Bottom of Case)	Getting Started Charging the Case Insert the small connector of the supplied charging cable into the charging port on the bottom of the case. Insert the large connector into a USB power source such as the USB port on a computer, or into a 5V USB adapter (<i>not included</i>) and plug into a wall socket. The case charging LED indicator will show charging progress while charging. Charging the Earbuds Use the included charging case to protect and charge the earbuds as described below. - Make sure that the case is fully charged. - Open the cover of the charging case and place the earbuds into the correct charging ports. They should easily "click" into place and feel secure. - The earbuds' LED indicators will turn RED while charging and turn BLUE, then OFF when fully charged. Note: A tone will be heard when the earbuds are low on battery. Please recharge when this happens.	Powering ON/OFF • The earbuds will automatically power ON when removed from their case, and the LED indicators on the earbuds will flash BLUE. The earbuds will power OFF when placed into their case. • When powered ON, the earbuds will automatically pair to each other and then enter Bluetooth pairing mode. They may automatically re-pair to a previously-paired device in range. • The earbuds can also be powered ON and OFF by <i>pressing and holding</i> either function button for 5 seconds. Note: the earbuds will automatically power OFF if they do not connect to a Bluetooth device after 3 minutes. Adjusting Volume & Playback To listen to music and talk on the phone using your earbuds, you must pair them to a Bluetooth-enabled device. If you are pairing the device for the first time, please see the Bluetooth Pairing section in this manual. Once paired, playback can be controlled through your paired device, or with the earbuds: • 1x press either earbud to PAUSE/RESUME playback. • 2x press left earbud to skip to the PREVIOUS TRACK. • 2x press right earbud to skip to the NEXT TRACK. • Press and hold left earbud for 2 seconds to DECREASE VOLUME. • Press and hold right earbud for 2 seconds to INCREASE VOLUME.	Bluetooth Pairing - Power the earbuds ON. Both of their LED indicators will flash RED and BLUE. - After a moment, a voice will be heard on the earbuds indicating that they have paired to each other. - Set your mobile device to search for Bluetooth devices. When it appears, select "AR-TWS200" from the list of found devices. - Once successfully paired to your device, a tone will be heard, and you will be able to play audio on your earbuds. Pairing Issues? See the Re-Pairing the Earbuds section in this manual. Note: Either earbud can be used independently. Answering/Ending Phone Calls When paired, you can control your paired device's phone functions using your device, or with the Function Buttons: • 1x press either earbud to ANSWER/END a call. • Press and hold either earbud to REJECT an incoming call. • 4x press right earbud to call the PREVIOUS NUMBER. Activating Voice Assistant If your Bluetooth-paired device has a Voice Assistant (Siri, etc.), you can activate it with the earbuds: • 3x press either earbud to ACTIVATE VOICE ASSISTANT.
--	--	---	--	---