

LC-2 user manual

catalogue

1	Product overview.....	2
1.1	Product appearance.....	2
1.2	Technical specifications.....	4
1.2.1	Hardware specifications	4
1.2.2	business specifications.....	4
1.2.3	Environmental specifications.....	5
2	Configuration.....	5
2.1	LC-2 gNB Interface Configuration.....	5
2.2	Ip address configuration.....	6
3	Provisioning of execution and configuration	7
3.1.0	Provisioning of execution and configuration for RF1.....	7
3.1.1	Execution of L1&L2 for RF1	7
3.1.2	Configuration for RF1	7
3.1.3	MIMO (multiple input, multiple output) configuration.....	8
3.1.4	Provisioning of execution and configuration for RF2.....	9
3.1.5	Execution of L1&L2 for RF2.....	9
3.1.6	Configuration for RF2	9
3.1.7	MIMO (multiple input, multiple output) configuration.....	10
3.1.8	Troubleshooting.....	11
4	UHD UPGRADE.....	13
4.1.1	Prerequisite.....	13
4.1.2	REBOOT LC-2Gnb	14
4.1.3	FCC Regulations and RF Exposure	15

1. Product overview

1.1 Product appearance.



Figure 1-1 Equipment appearance

Table 1-1 shows the interface description of LC-2.

Interface name	Number	Interface type	Interface definition	Remarks
LS	4	RJ45	1000Base-T, RJ45	
AC SOCKET	1	AC socket	100V TO 240V AC	
HDMI	1	HDMI	User interface display	
USB	2	USB	USB drives are commonly used for storage, data backup, and transferring files between devices	
HS	1	RJ45	10GPS / synchronous input interface	

Table 1-2 LC-2 LED/ indicator

LED	System LED	Green: on, the system starts normally Green: off, system not started
	Alarm LED	Red: on, any failure on gNB side
	LAN management port	100 / 1000 adaptive, green and yellow LEDs Green (link): on, light port works normally Green (link): off, faulty or not working Red (ACT): flashing, with data transmission Red (ACT): off, no data transmission NOT support 10Mbps
	Backhaul port	Green (link): on, light port works normally Green (link): off, faulty or not working
	FR1	When cell is up with usrp-1
	RF2	Cell is up with rf2
	sync	When us attached with

1.1 Technical Specifications

1.1.1 Hardware specifications

Project	Describe
Installation mode	Indoor lab equipment
Power dissipation	400W
Power module	240V AC
CPU Spec	NUC i9 12 th GEN.
RF card	B210+B210
SSD	500GB
RAM	64GB
LAN management port	4* 1000Base-T, 1X10G RJ45

1.1.2 Business specifications

Project	Description		
Performance	1. Support 1 radiation surface		
	2. Carrier bandwidth: single carrier 20MHz		
	3. Backhaul: 1G Optical interface SFP+		
Compatible design	Supports distributed base stations		
Synchronization mode	1. IEEE1588V2 synchronization		
	2. SyncE synchronization		
Key technology	1. High speed signal, RF requirements for PCB design		
	2. Large power consumption of the system, natural heat dissipation of the system		
Band and bandwidth	Support standard 5G-NR rel-15		
	Support FDD band n2, n5, n66 and Bandwidth: 10MHz & 20MHz		
Frequency Range (MHz)	n2	n5	n66
	1930-1990	869-894	2110-2200
Tune up Tolerance	+/- 2dB	+/- 2dB	+/- 2dB
Tx Spec	For B210 USRP device has two TX/RX port. For TX/RX port TX power 9.95dBm max (RF1+RF2) RX power -15dBm max		
Rx Spec	For B210 USRP device has two RX port. For RX port RX power -15dBm max		

1.1.3 Environmental specifications

Project	Description
Storage temperature / humidity	The equipment shall be able to work or store normally within the following temperature and humidity range: Operating temperature: - 5 ° C to + 45 ° C Storage temperature: - 40 ° C to + 70 ° C Relative humidity: 5% ~ 95% (no condensation)
Heat dissipation mode	Natural convection heat dissipation
Atmospheric pressure	86 Kpa~106 Kpa
Protection level	IP30
Surge	Indoor products, no surge requirements

2.Configuration


2.1 LC-2 gNB Interface Configuration

The parameters of COM connecting LC-2 gNB and PC should be configured as:

Baud rate:115200、Data: 8bit、Parity: none、Stop: 1bit、Flow control noneTransmitdelay: 1msec/char 0 & msec/line,

The IP of GE/FE of PC should be configured as: 192.168.1.100.

The IP of GE/FE of 5GmmW gNB should be configured as: 192.168.1.10 (default setting of the system)

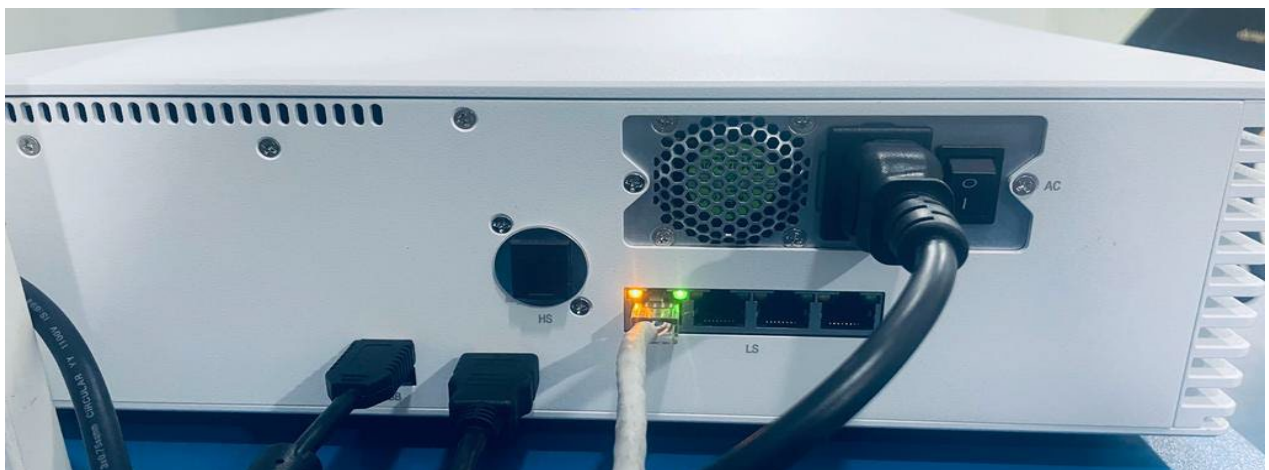

2.2 IP address configuration

The default configuration is static with IP address 192.168.2.15, and you can change this IP following below operations.

Login on board with SSH or serial tool user: user password: root123

Vi /etc/netplan/01-netcfg.yaml Edit 01-netcfg.yaml and enter the static IP address.

Eth0 is for SFP interface Eth1 is for Ethernet interface.

Execute 'netplan apply' and 'sync' command will save this configuration.

DOCUMENT FOR CHANGE IP ADDRESSES

1. ssh to default ip : ssh user@192.168.2.1xx

2. Type Command: sudo -s

For IP Change:

vim /etc/netplan/00-installer-config.yaml

For Single Radio

```
# This is the network config written by 'subiquity'
network:
  version: 2
  renderer: networkd
  ethernets:
    enp109s0:
      optional: true
      addresses:
        - 192.168.20.1/24
      mtu: 9000
    ens1:
      optional: true
      dhcp4: no
      addresses:
        - 192.168.10.1/24
      mtu: 9000
    enp108s0:
      optional: true
      dhcp4: no
      addresses:
        - 192.168.6.252/24
        - 192.168.2.152/24
      nameservers:
        addresses: [8.8.8.8, 8.8.8.4]
      gateway4: 192.168.6.1
      mtu: 1500
```

Change and Save:

- Press i to write. Press esc key, Type :wq and enter to save and exit the file.
- Type Command: netplan apply

3 Provisioning of execution and configuration

3.1.0 Provisioning of execution and configuration for RF1

Provision

1. Open terminals as required (min 3)
 - i. Run the command in all the terminals
`ssh root@192.168.2.15`
`pass- root123`

3.1.1 Execution of L1&L2 for RF1

2. Perform following steps for run processes: -
 - i. To run L1 binary enter following command: -
 -> Go to first tab of terminal and change path for L1
`cd /opt/FCC_DEV0/L1/script`
 -> Run L1 script using the following command
`./runL1.sh`
 - ii. To run MAC_NR binary enter the following commands
 -> Go to second tab and change path for MAC_NR
`cd /opt/FCC_DEV0/L2/src`
 - iii. Enter ls command for checking binary.
 -> If MAC_NR binary is not available so you need to run **make** command and check again using ls command.
 -> Run MAC binary using the following command
`./MAC_NR 0`
 - iv. Wait for some time, when “**L1 is now live**” is visible on console then both processes are up.
 - v. You are able to take observation as required.

3.1.2 Configuration for RF1

3.1.3 Perform following steps for opening configuration file: -

- i. Go to the third tab of terminal
- ii. Enter `cd /opt/FCC_DEV0/L2/cfg` for config path
- iii. Enter `vim config.cfg` to open config file in vim text editor.
- iv. After completion of vim command a list of parameters will appear as shown below.

```

#####
#####
#
#   Name       :   config.cfg
#
#   Description :   This is configuration data file for Initial Configuration of L1.
#                   It contain frequency parameters required for L1.
#
#####
#####
# CONFIGURATION FOR L1
#####
# TDD = 0, FDD = 1
DuplexingMode=1
# Supported Band n2(FDD), n5(FDD), n66(FDD), n77(TDD)
Band=2
# SubcarrierSpacing 15KHz = 0, 30KHz = 1
SCS=0
# Downlink bandwidth, 10MHz BW = 0, 20MHz BW = 1
DL_Channel_Bandwidth=0
# Range 0 - 1000
Tx_Gain=1000
# Downlink ARFCN pointA
Frequency_PointA=388000
# Downlink ARFCN SSB
Absolute_Frequency_Ssb=388360
# UL frequency needed if FDD is present
ulPointA_present=1
# Uplink ARFCN pointA if FDD is Present
ul_Frequency_pointA=372000
# Modulation scheme QPSK = 0, 16-QAM = 1 64-QAM = 2
Modulation_Scheme=0
-
-

```

- Note : When you want to change frequency according to band, first edit config file of L2 of RF1 (above pic) then save it. After saving first run L1 of RF1 by using `./runL1.sh` and then L2 of RF1 by using `./MAC_NR 0`

 
Perform following steps to modify configuration file :-

- Go to the insert mode by pressing `i` key and edit the parameter.
- To save the file press `ESC` and type command `:wq` then press `ENTER`
- If don't want to save file, press `ESC` and enter command `:q!` then press `ENTER`

3.1.3 MIMO (multiple input, multiple output) configuration for RF1


Note : No need to change any parameter in this configuration file. AMT have updated all parameter here.

- open new terminal and run the command below
- `sudo vim /opt/FCC_DEV0/L1/cfg/L1_NR.cfg`



```
root@127:~# sudo vim /opt/FCC_DEV0/L1/cfg/L1_NR.cfg
```

- After running this command `L1_NR.cfg` file will open shown in the picture below

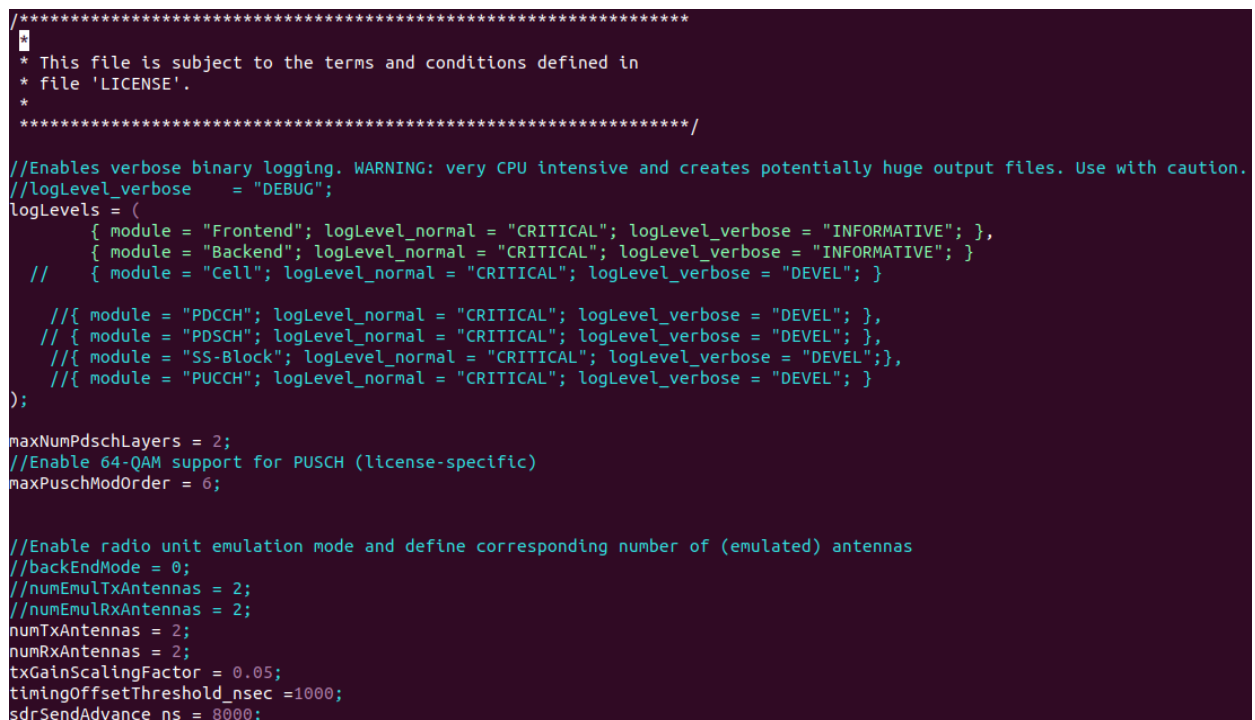

```

/*****
 * This file is subject to the terms and conditions defined in
 * file 'LICENSE'.
 *****/

//Enables verbose binary logging. WARNING: very CPU intensive and creates potentially huge output files. Use with caution.
//LogLevel_verbose = "DEBUG";
logLevels = (
    { module = "Frontend"; logLevel_normal = "CRITICAL"; logLevel_verbose = "INFORMATIVE"; },
    { module = "Backend"; logLevel_normal = "CRITICAL"; logLevel_verbose = "INFORMATIVE"; }
    // { module = "Cell"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; }

    // { module = "PDCCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    // { module = "PDSCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    // { module = "SS-Block"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    // { module = "PUCCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; }
);

maxNumPdschLayers = 2;
//Enable 64-QAM support for PUSCH (license-specific)
maxPuschModOrder = 6;

//Enable radio unit emulation mode and define corresponding number of (emulated) antennas
//backEndMode = 0;
//numEmulTxAntennas = 2;
//numEmulRxAntennas = 2;
numTxAntennas = 2;
numRxAntennas = 2;
txGainScalingFactor = 0.05;
timingOffsetThreshold_nsec = 1000;
sdrSendAdvance_ns = 8000;

```

- As mention above in the picture the highlight portion, we can change MIMO configurations here.

Perform following steps to modify L1_NR.cfg configuration file :-

- i. Go to the insert mode by pressing i key and edit the parameter as required.
- ii. To save the file press ESC and type command :wq then press ENTER
- iii. If don't want to save file, press ESC and enter command :q! then press ENTER

3.1.4 Provisioning of execution and configuration for RF2

3.1.6 Provision

1. Open terminals as required (min 3)

- i. Run the command in all the terminals

ssh root@192.168.2.15

pass- root123

3.1.5 Execution of L1&L2 for RF2

2. Perform following steps for run processes:-

- i. To run L1 binary enter following command :-

-> Go to first tab of terminal and change path for L1Path

cd /opt/FCC_DEV1/L1/script

-> Run L1 Binary using the following command

./runL1.sh

- ii. To run MAC_NR binary enter the following commands

-> Go to second tab and change path for MAC_NR

cd /opt/FCC_DEV1/L2/src

- iii. Enter ls command for checking binary.

-> If MAC_NR binary is not available so you need to run **make** command and check again using ls command.

-> Run MAC binary using the following command

./MAC_NR 1

- iv. Wait for some time, when "**L1 is now live**" is visible on console then both processes are up.

- v. You are able to take observation as required.

3.1.6 Configuration for RF2

3. Perform following steps for opening configuration file :-

- i. Go to the third tab of terminal

- ii. Enter **cd /opt/FCC_DEV1/L2/cfg** for config path

- iii. Enter **vim config.cfg** to open config file in vim text editor.

iv. After completion of vim command a list of parameters will appear as shown below

```
#####
#####
#
#   Name       :   config.cfg
#
#   Description :   This is configuration data file for Initial Configuration of L1.
#                   It contain frequency parameters required for L1.
#
#####
#####
# CONFIGURATION FOR L1
#####
# TDD = 0, FDD = 1
DuplexingMode=1
# Supported Band n2(FDD), n5(FDD), n66(FDD), n77(TDD)
Band=2
# SubcarrierSpacing 15KHz = 0, 30KHz = 1
SCS=0
# Downlink bandwidth, 10MHz BW = 0 , 20MHz BW = 1
DL_Channel_Bandwidth=0
# Range 0 - 1000
Tx_Gain=1000
# Downlink ARFCN pointA
Frequency_PointA=388000
# Downlink ARFCN SSB
Absolute_Frequency_Ssb=388360
# UL frequency needed if FDD is present
ulPointA_present=1
# Uplink ARFCN pointA if FDD is Present
ul_Frequency_pointA=372000
# Modulation scheme QPSK = 0, 16-QAM = 1 64-QAM = 2
Modulation_Scheme=0
~
~
32,26 All
```

Note : When you want to change frequency according to band, first edit config file of L2 of RF1 (above pic) then save it. After saving first run L1 of RF2 by using `./runL1.sh` and then L2 of RF2 by using `./MAC_NR 1`

Perform following steps to modify configuration file :-

- i. Go to the insert mode by pressing `i` key and edit the parameter.
- ii. To save the file press `ESC` and type command `:wq` then press `ENTER`
- iii. If don't want to save file, press `ESC` and enter command `:q!` then press `ENTER`

3.1.7 MIMO (multiple input, multiple output) configuration for RF2

Note : No need to change any parameter in this configuration file. AMT have updated all parameter here.

- i. open new terminal and run the command below
- ii. `sudo vim /opt/FCC_DEV1/L1/cfg/L1_NR.cfg`

```
root@127:~# sudo vim /opt/FCC_DEV0/L1/cfg/L1_NR.cfg
```

- iii. After running this command `L1_NR.cfg` file will open shown in the picture below

```

/*****
 *
 * This file is subject to the terms and conditions defined in
 * file 'LICENSE'.
 *
 *****/

//Enables verbose binary logging. WARNING: very CPU intensive and creates potentially huge output files. Use with caution.
//LogLevel_verbose = "DEBUG";
logLevels = (
    { module = "Frontend"; logLevel_normal = "CRITICAL"; logLevel_verbose = "INFORMATIVE"; },
    { module = "Backend"; logLevel_normal = "CRITICAL"; logLevel_verbose = "INFORMATIVE"; }
    // { module = "Cell"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; }

    //{ module = "PDCCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    //{ module = "PDSCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    //{ module = "SS-Block"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; },
    //{ module = "PUCCH"; logLevel_normal = "CRITICAL"; logLevel_verbose = "DEVEL"; }
);

maxNumPdschLayers = 2;
//Enable 64-QAM support for PUSCH (license-specific)
maxPuschModOrder = 6;

//Enable radio unit emulation mode and define corresponding number of (emulated) antennas
//backEndMode = 0;
//numEmulTxAntennas = 2;
//numEmulRxAntennas = 2;
numTxAntennas = 2;
numRxAntennas = 2;
txGainScalingFactor = 0.05;
timingOffsetThreshold_nsec = 1000;
sdrSendAdvance_ns = 8000;

```

iv. As mention above in the picture the highlight portion, we can change MIMO configurations here.

Perform following steps to modify L1_NR.cfg configuration file :-

- i. Go to the insert mode by pressing i key and edit the parameter as required.
- ii. To save the file press ESC and type command :wq then press ENTER
- iii. If don't want to save file, press ESC and enter command :q! then press ENTER

3.1.8 Troubleshooting

In any case if you are not able to do the ssh or getting trouble while accessing hardware connect monitor through HDMI/VGA cable. You will get username window then enter Username as User and Password root123.

If you get blue screen then enter ctrl+alt+f3. Enter username as User and Password is root123.

Once the authentication done enter command ifconfig for checking the IP address.

```
root@usermachine:/home/user# ifconfig

device memory 0x83400000-834fffff

enp11s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 9000
inet 192.168.20.1 netmask 255.255.255.0 broadcast 192.168.20.255
inet6 fe80::1e69:7aff:fed0:9959 prefixlen 64 scopeid 0x20<link>
ether 1c:69:7a:d0:99:59 txqueuelen 1000 (Ethernet)
RX packets 9 bytes 2328 (2.3 KB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 60 bytes 6806 (6.8 KB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enp8s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 9000
inet 192.168.10.1 netmask 255.255.255.0 broadcast 192.168.10.255
inet6 fe80::230:93ff:fe10:2ec9 prefixlen 64 scopeid 0x20<link>
ether 00:30:93:10:2e:c9 txqueuelen 1000 (Ethernet)
RX packets 9 bytes 2232 (2.2 KB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 69 bytes 8453 (8.4 KB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enx00e04c6800f0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 192.168.40.1 netmask 255.255.255.0 broadcast 192.168.40.255
inet6 fe80::2e0:4cff:fe68:f0 prefixlen 64 scopeid 0x20<link>
ether 00:e0:4c:68:00:f0 txqueuelen 1000 (Ethernet)
RX packets 12 bytes 2383 (2.3 KB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 63 bytes 7310 (7.3 KB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

lo: flags=73<UP,LOOPBACK,RUNNING> mtu 65536
inet 127.0.0.1 netmask 255.0.0.0
inet6 ::1 prefixlen 128 scopeid 0x10<host>
loop txqueuelen 1000 (Local Loopback)
RX packets 80 bytes 8120 (8.1 KB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 80 bytes 8120 (8.1 KB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

uetraf1f0: flags=4305<UP,POINTOPOINT,RUNNING,NOARP,MULTICAST> mtu 1500
inet 60.0.68.64 netmask 255.255.255.0 destination 60.0.68.64
inet6 fe80::87ff:5713:70d:cb5d prefixlen 64 scopeid 0x20<link>
unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 txqueuelen 500 (UNSPEC)
RX packets 0 bytes 0 (0.0 B)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 0 bytes 0 (0.0 B)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

root@usermachine:/home/user#
```

password – root123

```
user@usermachine:~$ sudo su
sudo: unable to resolve host usermachine: Temporary failure in name resolution
[sudo] password for user:
root@usermachine:/home/user# vi /etc/netplan/00-installer-config.yaml
```

If you want to change the ip then enter **vi /etc/netplan/00-network-manager-all.yaml**. Once you enter press insert and change the IP address mention in the below picture.

```
# This is the network config written by 'subiquity'
network:
  version: 2
  renderer: networkd
  ethernets:
    enp111s0:
      optional: true
      addresses:
        - 192.168.20.1/24
      mtu: 9000
    enp8s0:
      optional: true
      dhcp4: no
      addresses:
        - 192.168.10.1/24
      mtu: 9000
    enp110s0:
      optional: true
      dhcp4: yes
      addresses:
        - 192.168.2.102/24
      nameservers:
        addresses: [8.8.8.8, 8.8.8.4]
      gateway4: 192.168.2.1
      mtu: 1500
    #addresses:
    #
    enx00e04c6800f0:
      optional: true
      dhcp4: no
      addresses:
        - 192.168.40.1/24
```

4.UHD UPGRADE

4.1.1 Prerequisite:

1. Sub_6GHz Hardware should be connected with internet
2. Command: `vim /etc/resolv.conf` nameserver 127.0.0.53 change it to 8.8.8.8 save and close file.
3. Now check ping google.com it's output should be like below

64 bytes from del03s16-in-f14.1e100.net (172.217.167.46): icmp_seq=1 ttl=117 time=7.05 ms

Steps to upgrade UHD

if your are facing error something like -:

```
{
Reading package lists... Done
Building dependency tree
Reading state information... Done
E: Unable to locate package uhd-packages
root@phluido-NUC9i9QNX:~# apt-get purge libuhd-dev
Reading package lists... Done
Building dependency tree
Reading state information... Done
You might want to run 'apt --fix-broken install' to correct these.
}
```

run this command -: `apt --fix-broken install`

run below given command

1. `sudo apt-get remove uhd-host`
2. `sudo apt-get remove --auto-remove uhd-host`
3. `sudo apt-get purge uhd-host`
4. `sudo apt-get purge --auto-remove uhd-host`

while running these commands it will ask for permission Y/n then enter Y.

- `dpkg -l | grep uhd`

`apt-get purge uhd-packages`

vim /etc/apt/sources.list

deb https://ppa.launchpadcontent.net/ettusresearch/uhd/ubuntu bionic main

deb-src https://ppa.launchpadcontent.net/ettusresearch/uhd/ubuntu bionic main

append above two lines, sva e& close files.

Now run command: apt-get update

while updating it sometimes throws error for key then

apt-key adv --keyserver keyserver.ubuntu.com --recv-keys received keys

Now again run apt-get update

run **apt-get install libuhd-dev uhd-host -y**


run uhd_find_devices

it's output should look like below screen shot:

uhd_usrp_probe

vi /opt/serial.txt

sdrDeviceParams = "serial=3228543"

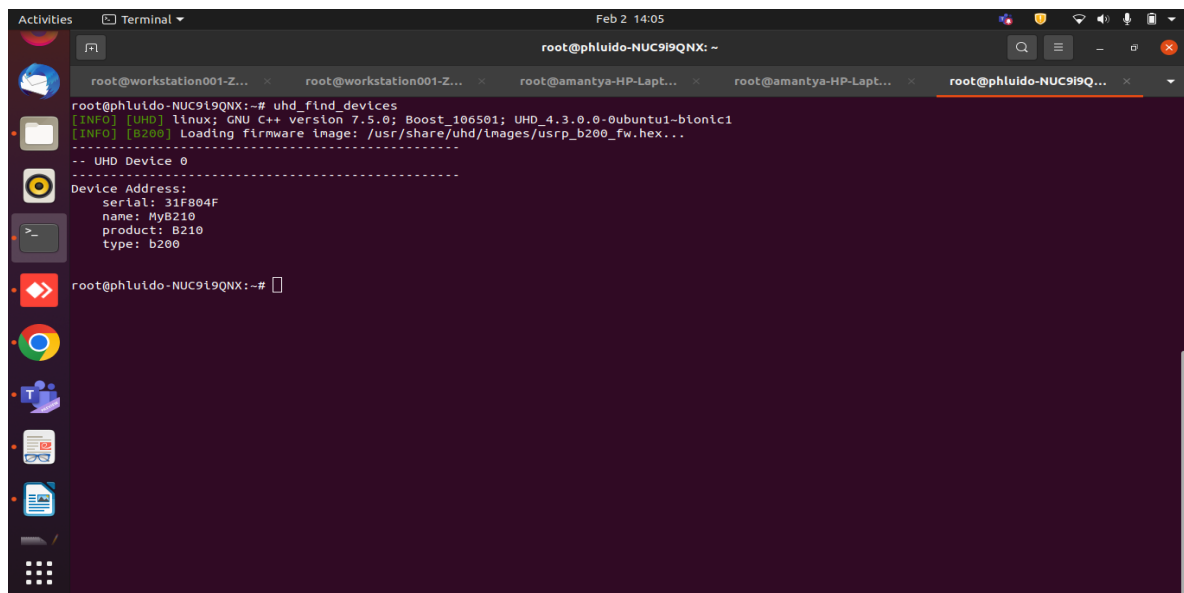

```
root@phluido-NUC919QNX:~# uhd_find_devices
[INFO] [UHD] Linux: GNU C++ version 7.5.0; Boost 106501; UHD 4.3.0.0ubuntu1-bionic1
[INFO] [B200] Loading firmware image: /usr/share/uhd/firmware/uhd_usrp_b200_fw.hex...
-----
-- UHD Device 0
-----
Device Address:
  serial: 31F804F
  name: MyB210
  product: B210
  type: b200
root@phluido-NUC919QNX:~#
```

4.1.2 REBOOT LC-2 gNB

Note: In case you face the problem like that uhd is not found or you just want to restart the hardware

Run the below command for rebooting the hardware

reboot -f

4.1.3 FCC Regulations and RF Exposure

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 87cm (34 inches) during normal operation.

Amantya Technologies, inc

2803, Philadelphia Pike, Suite B 304, Claymont, DE 19703, United States

Anuradha Gupta

anuradha@amantyatech.com

This LC-2, model no: 5GTP202SSn2566 requires training professionals qualified by Service Provider to configure and install the product. This device complies with FCC rules and regulations for fixed-mounted on indoor permanent structure in commercial/business premises excluding private resident/property. This device is distributed through controlled distribution channel and requires that trained professionals to install this product, and this device will not be sold directly

to the general public through retail stores.

This LC-2, model no: 5GTP202SSn2566 must be installed to provide at least 87cm separation distance from bystanders to comply with the General Population /Uncontrolled MPE limit and requirements. RF exposure compliance may need to be addressed at the time of licensing, as required by the responsible FCC bureau(s) including mitigation actions for fixed RF sources to the extent necessary to ensure compliance with FCC exposure limits per section §1.1307(b)(4)

