

life's easy

Download App :

Scan the QR code below to download the application
(To ensure safe use, it may be necessary to upgrade your mobile operating system.)



Life's Easy Inc

9220 Cleveland Ave, Ste 102

Rancho Cucamonga, CA 91730

Email: info@shoplifeseeasy.com

Customer Service Number : +1(626) 567-0876

For more details, please refer to the official website: <https://shoplifeseeasy.com>

Life's Easy Smart Precision Cooker (C300)

Product Operation Manual (attached with quality assurance card)

Important

Thank you for purchasing the "Life's Easy Smart Precision Cooker (C300)". Please read this manual carefully before using the product.

The intended use of this product is to cook food in the home environment. Please be sure to read the "Safety Precautions". Do not use the product under the circumstances of exceeding its intended purpose, otherwise it may cause product damage or even personal injury.

Contents



Safety Precautions	1~4
Package Content	5
Component Display	6
Start Cooking	7
Gear Use Guide	8
Indicator Light Instruction	9
Connection With APP	10
Screen Display Illustration	11
Specifications And Parameters	12
Self-inspection Of Abnormal Phenomenon	13
Environmental Protection List	14
Warranty Terms	15
Product Warranty Card	16

Safety Precautions



Warning: The hazard and loss caused by improper use shall be marked with a prompt, indicating that "death may be caused or seriously injured" "or" may cause property and housing loss "or" the content that can not be implemented (prohibited) or the content that may damage the product.

Use Precautions :



Do not allow people with sensory or mental disabilities, people with disabilities, or people without experience and knowledge to use this product on their own, unless they are under the supervision and guidance of their surroundings. And even if children are under supervision, please do not let children play with this product to avoid scalding, injury, or electric shock.



Do not disassemble, repair, or transform by yourself. It may cause malfunction and fire. Please contact Life's Easy Customer Service Center (P.15) for maintenance.



Please do not use near the curtains and other combustibles. It may cause fire and fire.



Do not immerse this product in water or splash it with water. Otherwise, electric shock and fire may be caused.



Do not use wet hands to plug or unplug the power plug or body power connector. This may result in electric shock.



Do not touch the parts outside the knob during and after cooking. The cooking process will bring high temperatures, which may cause scalding.



Do not use the power cord under the load. Do not perform the following actions on the power cord to avoid heating or even fire: damage/processing/close to heat source/bend/pull/use under binding/tread/twist/place under heavy objects.



Do not use this product on any other cooking products. Otherwise, it may cause damage or fire to the product.



Do not place and use non-household kitchen utensils on this product or for purposes other than cooking. Otherwise, it may cause damage or fire to the product.



Please place this product in a flat and stable place. Otherwise, it may cause the cooker to slip. Electric shock may be caused by liquid removal.



If this product and other electrical appliances are connected to the same socket, please make sure that the socket is grounded, which may cause damage to the product, fire, or electric shock.



The distance between this product and the wall or other cooking appliances shall not be less than 10cm to ensure normal heat dissipation and prevent this product and other products in use from becoming each other's heat source. Otherwise, it may cause fire or damage to the product.

Safety Precautions

-  Before the pot is placed on the furnace surface, please make sure that the bottom of the pot is free of foreign matter or sauce and other stains. Otherwise, it may cause fire, smoke, and damage to the hot plate.
-  Please do not place any utensils on the furnace surface except the pots and pans for home cooking. Otherwise, it causes fire and damage to appliances.
-  Do not touch the power cord with hot surfaces or open flames, including the stove. Otherwise, it may lead to product damage, electric shock, and fire.
-  Do not place pots and tools with a bottom diameter of more than 22cm on the furnace surface, which may cause damage to the product or scald due to pot tipping.
-  Do not cover or cover the vent with any object. Otherwise, it may cause product damage and fire.
-  If the power cord is damaged, it must be replaced with a special cord, or a special assembly purchased from the manufacturer or maintenance department. The use of a non-dedicated power cord may cause product damage and fire.
-  Do not press the temperature sensor with anything without placing the cooker. Otherwise, it may cause burns, fire, or damage to the product.

Safety Precautions

Precautions for cleaning and maintenance :

-  When it is not used for a long time, the power plug must be unplugged, and moisture-proof, dust-proof, sunscreen and insect-proof measures must be taken, otherwise, it may lead to product damage.
-  When cleaning, maintaining, or moving this product, please unplug the power plug and wait for it to completely cool down. Clean the furnace after drying the water on the furnace surface after cooling. Personal injury or product damage may be caused if not.
-  Please keep the drain clean, so that the drain channel is unblocked, and the drain may be blocked by liquid splashing or spilling.
-  Do not use acid cleaner or steam cleaner to clean this product if the machine fails. It may cause discoloration and damage to the product's appearance.
-  Do not soak the cable in liquid for cleaning, which may cause electric shock and machine damage.
-  Do not use scraping cleaning cotton or abrasive cleaner to clean this product. Otherwise, it may cause discoloration and damage to the product's appearance.

Package Content



Intelligent electric heater host x 1




Power cord x 1



Product Manual

Safety Precautions

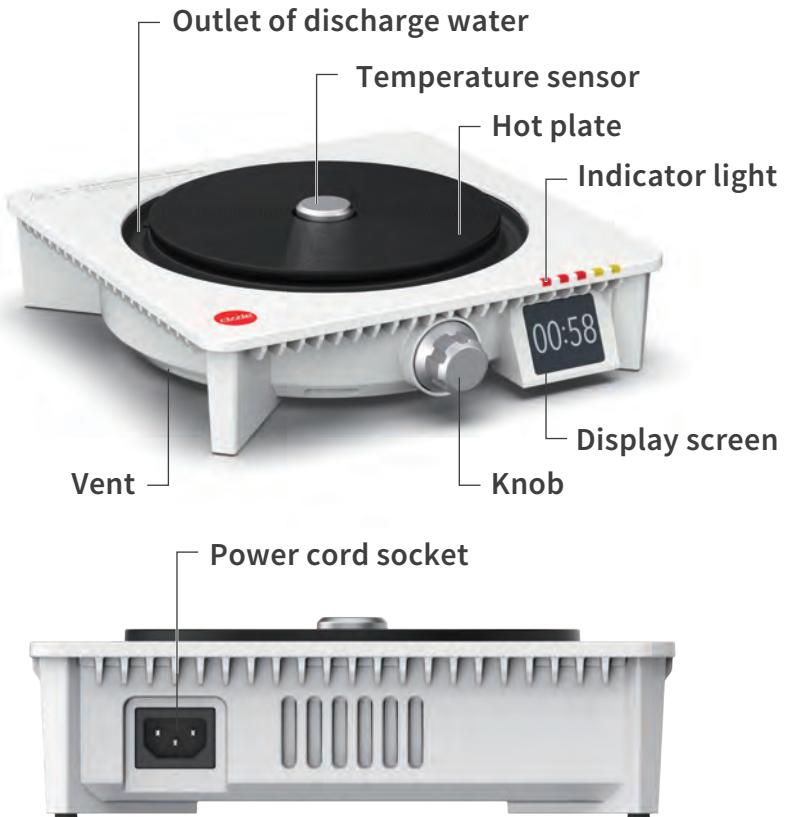


The illustrations in the document are for reference only and may be slightly different from the actual product.

Start Cooking




1 Connect the power cord and plug it in.

Be sure to properly connect the power cord to the electric heater before properly inserting the power plug into the socket.

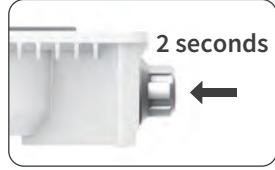

2 Press the knob for 2 seconds to turn it on/off.

Press and hold the knob for 2 seconds to start the machine, and then let go after the screen lights up. Press and hold the knob for 2 seconds after startup to shut down.

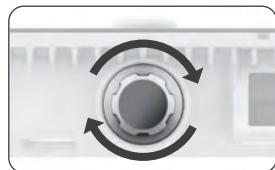

3 Turn the knob to select the cooking gear.

This product provides five intelligent temperature control cooking gears, 1 for the minimum fire, and 5 for the maximum fire. For details, please refer to the Recommended Gear Instructions (P8).



4 Press and turn the knob to set the timing.

During cooking, press and hold the knob and turn it immediately to set the timing. Release the knob to start the timing. After the timing is over, a prompt tone will be given, and the heating will be stopped to enter the standby mode.

Gear Use Guide

Gear	Cooking Advice	Default Timing
1	Sous vide steak,lamb chop,fish,shrimp	360 minutes
2	Stew, soup, boiled eggs without water	120 minutes
3-4	Muffin, fried fish, potstickers, hot pot, smokeless fried vegetables	60 minutes
5	Stir-fried, fried, Pan-fried steak	30 minutes

 
 
! When using level 1 for Shufei water bath cooking, 2.5 liters of water should be added to the pot, and the food in the pot is completely immersed in the water. Preheat for at least 20 minutes before adding ingredients to obtain a more accurate temperature control effect.

! If the gear is switched, the screen will display the default timing of the gear after switching, and the countdown will start immediately.

! Cooking suggestions for fried dishes: Use a 5-gear preheating pan. When the temperature reaches a high temperature suitable for cooking, the screen background will turn red. At this time, it is recommended to heat the pan and cool the oil to achieve the cooking effect that is not easy to stick to the pan.

Indicator Light Instruction

Off  Yellow light  Red light  Flashing

Status Of Indicator Light	Meaning
All indicator lights are Off 	Turn-off
All indicator lights are Yellow 	Standby
Part of indicator lights are Red 	Heating in target gear
The last red-light flashes alternately 	Target gear has been reached and thermal insulation has been carried out
Mixed flashing 	Pans and pots not placed correctly
ALL yellow indicator lights are flashing 	In pairing state
Marquee 	Running Cooking Program
All red indicator lights are flashing 	Wait for operation

Connection With APP



1 Set up your phone or tablet. Connect your phone or tablet to the network and turn on Bluetooth (some phones may need to turn on the Location Service in the phone settings).

2 Download the app. Search the "small white stove remote control" in the mobile phone application store or scan the QR code in the left figure to download the application (to ensure safe use, you may need to upgrade your mobile phone operating system).

3 Match the electric stove with the App. Press and hold the knob for 7 seconds until the whole row of indicators flashes together. Click "Add Device" at the top right corner of the app to complete the connection. The display of "current temperature" indicates that the connection is successful. Some Android phones may need to select "C300J device to pair manually in the Bluetooth menu.

4 Use the App to cook. After selecting the function button in the App, click "Start" to start the cooking program. At this time, the stove body screen displays the Bluetooth icon. Click Cancel to end the cooking procedure.

Screen Display Illustration

00:00

If all the numbers are zero, it means that it is in standby status.

00:58

Countdown is in progress. When time ends, it will stop heating.

00:26

The background turns red, indicating that it is warmed up to a higher temperature suitable for cooking.

:19

Only the number displayed on the right side indicates the countdown. Time left is less than one minute.



Display this sign to indicate that you are in standby mode. There is still a high residual temperature under the condition of standby.



Show Bluetooth icon to indicate App is under control. If the icon flashes, it means it is in pairing mode.



The illustrations in the document are for reference only and may be slightly different from the actual product. The actual product shall prevail.

Specifications And Parameters



Product Name	Life's Easy Smart Precision Cooker C300
Rated power	1500W
Rated voltage/frequency	120V AC 60Hz 1700W
Weight	2.54kg
Measurement	270x255x78 (Unit: mm)
Wireless connection	BLE/Wi-fi/BT BR/EDR
Place of production	Shenzhen, China
Standards implemented	

Self-inspection Of Abnormal Phenomenon

Unable to power on

- Are both ends of the power cord properly connected?
► Please check the connection between the power cord, the body and the socket, and plug it firmly.

- Is the power supplied?
► Please check whether the socket is powered or try to connect with other appliances.

No response when turning the knob

- Is the machine started?
► Press and hold the knob for 2 seconds to release it, turn the knob after the screen lights up.

- Are you using App to control?
► Exit the cooking program in progress in the App, or restart the computer.

Self-inspection Of Abnormal Phenomenon

Unable to pair Bluetooth

- Is the Bluetooth function of the smartphone/tablet enabled?
► Operate on the smartphone/tablet to enable the Bluetooth function.

- If press and hold the knob for 7 seconds to enter pairing mode?
► Press and hold the knob for 7 seconds until the flashing Bluetooth icon is displayed on the screen, and then try to connect with Phone pairing.

- If it is an Android device, has the Location Service function been enabled?
► Operate and enable the Location Service function on Android devices.

The heating stopped while cooking

- Use the default safety timing for cooking, and stop heating at the end of the time.Turn the knob to select the gear again.

Warranty Terms

Service commitment :

- If the product has faults, please contact the after-sales service center of the company.
- Life's Easy Smart precision Cooker C300 is guaranteed for one year.
- The spare parts, packaging, and appearance loss outside the whole machine are not covered by the warranty.
- The start date of the warranty period is the date when the consumer receives the product.
- If the date of receiving the product cannot be provided, the date of release of the valid warranty certificate shall be taken as the starting date of the warranty period.

Warranty voucher :

The valid warranty certificates for product after-sales service are purchase invoices and online purchase certificates. The following conditions are not covered by the warranty.

- Damaged by the user due to improper transportation, loading, or storage.
- Damage caused by disassembly and repair by users.
- Failing to follow the operation steps and precautions in the manual, resulting in product failure.
- The purchase voucher cannot be provided.
- Failures caused by unexpected disasters and accidents, such as fire, flood, lightning, explosion, voltage instability, etc.
- Exceeding the warranty period.



Customer service hotline: +1(626) 567-0876

Working hours: Monday to Friday 8:30 ~17:30

Product Warranty Card

Product Name: Life's Easy Smart precision Cooker Mode: C300

Warranty Period: 1 year from the date of purchase Object: Whole machine

Customer Information	Name:
	Address:
	Contacts:

※ Sales Shop

Purchase Date: _____ Year _____ Month _____ Date

The processing method of personal data obtained during maintenance:

- 1) Life's Easy Inc uses customer's personal information when responding to customer maintenance and confirming products.
- 2) Except for the following circumstances, the Company will not provide information to a third party :
 - a. Entrusting external maintenance, confirming the maintenance status, and sending products.
 - b. In accordance with the law.

This product warranty card guarantees the normal use of the product in accordance with the user manual, host label, and other precautions during the warranty period. In case of any fault under the status, the maintenance shall be free of charge according to the contents of this card.

Life's Easy Inc

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

IC WARNING

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1.This device may not cause interference.

2.This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment should be installed and operated with minimum distance between 20cm the radiator your body

- French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1.L'appareil ne doit pas produire de brouillage;

2.L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps