

6+

CONTENTS

2x RC Demolition vehicles (Red & Blue)


2x Remote Controls

BATTERY INSTALLATION

Each vehicle requires 3 AAA 1.5V batteries (not included) and each remote requires 2 AA 1.5V batteries (not included).

Use a Phillips head or Cross screwdriver to loosen the screw securing the battery cover on the bottom of the vehicle and back of the remote. Insert the batteries, ensuring the correct polarity. Replace the battery cover and tighten the screw.

PLAY

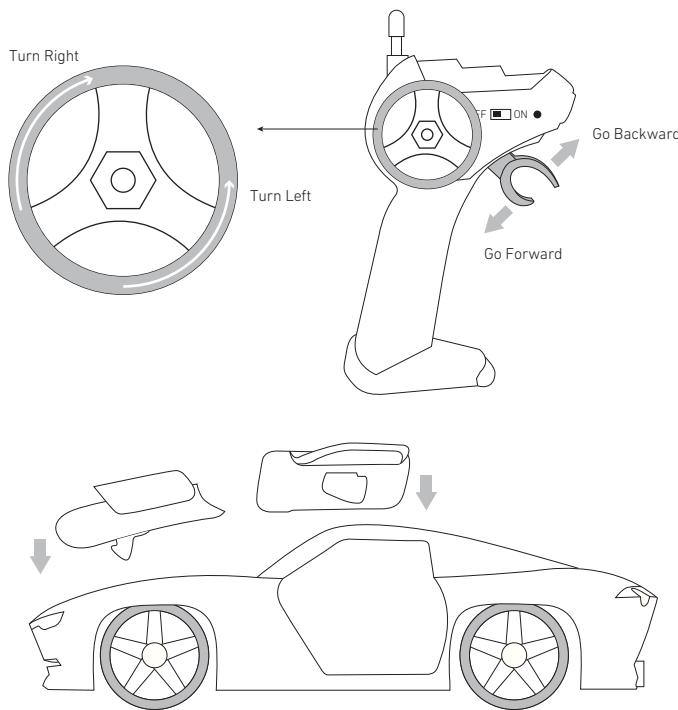

1. Flip the power switch on the remote and vehicle to ON. The remote pair light will start blinking. It will turn solid when paired.
2. Control the vehicle using the remote-control wheel & trigger. Pulling the trigger toward the grip propels the vehicle forward; pushing the trigger away from the grip propels the vehicle backward. Turning the wheel clockwise turns the vehicle right; counterclockwise turns the vehicle left.
3. When the front end of the vehicle hits an obstacle, the hood and doors will pop off. To reset the vehicle, line up the raised tab on the hood and doors with the holes on the vehicle and press until hearing a "click". Make sure to tuck the clear line into the cavity to ensure a secure fit.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE

© 2021 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

SAFETY PRECAUTIONS

- Do not use people or animals as obstacles.
- Never operate your vehicle in inclimate weather, rain, or standing water.
- Keep fingers, hair and loose clothing away from wheels while vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Adult supervision is recommended when operating the vehicle.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING:

CHOKING HAZARD - Small Parts. Not For Children Under 3 Years.

Model No.: 1016341

Due to continuous product improvements, the picture on the manual may differ slightly from the actual product.

FOR TECHNICAL SUPPORT, PLEASE CALL

1-800-374-2744