

FCC Warning:
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




Note: Due to the continuous improvement of the product, the parameters may change without notice. The picture may differ from the actual product, and the actual product shall prevail.

User Manual

Wireless Microphone System

And The Specifications

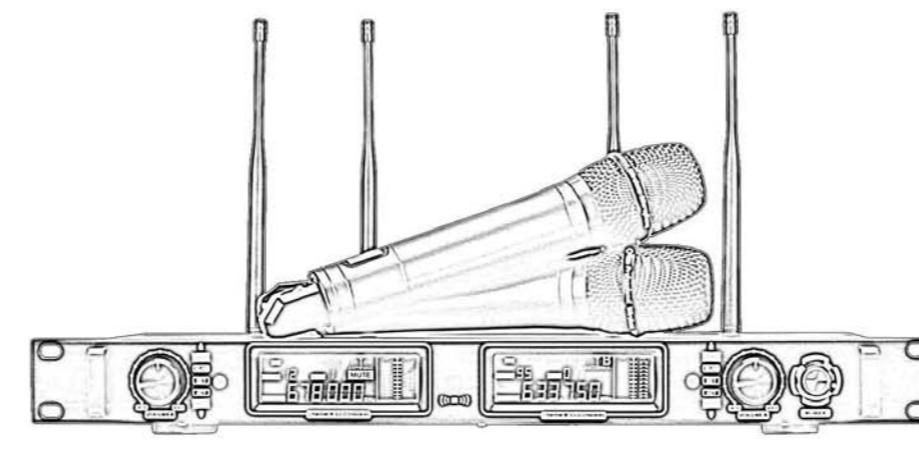

Please Read the Manual Before Use.

Preface

Thank you for your support and trust our company in purchasing our multi-channel microphone products. In order to maximize the performance of this product, please read the instruction manual carefully before use to understand the correct operation method and get the well experience.

Content


Preface and Content	1
Receiver	2
Receiver LCD Display and Installation Instructions	5
Handheld Transmitter and How to Correctly Hold a Microphone	4
Bodypack Transmitter	5
Conference (Desktop) Transmitter	6
How to Sync the Transmitter	7
Precautions	8
Specifications	9
Performance Connection Example	10
Karaoke Connection Example	11
Security and Environment	12

1
Receiver Installation Instructions

- The two antennas are installed on the antenna base A and B of the back panel, and the angle between the two antennas should be adjusted at about 90 degrees.
- Plug the external power supply into the back panel. (Note that the local supply must meet the requirements of this system)
- Adjust the volume to the minimum, press and hold the power switch for about 2 seconds after turning on the power, at this time the LCD should display a normal screen.
- Adjust each function to keep the receiver in the desired state. (For detailed instructions, see LCD panel operating instructions)
- After use press the power switch for 2 to 5 seconds to turn off the power supply. The LCD screen turns off automatically.

LCD Display Instruction

1. Channel number
2. Lock function
3. Transmitter battery life
4. Frequency number
5. Antenna status
6. Audio signal level
7. Transmitting signal level

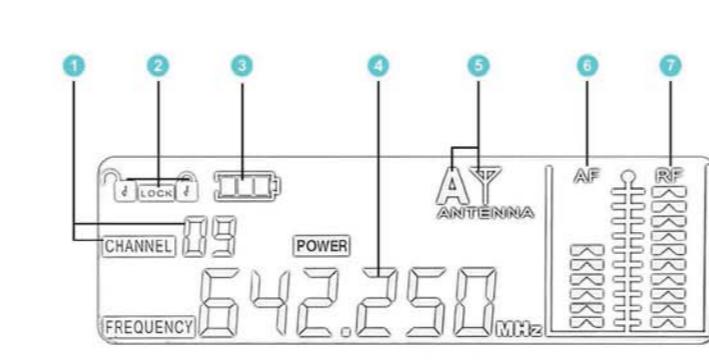


3

Bodypack Transmitter

Separated View
1. Transmitter antenna
2. LCD display
3. IR sync window
4. Battery case (AA)
5. LED indicator

Microphone Selection

Depending on your needs, you can choose to use a headset or lavalier microphone. It is also possible to use another condenser microphone with the same interface according to the usage habits.

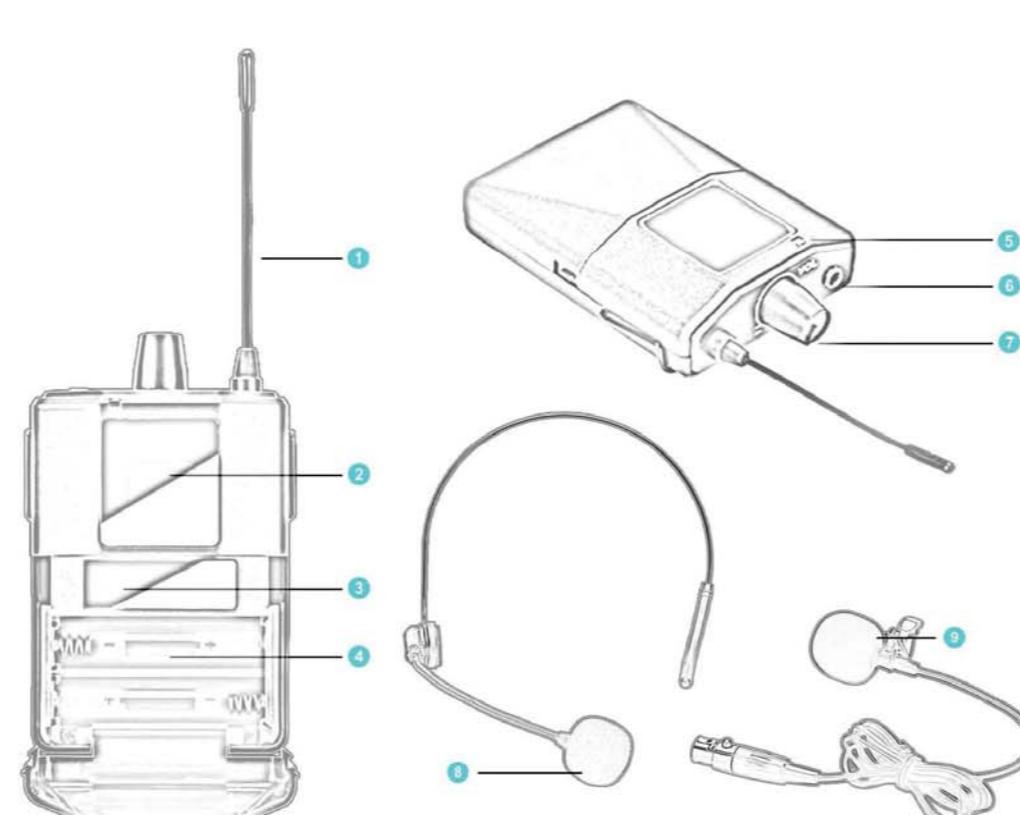

5

How To Sync The Transmitter?

- Connect the power to the receiver and install the microphone transmitter with the battery.
- Turn on the receiver and microphone transmitter.
- Scan automatically select frequency:**
Click the "Set" key twice and after the receiver screen displays "SCAN", wait about 1 second for the receiver to automatically enter the scan state. Waiting for the system to complete the scan will automatically enter the matching standby state and the "IR" red light flashes.

Manual and precise frequency selection:
Directly click the "Up" or "Down" keys to select a suitable channel, then press the "Set" key to enter the matching standby state and the "IR" red light flashes.

4. After confirming that the red pairing light on the receiver is blinking, point the microphone transmitter's "IR" frequency pairing window (usually near the microphone screen position) at the flashing red frequency light. When the red "IR" pair light at the receiver stops blinking and the "IR" red light flashes, it indicates that the pairing process is successful.

5. This device has a frequency lock function, you can long press the "Set" key of the receiver until the screen shows " " that is the lock is successful. If you need to unlock, you can also unlock it by pressing and holding the "Set" key.

Note: If the operating fails, please follow the steps and do again.

7


Receiver parameters

Main unit size: ELA 1u standard
Channels: Dual channel
Frequency: Stability: ±5 ppm
Frequency range: UHF:540-590MHz
Operating range: >100 meters (without signal Occlusion)
Shock Resistant: PLL phase lock oscillation
Sensitivity: <10dBm
Bandwidth: Wireless 50MHz
Signal-to-noise ratio: >85dB
THD: <0.05% (at 1KHz)
Frequency response: 50 - 14000 Hz
Power supply: 100-240V AC 50/60 Hz

Transmitter parameters:
Frequency range: UHF: 540-590MHz
Shock Resistant: PLL phase lock oscillation
Harmonic: <50dB
Bandwidth: Wireless 50MHz
Microphone: Dynamic Cardioid
Output power: 10dB
Battery: 500mA lithium battery (AA)
Current consumption: 150mA

Receiver

Front View
1. Handle
2. Control buttons
3. Antenna
4. IR sync window (Matching)
5. LED display
6. Volume knob
7. Power CON/OFF button
8. Cabinets installing hole

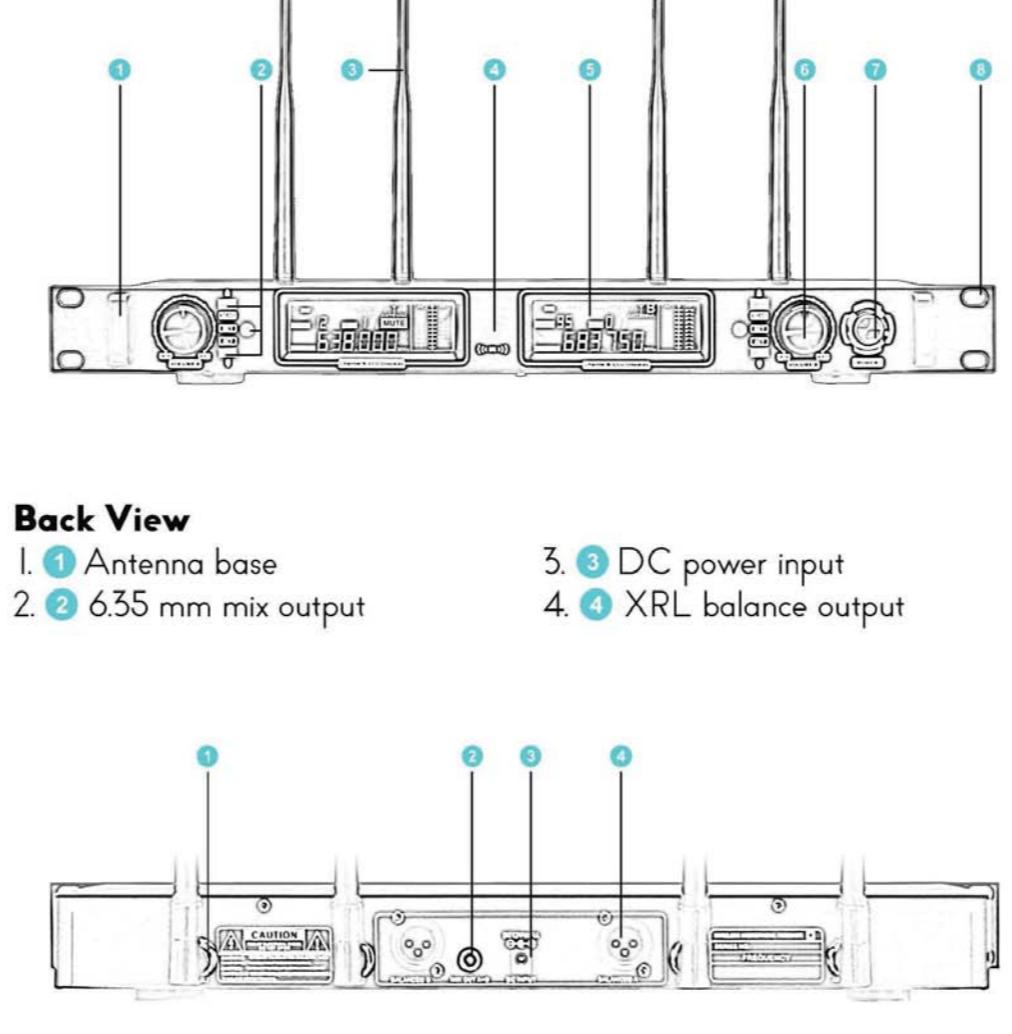


2
Handheld Transmitter

Separated View
1. Microphone capsule
2. Capsule shield
3. Metal body
4. IR sync window
5. LCD display
6. IR sync window
7. Power switch CON/OFF
8. Antenna




How to Correctly Hold a Mic?

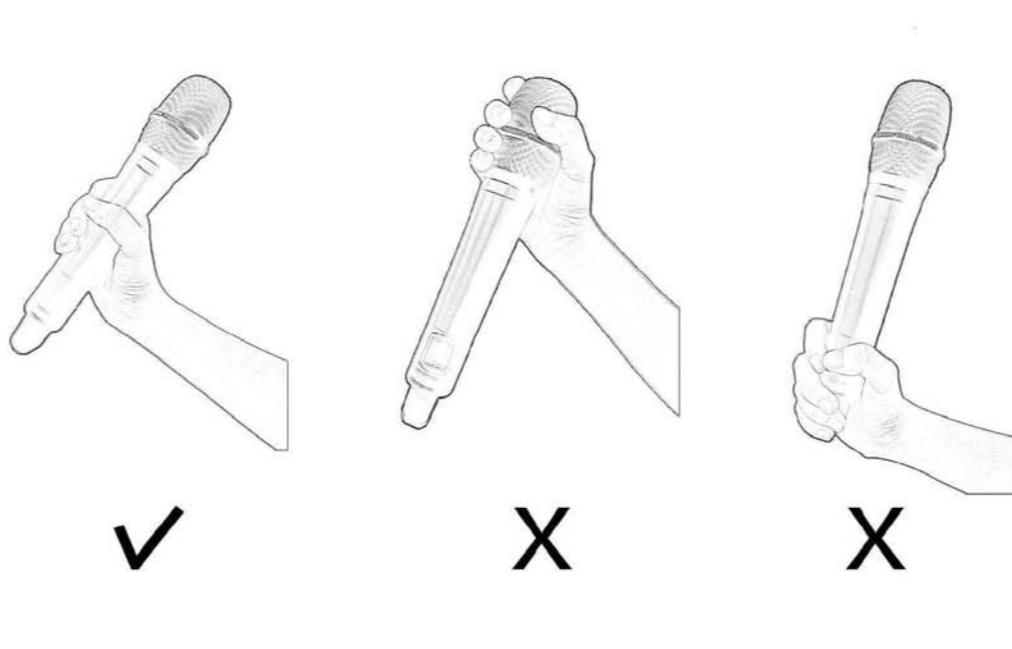

Conference Transmitter


Separated View
1. Microphone capsule
2. Movable microphone
3. Bendable tube
4. Microphone interface
5. LCD display
6. IR sync window
7. Power switch CON/OFF
8. Battery case (AA)

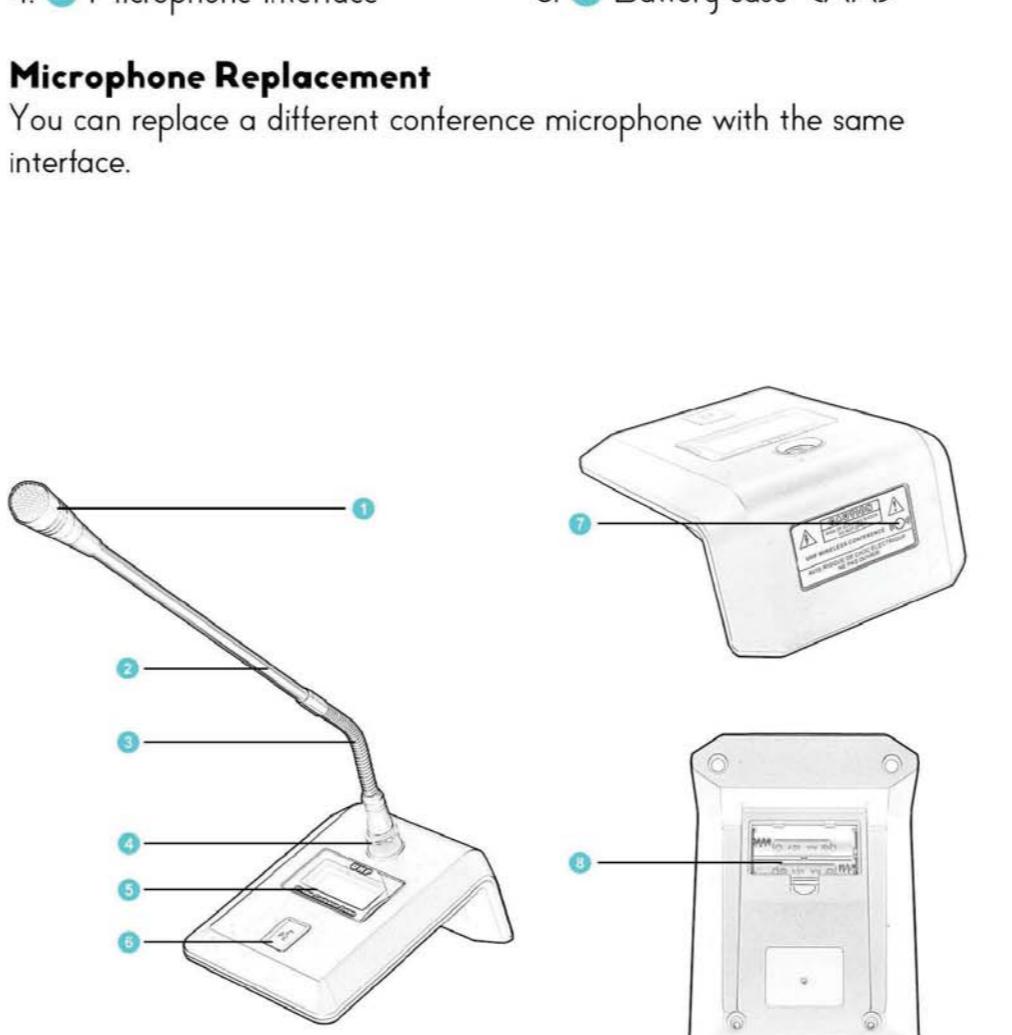

Precautions


- Before powering on, make sure that the microphone volume is adjusted to a minimum state, so as to avoid the current pulse generated to break the PA unit of the speaker when the system is turned on.
- Due to some conditions, when the local power is not grounded and the speaker emits a "zapping" current sound, please use the XRL balanced output interface to connect instead of the 6.35mm output interface.
- When using equipment such as power amplifiers of the combined sound system, please do not make the microphone receiver have metallic contact with other equipment to avoid current signal interference.
- Some models of microphone systems are equipped with a one-button anti-squeaking function, please keep this function turned off under normal circumstances. The anti-squeaking feature is only available in extreme cases where the echo acoustic squeaking cannot be eliminated.
- When using the wireless microphone system, please confirm the control status of the radio wave frequency, and ensure that the local radio wave control band does not conflict with the frequency band used by the wireless microphone system, so as to avoid frequency interruption, channeling, interference and other phenomena during use.
- Under normal circumstances, if you want to get the rotated wireless use distance, you need to put the system in an open place to use. Installing the system indoors or in a cabinet due to personal needs will affect the effective wireless use distance of the system. Note: Never install the system in an all-metal cabinet or room, as metal shielding may disable the wireless functionality of the system.

Performance Connection

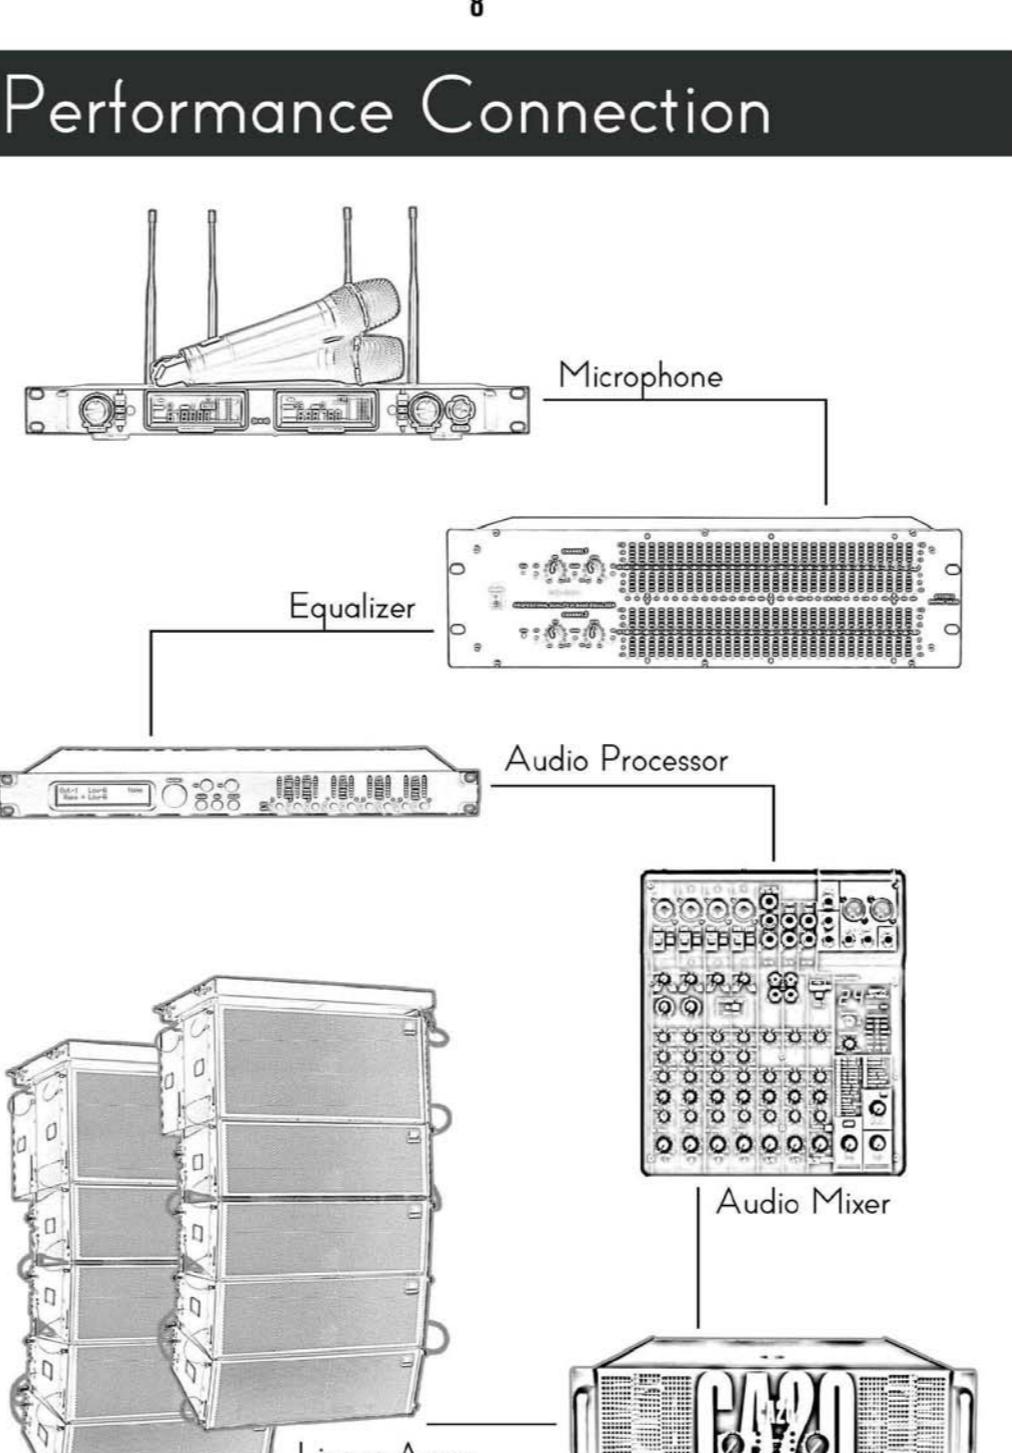

8
9
10

Karaoke Connection

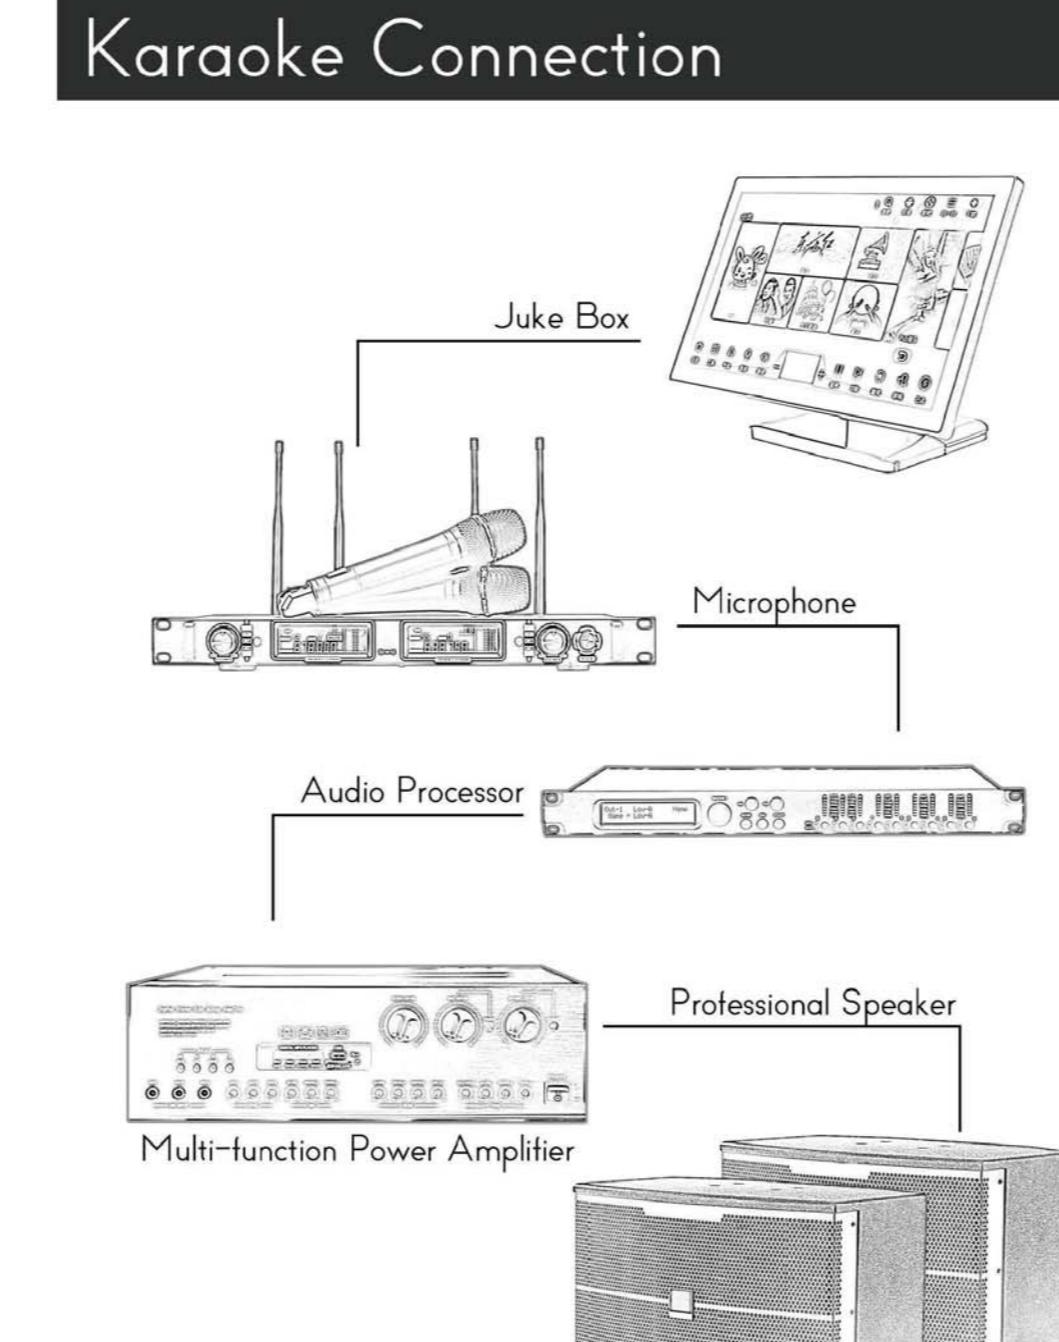

11

Security and Environment

Environment
Avoid close radiation and heat. Don't expose the devices in sunny, dusty, raining and vibration condition.

Security
Keep the devices under cool condition. Don't put in the ardent.

In order to reduce the risk of electric shock, please do not open the class. There is no user adjustment option inside the product.

In order to reduce the risk of electric shock or fire, please do not expose the internal instrument parts of this product to rain or wet places. If cleaning is required, use a dry towel.

Before using this product, please make sure that this product has been connected to the ground, to prevent the risk of electric shock. For your safety, do not arbitrarily cut the wires.

When preparing to connect the system's AC power supply, please do not place the wire next to many people or moving objects to defend the material is destroyed. Once the surface of the cable is damaged, disconnect the power supply immediately and replace the new cable with a new one before continuing to use it.

A lightning bolt shape symbol with an arrow inside the positive triangle is used to alert the user that there is an unisolated dangerous voltage in the accessories of the product, which will produce enough field strength on the human body to cause the risk of electric shock. The exclamation point in the positive triangle is used to remind the user to carefully read the manual before starting to use the product.



12