

PROSCAN



LED LIGHT UP BLUETOOTH SPEAKER

MODEL NO.: PSP1861
INSTRUCTION MANUAL


Please read these instructions thoroughly
before use and retain for future reference

PROSCAN, and the PROSCAN logo are trademarks used under license
by CURTIS INTERNATIONAL LTD. - www.proscan-brand.com.

Introduction

Thank you for choosing PROSCAN PSP1861 Bluetooth Speaker as your source for entertainment! You can use this item with iPods, Phones, iPods and many types of smartphone to stream music. In order to get the best results when using the device, please read this manual first before using.

Description

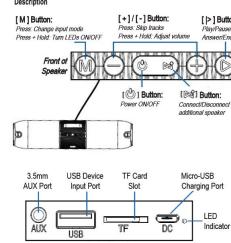

Package Contents

- 1. Bluetooth Speaker
- 2. User Manual
- 3. Micro USB cable for charging
- 4. 3.5mm AUX cable

Specifications

Bluetooth specification	Bluetooth 5.0
Bluetooth Range	33ft (10m)
Charging input voltage	DC 5V --- 1A
Built-in Battery	1200mAh rechargeable lithium battery

Battery life & charging time may vary based on usage & types of devices used.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Do not expose the Bluetooth Speaker to liquid, moisture or humidity to avoid the product internal circuit being affected.
- Do not expose the device to extreme cold to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not expose the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not professional.

Care and Maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Speaker to liquid, moisture or humidity to avoid the product internal circuit being affected.
- Do not expose the device to extreme cold to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not expose the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not professional.

Features

- Bluetooth enables simple wireless pairing with your bluetooth-enabled devices.
- Bluetooth v5.0
- LED light effect
- TF card support
- USB flash drive support
- Micro-USB port for battery recharge
- 1200mAh rechargeable battery

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- DO not operate the unit if it has been exposed to water, moisture or any other liquids to the point of actual device damage, especially water.
- Do not use the unit if it has been dropped or damaged in any way.
- Do not use the unit if it has been damaged by a qualified electrician.
- Improper repairs may cause the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit away from children.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

INSTRUCTIONS FOR USE

Charging the Speaker

Plug the small connector of the included micro-USB charging cable into the charging port on the back of the speaker. Plug the large connector into the USB port on a computer, or into a 5V USB adapter (not included) and plug into an wall outlet.

The LED indicator will turn RED while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Please charge it completely before the first time use.

Operation

- Long press the Power button on the speaker to power ON and OFF
- When the unit is ON, the LED indicator will turn on and will automatically switch to the last mode available previously or device ready.
- In all modes, overall volume can be adjusted with the buttons on the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.

LIMITED PRODUCT WARRANTY

To make a warranty claim, please email support@runtistics.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option. You are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover class B, B+, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used in a commercial setting. This warranty does not apply to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranties or conditions of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. Some states or provinces do not allow limitations on how long an implied warranty lasts, so the foregoing limitations may not apply to you. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

Bluetooth Mode

The unit will go into "Pairing Mode" when the power is on. Go into your device's settings menu and look for "Pro PSP1861" for pairing. A voice message "Bluetooth is connected" will be announced for a successful pairing.

After the unit has paired, it will re-connect automatically when the unit is powered on and the device is in range.

Begin Streaming Music

Use the controls on the connected Bluetooth device to select and begin playing audio. Turn the volume control of the unit to control music volume, or do both.

Using a TF Card or USB Device

To insert a card, insert a TF card into the TF card slot on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the speaker.

Once inserted, the speaker will automatically begin playing music off the device. Note that you must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF and USB mode, all playback is controlled by the buttons on the speaker.

Using Phone Functions

When paired to a Bluetooth device, you can take phone calls using the buttons on the speaker and talk through the built-in microphone.

- Press the [>] button to answer an incoming call.
- Press the [<] button again to end the call.

FM Radio Mode

When the unit is ON, press the "M" button will turn on FM Radio mode. Press and hold "M" button to search the radio stations.

Aux-in Mode

Plug in the 3.5mm AUX cable into the unit. The other end is connected to your device. The speaker will automatically switch to Aux-in mode. Please note music and volume can be controlled by your device.