



CMYK 0 84 89 0
RGB 255 71 19
PANTONE 172 C

85



RHYTHM NOTE WIRELESS SPEAKER-MIN USER MANUAL

Carefully read user guide in properly
and keep this for further reference

Product features

1. Fashionable and elegant design , Portability , easy to carry.
- 2 . Use a high-performance Bluetooth module for smoother use.
- 3 . With TF card , USB , Support MP3 and other music format decoding.
- 4 . Support for call function.
- 5 . High-efficiency digital amplifier , green and environmentally friend.
- 6 . Built-in lithium-ion battery for repeated charging.
- 7 . Built-in high quality speakers.The sound quality is pure and beautiful.
- 8 . Built-in bass boost diaphragm design , the bass is outstanding.

Specifications

Bluetooth version : 5.0
Wireless transmission distance : 10m (without obstacles)
SNR : ≥80dB
Spea : 4Ω
Charging voltage : DC 5V/1A

Key Function Description

Power button : Long press the switch.
Play / pause / receive call / hang up call / callback call / automatic search.
MODE KEY / press to change mode.
Previous song / previous radio , long press volume minus.
Next song / next station , long press volume plus.
Light button : Short press this button light There are several modes of breathinights monochrome spectrum conversion.Long press to close the light

Port Guide

AUX : AUX input
TF , TF / Micro TF card
USB : USB
DC 5V : Charging input

Bluetooth Mode

Turn on the phone or press the mode button to switch to the Bluetooth mode ,and the ringtone prompt is synchronized , the machine will prompt the Bluetooth status , and after pairing with other devices and successfully connected .Bluetooth music and Bluetooth call functions can be realized.

Using TF / USB

Insert the TF card / USB , the machine will automatically recognize and play the music of the TF card . At this time , the playback control can be performed by the previous song , play / pause , etc.

Using AUX

Plug the audio cable into the AUX port of the machine and connect it to the headphone output jack of your phone or computer . Press the button to switch to the external audio mode . You can play music by turning on the audio software of your phone or computer.

TWS introduction

Power on two speakers in the same time , long press either one's M button till hearing "dudu'sound" , then two speakers will pair with each other , when you hear "dudu'sound again" , it means connect successfully.

Attention

- 1 . If you saw smoke coming out of the machine or other improper phenomenon , please contact theretailer to solve the issue immediately .
- 2 . If the machine get wet by the rain , please make it dry by anyway .
- 3 . Do not bake the machine , it will easy to burn and damage the electronic components .
- 4 . Do not play the machine under burning sun or anyhot environment .
- 5 . Do not throw the machine .
- 6 . Do not try to replace the battery by yourself .

Note ! Our products are constantly updated . It is no additional notice about technical issues and this manual is for reference only

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction