

5.6in

142±1

4.0in

101.6±1

203.2 ±1

NOTE:

- The unit will power off if it is not used for more than 5 minutes.
- If the Bluetooth® connection range is more than 10 meters the Headphones will disconnect with a prompt sound, indicating that the connection has been lost. If the connection is not re-established within 5 minutes, the Headphones will turn off automatically.

Need some help?

Can't get it to pair? Have a question or comment?



Call us 1-833-TGT-Tech

Safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

heyday™  


FCC ID: 2BAXW-BH328 Model: BH328 Input: 5V  Max 0.5A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
· Reorient or relocate the receiving antenna.
· Increase the separation between the equipment and receiver.
· Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
· Consult the dealer or an experienced radio/TV technician for help.
Target Corp. Mpls. MN, 55403 Phone: 1-833-TGT-Tech

3

Bone Conduction Headphones

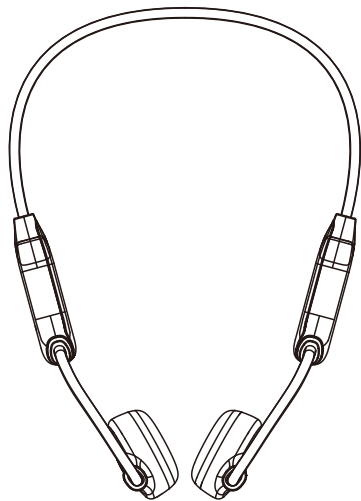

hey! welcome to your Heyday™ bone conduction wireless headphones.
Let's get you set up

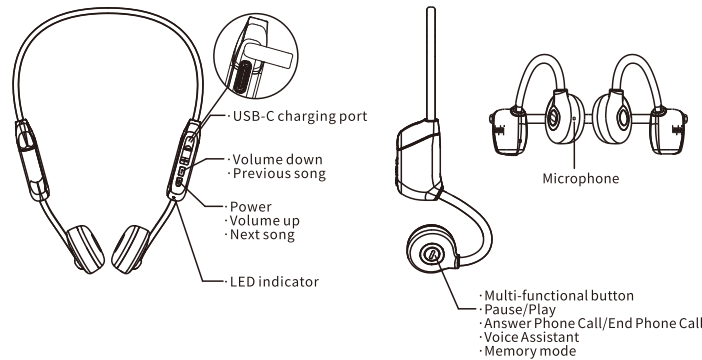

Includes

- Wireless Headphones
- USB-C charging cable

LED Indicators

- Flashing Blue
- Flashing Red once
- Flashing Red and Blue
- Flashing Blue every 5 seconds
- Solid Red
- Solid Blue
- Red and Blue light blinks 1 second
- Flashing Red
- Power on
- Power off
- Pairing Mode
- Paired
- Charging
- Charging complete
- Reset
- Low battery indicator

Power on/off

- When powered off, press and hold the power button for 3 seconds to power on.
- Press and hold power button 5 seconds to power off; The bone conduction headphones will auto power off after 5 minutes with no connection to device.

Pairing

- Press and hold the power button for 3 seconds to power on.
- When Pairing mode turns on, red and blue LEDs will be flashing.
- Use Bluetooth® settings on your phone to pair with Heyday Earbud 14.
- Blue LED will be flashing every 5 seconds when paired successfully.
- Press and hold power button 5 seconds to power off.

Reset

- Bluetooth® Reset: When powered off, press the power button and the volume down button for 5 seconds to reset, Red and Blue light blinks 1 second spontaneously.

1

Memory mode

- This headphone has built-in 4GB flash disk for data exchange. Connect the laptop or mobile device with USB-C cable (Included) to headphone for data transfer.
- Depend on the type of charging port of mobile device, it might need to purchase suitable converter to connect with the USB-C cable (Included).
- Enter memory mode: Keep the device power-on (no matter whether it is paired or not), long press the Multi-functional button for 6 seconds till the tone rings. Thus the device enters the memory play mode, the BT automatically stops, and the headphones will automatically play and loop T card songs in order.
- Exit memory mode: Long press the Multi-functional button for 6 seconds to exit memory mode, and it will automatically enter BT pairing mode, showing "pairing" (in case of a connection record, it will automatically reconnect to the last device).

How to wear

Hang the headphones behind your neck with both speakers clinging to your cheekbones. After that, adjust it until you feel comfortable.

Listen To Music

- Click the Multi-functional button to pause, and then click the Multi-functional button to play.
- Volume up button: Press the volume up button once to turn up the volume.
- Volume down button: Press the volume down button once to turn down the volume.
- Next song: Long press volume up button for 2 seconds when music is playing.
- Previous song: Long press volume down button for 2 seconds when music is playing.

Voice Assistant

Double-click the Multi-functional button to turn on the voice assistant, then double-click it again to exit.

Phone Calls

Click the Multi-functional button to answer, long press the Multi-functional button for 2 seconds to reject the call. In the call mode, click the Multi-functional button to hang up. Note: Turn up the volume to 100% during the call as far as possible.

Charging Headphone

- Suggest to fully charged for first use.
- Full charge of the headphones requires approximately 2 hour.
- Plug the USB-C end of charging cable into headphone's charging port, plug USB-A end of charging cable into a DC 5V power supply. When charging, the headphones will auto-turn off.
- Music playback time about 8 hours (50% volume).
- During the charging, LED turns to solid red. After charging complete, the LED turns to solid blue.

Troubleshooting and tips

- If the device is not working correctly, press the power button and the volume down button for 5 seconds to reset.
- If the device won't turn on, recharge the battery and try again.
- If the device won't charge, make sure the supply works DC 5V > 0.5A, and not damaged.
- If the device makes no sound, adjust the volume.
- If the device makes no sound in memory mode, connect the headphones to the computer with USB-C charging cable, and check if there are songs on the memory card.

2

BACK

FRONT

P2

P3