



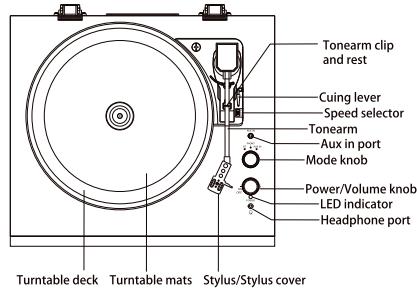

Turntable

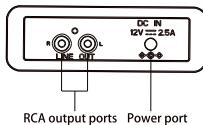

Include

- Turntable record player
- Power adapter
- AUX Cable
- RCA to 3.5 mm audio cable

Power on/off

- Connect the AC adapter to the Power port on the turntable.
- Turn the power/volume knob to turn the power on/off, the voice will be heard and LED indicator will be on.

NOTE: Place the turntable on a flat and level surface. The selected location should be stable and free from vibration.

Phono Mode

- Turn Mode knob to Phono mode, the voice will be heard and LED indicator will be red.
- If it is the first time to use, remove the tie-wrap that is holding the tonearm. Remove the stylus cover and keep for future use.

NOTE: To avoid stylus damage, make sure that the stylus cover is in place when the turntable is moved or cleaned.

- Adjust the speed selector to 33, 45, or 78 rpm, based on the label on your record.
- NOTE: Set your turntable to 33 if the record indicates a speed of 33 1/3 rpm.

- Place a record on the turntable, release the tonearm from its clip.

NOTE: When the turntable is not in use, lock the tonearm with the clip.

- Use the cuing lever to gently lift the tonearm onto the record. Set the stylus just inside the edge of the record to start at the beginning, or align it with the start of the track you want to play.
- Turn the power/volume knob to adjust the volume.
- When the record has finished playing, the tonearm will stop at the center of the record. Use the cuing lever to return the tonearm to the tonearm rest. Lock the tonearm clip to secure the tonearm.

Bluetooth® Mode

- Turn Mode knob to Bluetooth® mode, the voice will be heard, LED indicator will be blue light flashes in Bluetooth® mode during pairing.
- Use Bluetooth® settings on your device to pair with "Hearth & Hand 13".
- The blue light in Bluetooth® mode turns solid when connected successfully, the voice will be heard.
- Turn the power/volume knob to adjust the volume.

1

Front

- Disconnect Bluetooth® settings on your device. Bluetooth® will become unpaired if your device is outside of range (33 feet).
- Once the turntable are out of range, the Bluetooth® will automatically connect to the last device in 10 minutes. It will automatically power off within 10 minutes if no operation.

NOTE: Please keep the distance between the connected Bluetooth® devices less than 33 feet to ensure working properly.

AUX IN Mode

- Turn Mode knob to Aux in mode, the voice will be heard, LED indicator will be purple.
- Connect the AUX cable.
- Turn the power/volume knob to adjust the volume.

Connecting to RCA Speakers

- Connect an RCA cable from the turntable to your speakers. The red RCA plug connects to the R (right channel) port and the white plug connects to the L (left channel) port.
- Turn the power/volume knob to adjust the volume.

Troubleshooting and Tips

- If there is no power, check the power adapter correctly, or power on again.
- If the device makes no sound, adjust the volume
- If the device makes no sound or doesn't show as an available device in Bluetooth® Mode, make sure it is not paired to another device. If so, unpair the device and re-pair the desired device.

SPECIFICATIONS:

- Power Input: 12V - 2.5A
- Bluetooth® Pairing Name: Hearth&Hand 13

Need some help?

Can't get it to pair? Not accepting phone calls? Just have a question?



Call us at: 1-833-TGT-Tech

Safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth



FCC ID: 2BAXW-TFB247 Model:TTR102 DPCI: 324-06-0090 Input: 12V - Max 2.5A Made in China
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

2

Back

技术要求

- 尺寸: 102x170mm, 公差: ±1mm
- 材质: 80g书纸, 正反面单黑印刷, 折叠

| | |
|-------|------------|
| 产品型号: | B247 |
| 产品名称: | 说明书 |
| 产品编码: | |
| 日期: | 2025年3月12日 |
| 版本: | A0 |