 


VIVITAR® PLAY

LIGHTS SOUND HOLD
WIRELESS SPEAKER

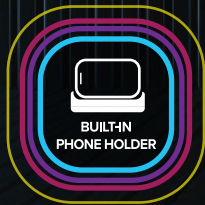

 
USER'S MANUAL

Item: V60101BT

WHAT'S INCLUDED

- V60101BT Wireless Speaker
- Type-C Charging Cable
- User's Manual with Waarranty Information


A CLOSER LOOK

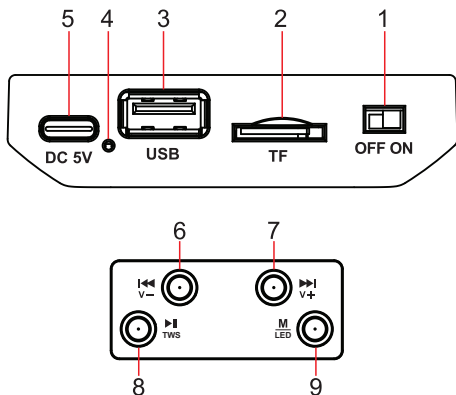


- | | |
|------------------------|---------------------|
| 1. Power ON/OFF | 6. Previous/Volume- |
| 2. TF card slot | 7. Next/Volume+ |
| 3. USB port | 8. Play/Pause/TWS |
| 4. LED indicator | 9. Mode/Light |
| 5. DC 5V charging port | |

CHARGING

 
Insert one end of the included Type-C charging cable (included) into the DC 5V charging port on your speaker.

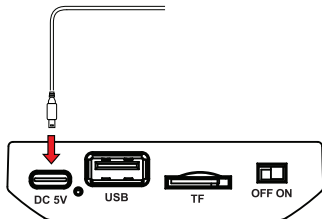

 Insert the other end of the USB cable into the USB port of a computer or suitable USB charging adapter.

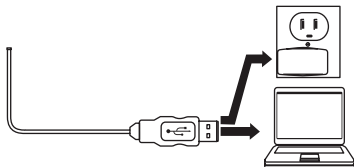

 -  Charging (Indicator is ON)
-  Charging Complete (Indicator is OFF)

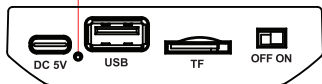


CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

 
POWERING ON/OFF

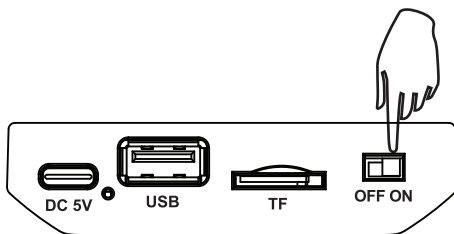

Slide the power switch to the ON position to power ON the speaker. After powering ON, the speaker will automatically go into Bluetooth pairing mode.

Slide the power switch to the OFF position to power OFF.

 BLUETOOTH PAIRING

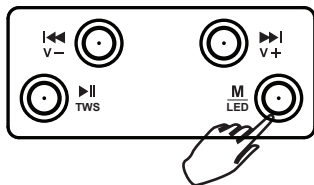


Power on your speaker. Then press the mode button repeatedly to toggle through your speaker's various modes. Make sure BT (Bluetooth) mode is selected.

NOTE: Your speaker has three modes:

- Select BT mode to pair your speaker to a Bluetooth-enabled device.
- Select FM mode to listen to FM radio channels.
- Select USB/TF mode to listen to music from a connected USB drive or an inserted memory card.


 
ADDITIONAL NOTE: Press and hold the Mode button to turn on/off the speaker's light.

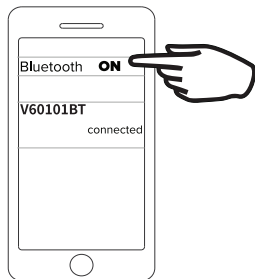

Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60101BT"


LISTENING TO MUSIC

  Press the **⏮** button to go back to the last track in a playlist. Press and hold to decrease the volume.

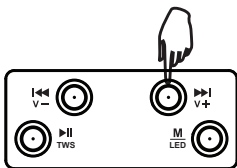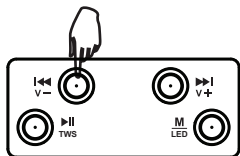


Press the **⏭** button to go forward to the next track in a playlist. Press and hold to increase the volume.

 Press the **⏸** button to play or pause a track.

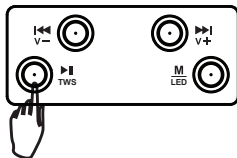

LIGHT CONTROL

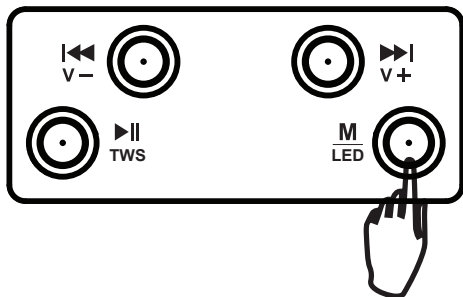 


Press and hold the LED button to turn on/off the speaker's light.

ADDITIONAL FEATURES

TWS Function

 If you have two V60101BT speakers, enjoy high-quality sound by using the TWS pairing function.

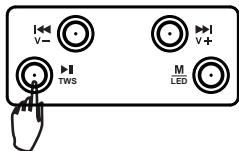

Power ON both speakers then quick press the TWS button 2 times on either one of the speakers.

The two speakers will pair together.

You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60101BT".

USB Port

Insert a USB drive into the USB port on your speaker. On USB mode, the speaker will play any .MP3 files found on the USB drive. The USB port is NOT for charging other devices and can only be used to access files.

TF Card Port

Insert a TF or Micro SD type card into the TF card port on your speaker. On TF mode, the speaker will play any MP3 files found on the memory card.

FM Mode

When the speaker is in FM mode, quick press the Play/Pause button to search through FM channels.

SAFETY PRECAUTIONS

When using your wireless speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR WIRELESS SPEAKER.
2. Never expose your wireless speaker to high temperatures, extreme cold, high humidity or any moisture or water.
3. In order to avoid the risk of electric shock, never attempt to open your wireless speaker or repair it without the assistance of certified professionals.
4. Your wireless speaker is not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your wireless speaker.
6. Do not use your wireless speaker at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your wireless speaker, throw it, or subject it to strong impacts or physical trauma.
8. If you detect any abnormalities when using your wireless speaker, contact the manufacturer for support. In addition, do not continue to use your wireless speaker if you detect any smoke or fire.
9. Unplug your wireless speaker when not in use for extended periods of time.
10. When plugged in, do not place your wireless speaker on flammable materials such as rugs, carpets, or bedding.
11. Please recycle or dispose of your wireless speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of for further information.
12. Clean your wireless speaker using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your wireless speaker, and never submerge your wireless speaker in water.

Maintenance and Care

- Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
- Never expose your speaker to high temperatures or extreme cold.
- Please recycle or dispose of your speaker based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SPECIFICATIONS

Bluetooth Version: V5.0

Bluetooth Range: Up to 33 feet (10 meters)

Power Supply: DC 5V, 1A (USB)

Battery Type: 3.7V 1200mAh Lithium Ion Battery

Play Time (For Music): 2-3 hours*

Lighting Run Time: Up to 3 hours*

Music and Lighting Run Time: Up to 2 hours*

*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International. is under license. Other trademarks and trade names are those of their respective owners.

The VIVITAR logo is centered in the upper half of the image. It consists of the word "VIVITAR" in a bold, white, sans-serif font, followed by a registered trademark symbol (®). The background is a dark blue gradient with a series of vertical lines that create a sense of depth and perspective, resembling a tunnel or a series of parallel planes receding into the distance.

VIVITAR®

© 2024 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com