

**Brookstone**  
[www.brookstone.com](http://www.brookstone.com)

The BROOKSTONE® trademarks, names and logos are owned by BKST Brand Holdings LLC. ©2025.  
All rights reserved. Manufactured, marketed and distributed by SAMSONICO USA LLC, under license.  
MADE IN CHINA

Please contact [customerservice@samsonico.com.tw](mailto:customerservice@samsonico.com.tw) with any questions.

SMBKN-70353

**Brookstone®**

**WIRELESS KEY FINDER**



## ONE (1) YEAR LIMITED WARRANTY

Samsonico USA LLC. ("Samsonico") warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Samsonico will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a credit in the amount of the purchase price paid for the original product towards the purchase of other Samsonico products. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Samsonico, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Samsonico's property. When a credit is given, the original product must be returned to Samsonico and becomes Samsonico's property.

**Obtaining Service:** To obtain warranty service, contact us via e-mail [customerservice@samsonico.com.tw](mailto:customerservice@samsonico.com.tw). Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Puerto

Rico and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Samsonico that can be identified by the "Samsonico USA LLC." trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Samsonico products. Manufacturers or suppliers other than Samsonico may provide their own warranties to the purchaser. Samsonico, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Samsonico; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; h) any modifications to the product; or i) a product that is used commercially or for a commercial purpose.

SAMSONICO SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SAMSONICO DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF SAMSONICO CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION OF THIS EXPRESS WARRANTY.

## IMPORTANT SAFETY INSTRUCTIONS - READ BEFORE USE

All of the safety and operating instructions should be read, adhered to and followed before using. Save these instructions for future reference.

### ⚠️ WARNING

- This product is not a toy. Keep away from children.
- Never shine the light directly into your own eyes or others' eyes.

### ⚠️ BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

### ⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



### Features

- Sleek, stylish and compact pager
- Includes two color-coded keychains
- Operating range: 30 feet
- Keychain battery: 3V \* 2 CR2032 (included)
- Transmitter battery: 1.5V \* 2 AAA (not included)



### BATTERY WARNING:

- a) Ensure the batteries are installed correctly according to polarity (+ and -).
- b) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- c) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- d) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

**⚠ THE PRODUCT MUST BE USED BY AN ADULT AND KEPT OUT OF REACH OF CHILDREN. THE PRODUCT SHOULD BE USED STRICTLY IN ACCORDANCE WITH THE DIRECTIONS PROVIDED HEREIN. AT NO TIME SHOULD THE PRODUCT BE MODIFIED OR ALTERED IN ANY WAY.**

**Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

**Responsible Party**

Supplier: SAMSONICO USA LLC.

Address: CONWAY, AR 72034

customerservice@samsnico.com.tw

**Unique Identifier:**

SMBKN-70353 WIRELESS KEY FINDER

**FCC Statement**

**CAUTION:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2BB3K-70353

**FC** MADE IN CHINA

## HOW TO USE:

- Using a phillips head screwdriver, install 1.5V \* 2 "AAA" batteries in remote control unit, and using a phillips head screwdriver and install 3V \* 2 CR2032 batteries in keychain, making sure to follow the polarity diagram shown in the battery compartment.
- Attach key fob to your key ring, remote control, or other device you are prone to lose.
- To locate the device attached to one of the colored key fobs, simply push either the blue or red button on the remote unit, the corresponding color key fob begins to chirp.
- Be sure to change batteries when range of signal decreases or chirp volume in key fob decreases.

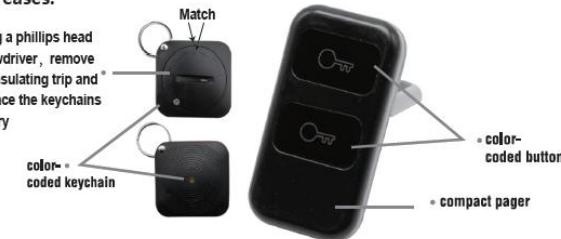

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Voltage: 3V
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above 70°C(158°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.