

BATTERY POWERED BLUETOOTH SPEAKER

Model: YXDZ-006



Important Safety Instructions

1. Read these instructions.
2. Follow these instructions.
3. Pay attention to all warnings.
4. Do not use this speaker near water.
5. Clean with a relatively dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
8. Only use attachments/accessories specified by the manufacturer.
9. Only use the relevant 20V MAX Li-ion battery.

Storage Recommendations

1. The most ideal storage place is one that is cool and dry, keep away from direct sunlight and excess heat or cold

2. For long storage, please power on the speaker with the battery no longer than 2 months for the best results.

COMPONENTS

- ① Hanging hole
- ② Mode switching/tws
- ③ Play/Pause
- ④ Volume Button -/Last Song
- ⑤ Volume Button +/Next Song
- ⑥ Power Button/Atmosphere lamp switching
- ⑦ LED indicator light
- ⑧ Type-C
- ⑨ USB
- ⑩ Atmosphere lamp



Operation

Warning: Please turn the speaker off and remove the battery pack before making any adjustments.

The speaker is compatible with Related 20V MAX batteries. The package comes with the speaker only, battery is not included. To power the speaker, plug in the battery on the battery port.

Note: For the best performance, make sure the battery pack is fully charged before plugging in.

Installing and Removing the Battery Pack

To install the battery pack, calibrate the battery pack with the rails on the sides of the port and slide the battery the battery in until the battery pack is firmly seated.

To remove the battery pack from the speaker, press the release button and firmly pull the battery pack out of the port.

Powering the Speaker ON and OFF

Long press the power button (6) for more than two seconds will turn the speaker on or off.

Atmosphere lamp switching

After turning on the Bluetooth speaker, short press the button (6) to switch between lights

Pairing Speaker with BLUETOOTH® DEVICE

1.Place the speaker and the Bluetooth®device within 2 meters for both devices.

2.Turn the speaker on by pressing the power button (6).The speaker prompts "bluetooth mode", and the LED indicator light flashing rapidly, indicating that the speaker is in pairing mode and can be used by Bluetooth®Device discovery. The speaker name is displayed as "YXDZ-006".

3.Confirm and connect the speaker on your Bluetooth®device.

4.Once successfully connected, The speaker prompts "ding dong" and the LED indicator is solid light.

Pairing Two Speakers with one Bluetooth® Device For Dual Sound Track Stereo Effect

-Speaker has not connected with Bluetooth® device.

1:Turn on both speaker(A) and speaker(B) by pressing the Power button (6).

2:Both speakers are discovered by your Bluetooth device. Connect two speakers named "YXDZ-006" to your Bluetooth®device. After successful pairing, the LED indicators on the two speakers is solid light, and respectively prompt "ding dong".

-One of the Speaker has connected with Bluetooth® device.
1:Turn on your speaker(A) by pressing the Power button (6) and make sure it is connected with your Bluetooth®device.
2:Turn on your speaker(B) by pressing the Power button (6) , Press TWS button (2) on the speaker (A) or speaker (B) for at least two seconds. The speaker (B) is automatically paired with the speaker (A) after a short sound.

-Disable dual pairing function
Press the TWS button (2) on any speaker for at least two seconds. After a short tone, the dual alignment function will be disabled. The LED on the speaker (B) will start blinking quickly.

Getting Phone Calls While Connecting with the Speaker

-Once pick up the call, the music will automatically pause and switch the sound to your phone

LED INDICATOR STATUS

LED indicator	Status/Mode
Solid Light	Bluetooth connection successful
Steady blinking	Play
Rapid blinking	Search for Bluetooth
Light Off	Speaker turn off/Automatically shut down for low-voltage protection

Functionality

Adjusting the Speaker Volume (+ -)& Music Change

The volume of the speaker can be adjusted (increased/decreased) by long pressing the volume button (4) or (5). When the maximum volume is reached, the speaker will

emit a tone.

Our speakers can switch music by short pressing the volume button (4) or (5). Short press volume+(5) to switch to the next song, short press volume-(4) to switch to the last song.

Play/Pause (▶||)

Short press the button (3) to play/pause switch,

U disk play

Plug the U disk stored with mp3 music into the stereo through the USB port, disconnect the Bluetooth of the stereo, and play the music on the U disk.

Charger

USB-A (DC 5V2.1A) and USB-C (18W) ports can charge low-power mobile devices

Low-Voltage Battery Protection

Low voltage protection is our primary consideration for protecting your valuable battery. If the battery voltage is below 16V, the speaker will emit a beep beep, indicating that the voltage is too low. When the battery voltage drops to 15.6V, the device will automatically shut down to prevent any damage.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC Radiation Exposure Statement The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.