

User Guide

Introduce briefly

Dear users, thank you for using this tablet. Before using the machine, please read this user manual carefully in order to use the machine functions correctly.

Disclaimer

1. Please make sure to use the original power supply for charging. The company does not assume any responsibility for any problems or failures caused by any third-party adapters.
 2. Users can use music videos, pictures and software provided by third parties, but we do not assume any responsibility for the opponent's copyright problems or software failures.
 3. If the product fails, we will strictly abide by the warranty terms, but in the process of use We will not be responsible for any property losses that may be caused.
 4. The device comes with the built-in software when it comes out of the factory, which can be used after the actual test. However, if the software is deleted or not deleted when looking for compatibility or other problems, it will not have any impact on the machine. Please note that this is not a product quality problem.
 5. The company reserves the right to improve the product. The product specifications and design are subject to change without notice!
- Please refer to the actual product.

Precautions

Tablets are precision electronic devices, please do not disassemble them by yourself.

Avoid falling and colliding.

Avoid using equipment at high temperature, low temperature, humidity, dust, strong magnetic field or prolonged exposure to sunlight.

Gently wipe the equipment with a wet cotton cloth to avoid contact with other chemicals.

This device cannot withstand the effects of dripping and splashing water, nor can it be placed next to a cup full of liquid.

Please use the appropriate volume to avoid damaging your hearing.

Please use the original battery, charger and other accessories. Using any other type of accessory will violate the warranty and may cause failure.

During the formatting or ongoing upload and download process, do not power off the connection of the device, otherwise it may cause application errors.

Dispose of abandoned equipment and accessories in accordance with local environmental regulations.

If you have any questions during the use of the equipment, please contact your local dealer or contact our customer service center directly.

The company reserves the right to improve the product. The product specifications and design are subject to change without notice!

Please refer to the actual product.

Warn

When the battery reaches its service life, do not discard the battery together with the garbage of

daily life.

Please abide by the local laws and regulations on computer battery disposal.

in order to reduce the risk of fire or burns, do not disassemble, crush or puncture the battery; do not short the external contact; do not put it into the fire or water.

Keep children away from batteries.

Catalogue:

1. Basic knowledge	1
Product Model	1
Lock and Unlock Screen	1
2. Use the home screen	1
3. Use apps and widgets	2
Use the on-screen keyboard	2
Use email	2
Use Calendar	2
Use Clock	2
Print	2
Download App	3
Uninstall App	3
4. Use the camera	3
Take a selfie	3
Record a video	3
Grab a screenshot	3
Watch a photo or video	3
5. Connect to the network	4
Connect to the wireless network	1
Connect to Bluetooth (some models only)	1
Stream content to HD TVs or monitors (some models only)	4
Connect to the wireless display (some models only)	5
6. Use settings	6
Wireless and network	6
Equipment	6
Individual	7
Account	7
System	8
7. Transfer files	8
8. Protect your tablet	8
9. Backup and restore data	9
Update applications	9
widgets and operating systems	9
Backup and reset	9
Recover factory data	9

1 Basic knowledge

Note:

1 The model approval code is displayed on the product nameplate.

2 Before using the tablet for the first time, connect it to an external power supply, and then charge the battery for at least 15 minutes.

To start using your tablet, please follow the following instructions:

After charging the battery and when the battery image is displayed on the screen, press and hold the power button for 5 seconds until the logo is displayed. Tablet computer.

Lock and unlock the screen

Press the power button to lock it

Unlock one. Press the power button to open the tablet, put your finger on the sun, and then slide up.

2 Use the home screen

The home screen provides a central location where you can customize the information, media and applications you want to access quickly.

The icons on the home screen and the appearance of the home screen may be different.

To display notifications, swipe from the left/top/right of the screen.

To display the settings, swipe from the left/top/right of the screen (some models only).

Touch the icon to perform the operations described in the table.

Icon description

	All applications (only for some models) display a list of all applications.
	Go back to 2 and open the previous screen
	As soon as the home page opens the central home screen. To view the left or right side of the home screen, to quickly return to the home screen, please touch.
	Recently used applications Open the list of recently used strict use, touch an application to open it. To delete an app from the list, click the icon and slide the app you want to delete up or down.

3 Use apps and widgets

The icons on the home screen and the appearance of the home screen may be different.

Touching an app will open the application installed on your tablet.

To open an app, touch its icon. To return to the home screen, please touch 

To add an app to the home screen, touch and hold the icon of the app until the home screen appears, and then slide it to where you want to place it.

To delete an app from the home screen, touch and hold its icon, and then drag it to the at X the top of the screen to remove the circle.

Use the on-screen keyboard

When you need to enter information, please display the on-screen keyboard through an application.

Note: The appearance of the keyboard may be different.

Use email

1 touch. 

2. Under the account, touch to add the account.

3. Touch the installation email, and then follow the on-screen instructions.

4. To access your email account, please touch the email icon.

Note: When adding an email account, the email, calendar and contacts associated with the account will be automatically synchronized.

Use the calendar

Touch the calendar icon and then follow the instructions on the screen.

Use the clock

To add an alarm clock, touch the "clock" icon, touch the "alarm clock" icon, and then follow the instructions on the screen.

Printing

Before you use a printer on the same network as your device to print, you must install a printing service on your device. To select the printing service, please touch.  , and then touch "Associated Devices" Select "Print"

You can turn on each available service to make it open or off to view available printers and add milk. Printer and adjustment service settings. To print documents (such as web pages), please do the following:

1. Touch  , and then touch the print.

2. In the dialog box displayed, you can select the printer, number of copies, range, etc.

3. Touch and print.

Uninstall the application

1 touch 

2 Touch "Apps and Notifications" under the settings, and then touch "App Express".

3 It's time to touch the application you want to print the halberd, and then touch to uninstall it.

4. Or touch white to enter the application list. To delete an app from the application list.

touch and hold its icon, and then drag it to "Uninstall" at the top of the screen.

4 Use the camera

The icons on the home screen and the appearance of the home screen may be different.

Use the front camera to take a selfie or take a screenshot.

Take a selfie

1. Touch the port and turn on the camera.

2. After taking the photo, please touch the preview box in the upper right corner or go to the

circle library to view it.

Record the video

1. Touch the mouth.
2. To record a video, please touch the camera head icon.
3. To start or stop recording, please touch the button O @.Click to save, and the video is saved in the "Librate".

Capture the screenshot

To capture the screen, press the power button and the volume down button for about 1 second. Screenshot saved to A message will be displayed in the "national treasury".

View photos or videos

1. To view the photos or videos in the treasury, please touch the circle mark.
3. To delete a photo or video, long press a photo or video, click the trash can label in the upper right corner, and then click OK.

5 Connect to the network

The icons on the home screen and the appearance of the home screen may be different. You can connect your tablet to a wireless network or Bluetooth device some models only).

Connect to the wireless network

Browse the web, read your email or perform other online activities.

Note: You must connect to the wireless network before you can connect to the Internet.

To connect to the wireless network, please do the following:

1. Touch  .
2. In the network and the Internet, make sure that the WLAN is turned on.
3. Touch the WLAN, and then touch to display the available network.
4. Type the security key as needed, and then touch the connection.

Note: To remove the security key of a previously connected wireless network, please touch the name of the network, and then touch to unsave.

Connect to Bluetooth (some models only)

Bluetooth devices (such as headphones, keys or mice) are paired with your tablet. To connect to the west tooth device, please do the following:

1. Touch  .
2. Turn on the associated device.
3. Then touch Bluetooth and turn on Bluetooth.
4. Touch your device name to make it visible to all nearby Bluetooth devices.
5. To find available Bluetooth devices, please touch the search device.
6. After the device name is displayed, touch it to pair the device with your tablet.

Note: In order to maximize battery life, please turn off Bluetooth when not in use.

6 Usage Settings

The icons on the home screen and the appearance of the home screen may be different. Use "Settings". To connect to the network and set preferences to find information related to your tablet.

On the home screen, touch  Slide up and then touch .

Network and Internet

Select the preferences to connect your tablet to wireless networks or other types of networks.

Wi-Fi connection to wireless networks in order to check email and search the Web Or visit social media websites.

Projection (only for some models) enables or disables the wireless network connection to stream content from your tablet to the wireless display device.

Associated devices

Bluetooth (some models only) enables or disables Bluetooth to pair Bluetooth devices (such as headphones or keyboards) with the tablet.

When a USB tablet is connected to the computer, you can choose "transfer files" to transfer photos... as a MIDI device. Print to enable or disable printing to the connected printer.

Applications and notifications

Application information Check all application information installed on this machine

Notification of opening or closing the application.

Application permissions - the permissions required to view an application and disable or turn on permissions.

Advanced I sets default application and special application permissions.

Battery

View battery information and power management options (standby intelligent power, power saving mode, battery percentage, etc.)

Show

Miravision - Adjust the parameters of the display screen, such as contrast building saturation, basket light filtering, etc., to provide the best visual display effect.

Brightness - Adjust the brightness.

Automatically adjust the brightness - turn on or off to automatically adjust the brightness.

The wallpaper is modified as soon as the desktop wallpaper.

Advanced one set hibernation time, device rotation, font size, display size, screen saver, space style, etc.

Sound

Choose volume, ringtone (only for some models) and vibration preferences for your tablet.

Set - sound, and then touch the media volume, alarm clock volume, ringtone volume. Touch the

slider to select the required volume.

Ring well vibration when there is a call (only for some models) - Selecting this check box will enable vibration, or clear this check Box to disable vibration.

Do not disturb" set the egg one. Set the Do not disturb rule.

Ringtone (some models only) Touch a ringtone Touch a ringtone to select it, and then touch it to confirm.

Stockpile

Check the free space of tablet memory and Micro-SD card memory (if installed)

Security and location information

Set the preferences for the following functions in any of the device security:

Screen security protection - touch "screen lock" then select: slide to unlock, national case unlock, Pin unlock or pass word and then follow the on-screen instructions. For detailed information, please refer to page 8 to protect your tablet.

Lock screen preferences - set personalized lock screen

Privacy Settings I Set the preferences for the following functions:

Once the location information is turned on - mode - enable or disable high accuracy, power saving, device only.

Display password - touch the check box to enable this function, or clear the check box to disable this function.

Device management - touch to view or disable the device administrator.

Self-start management - allow or prohibit applications from starting up for free.

Permission application - display the application permission application record.

Mobile phone anti-theft - remotely lock the mobile phone or remotely destroy data.

Data Protection - Protect your data and prevent illegal access.

Users and accounts

Existing accounts will be displayed

Add an account To add an email account or other type of account touch, add an account, and then follow the on-screen instructions.

To synchronize the account, touch the name of the account, touch it again, and then touch it to synchronize immediately.

Delete account - To delete the account, touch the name of the account, touch it again, and then touch the delete account.

Barrier-free

Enlarge gestures, large Wenyu, automatic screen rotation, say password, barrier-free shortcuts, text-to-speech (TTS)

System

Language and input Method - Touch to select your language and virtual keyboarc.

Date and time I Enable or disable white movement to determine the date and time, and select the preferences of time zone, time format and date format.

Backup and Reset - Choose backup and restore and personal data preferences for your tablet.

Timed switch Set the automatic switch time.

About the tablet computer . Display the system status, legal information, model and operating system version of the tablet.

To check for system updates, please touch the update in turn and check it immediately.

7 Transfer files

USB network sharing must be turned off before USB can be used between your tablet and Windows computer.

1. Connect the Micro-USB cable to your tablet and Windows computer.

The USB storage device will be displayed as a drive on the computer. You can use any other external devices as needed. Copy the file back.

2. Connecting the computer is charging mode by default, and you need to switch to file transfer mode.

3. After the file transfer is completed, please disconnect the USB cable.

8 Protect your tablet

To prevent others from accessing the data on your tablet, choose the screen lock method.

1 Touch  .

2. Touch the lock screen with security and location information, and then touch the lock screen without screen security protection.

3. Under the screen lock, select one of the following lock screen types, and then follow the instructions on the screen.

Note: If you have previously selected the lock screen, you must unlock the screen before changing the lock settings.

Slide one to the right to unlock the screen.

Pattern 1 Draw a simple pattern to unlock the screen.

Pin into four or more digits to unlock the screen.

The password is four or more letters or numbers. If you choose a stronger password, this option provides maximum protection.

9 Backup and restore data

Update applications, widgets and operating systems

It is recommended that you regularly update the applications, widgets and the system to the latest version. Updates can solve a variety of problems and bring new features and options to your tablet. Technology is changing with each passing day, and re-application, widgets and operating systems can make your tablet run the latest available technologies. For example, older applications and widgets may not work properly under the latest operating system.

Backup and reset

It is recommended that you use one of several solutions available on the market to keep your personal data on your tablet regularly.

Back up to other computers, on dedicated storage devices or on the cloud.

You can choose the preferences for backing up and restoring data to prevent data loss.

1. Touch .
2. Under the system, touch the backup.

Restore factory data

Reset when the tablet is turned on.

If the tablet starts up normally, well, and you can log in to the owner's account (the first one added to this device) Account), please follow the steps in this section.

To reset all settings and delete all data on the device, please do the following:

1. Touch .
2. Under the system, touch reset.
3. Under the personal data, choose to restore factory settings.

Note: When you perform the factory settings, all the data saved on your device will be deleted. All applications will be uninstalled. It may be possible to recover the data in your email account. Before resetting the tablet, please use an external storage device to back up all important files, or use one of the thousands of solutions available on the market to back up all important files to the cloud.

4. Touch the factory settings of the tablet computer.
5. If you set a lock screen password for your tablet, please enter your password when prompted.
6. Touch all the contents to start the heavy egg. The tablet will then be turned off. After the reset is completed, the tablet will restart.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.