


Appendix II

Internal Photographs

SIF30-I0420/120-347/T/D1/F/APP D


Open View of EUT

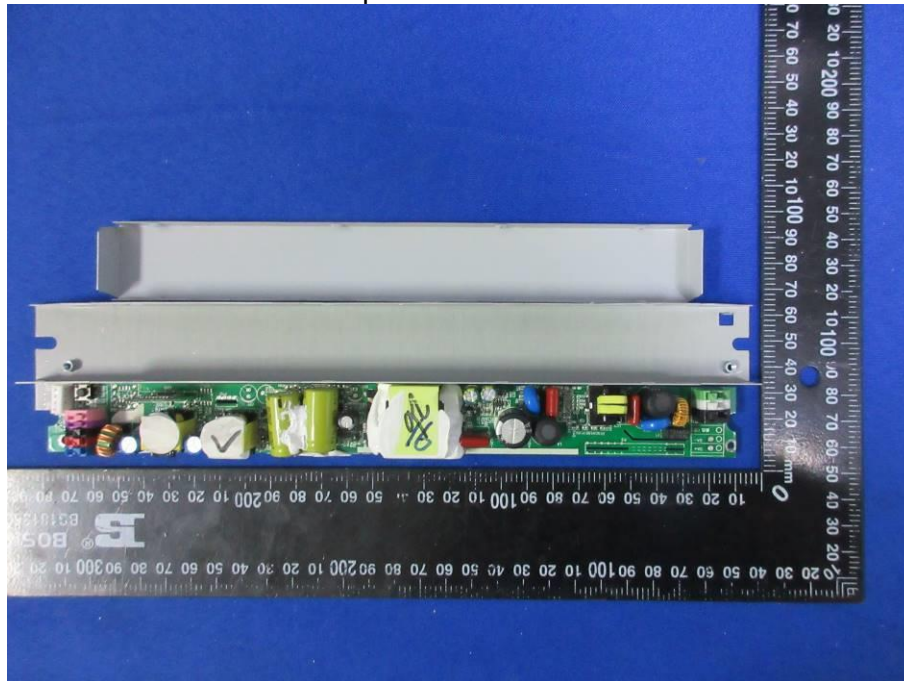


Internal View of EUT-1




Internal View of EUT-2

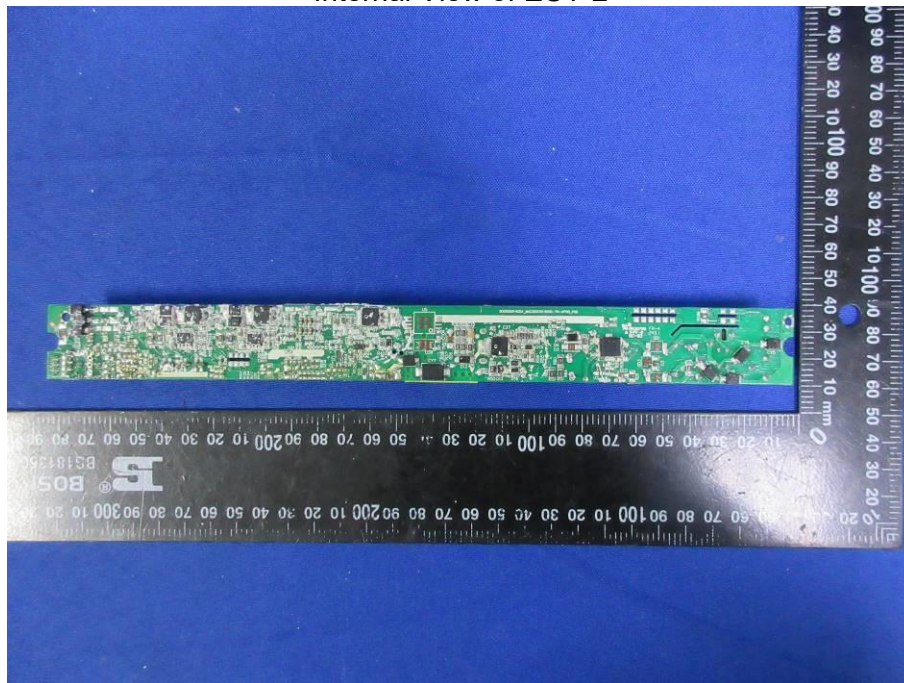


Internal View of EUT-3

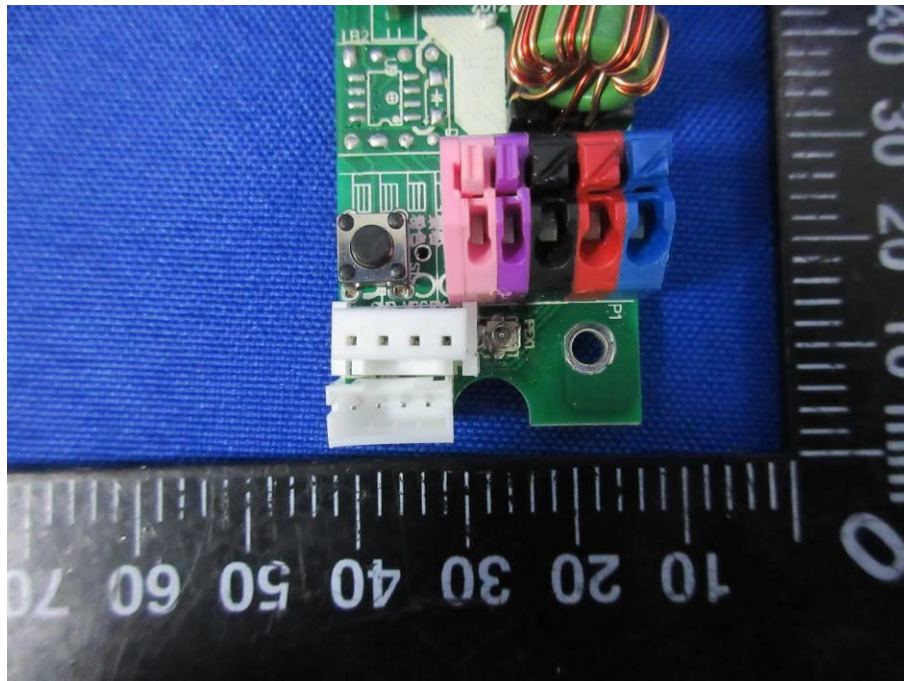


Internal View of EUT-4

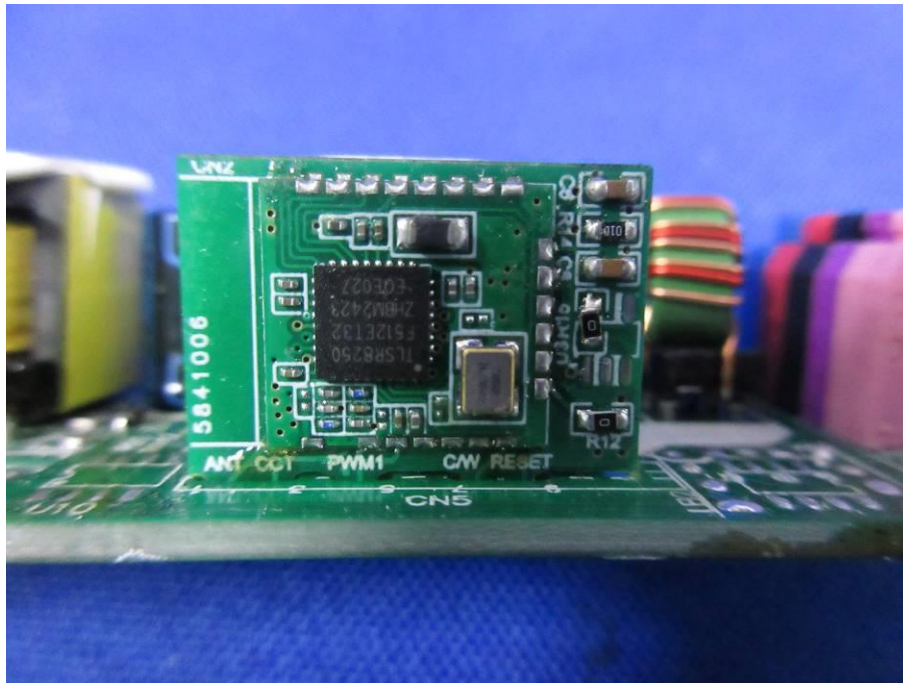


Internal View of EUT-5

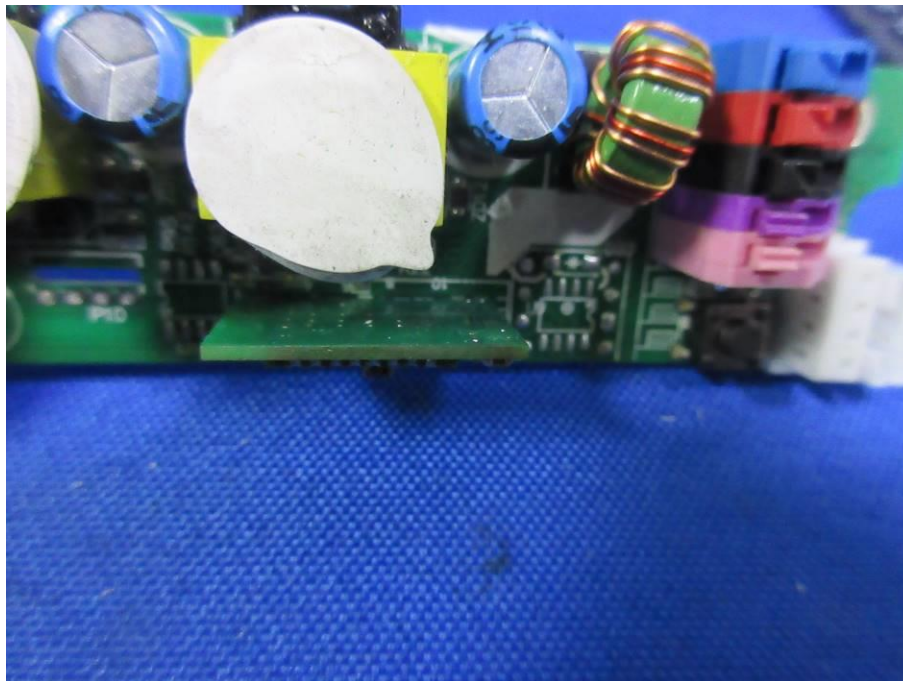


RF Module

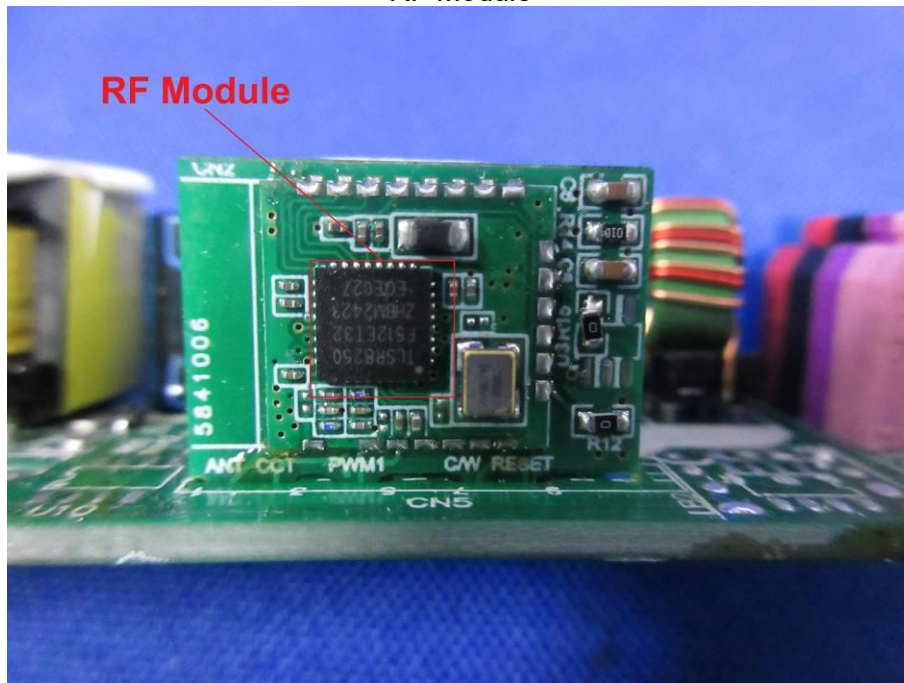


Antenna Location

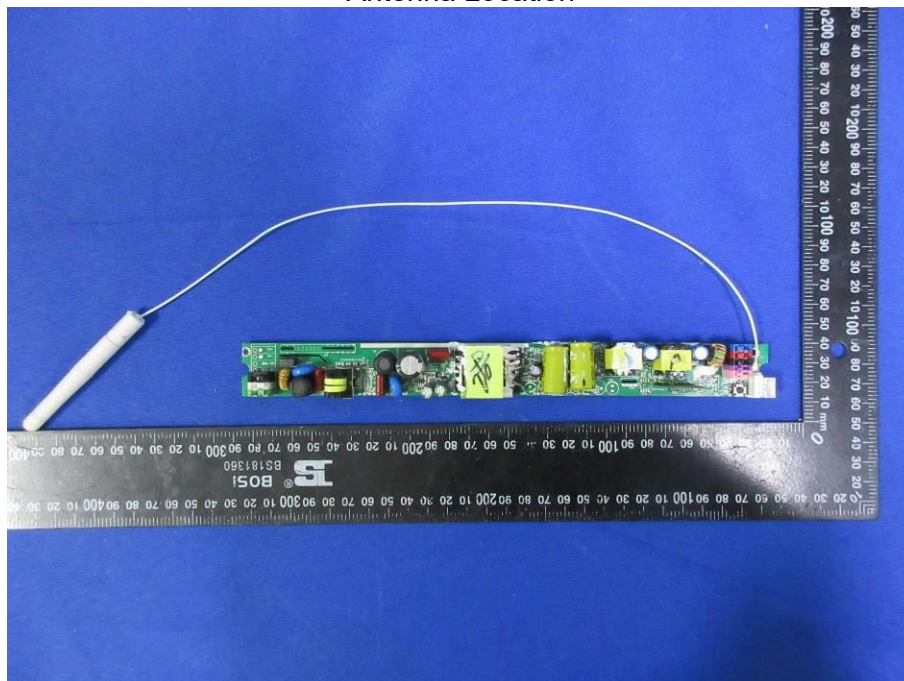

Antenna Connector

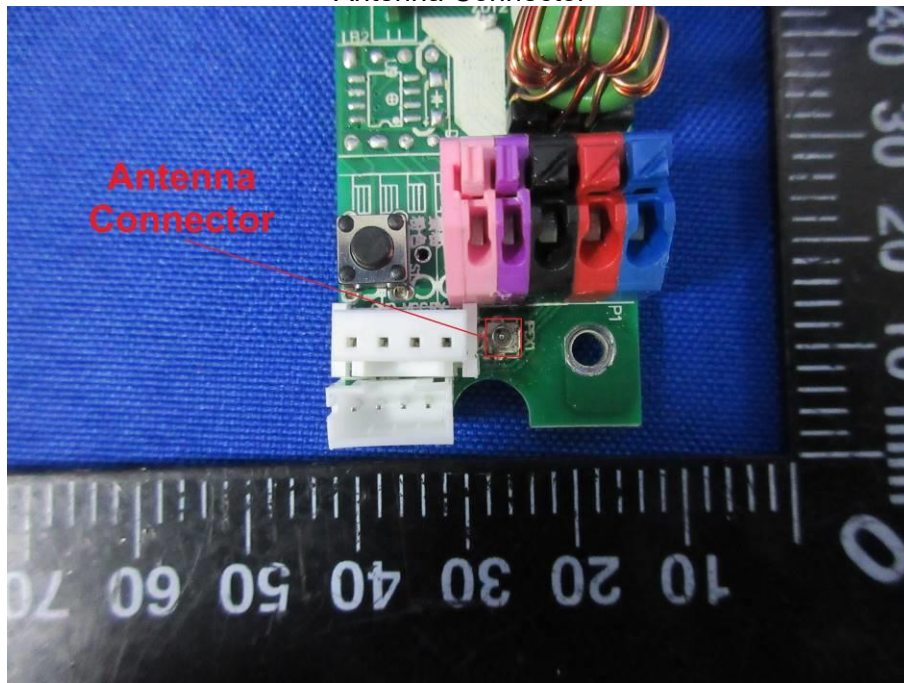

Antenna

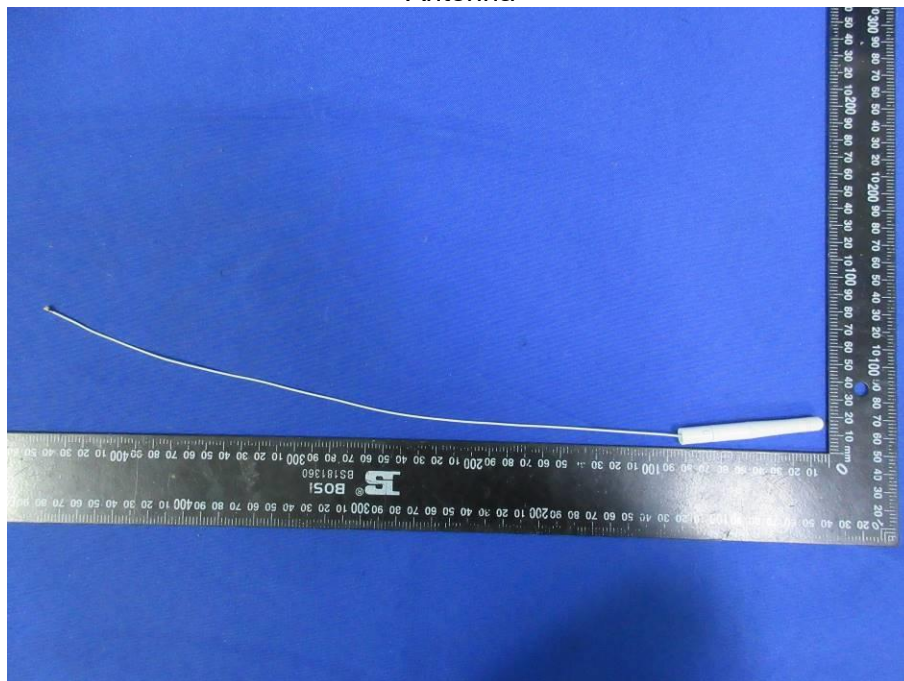

SIF50-I0900/120-347/T/D1/F/APP D


Open View of EUT




Internal View of EUT-1



Internal View of EUT-2

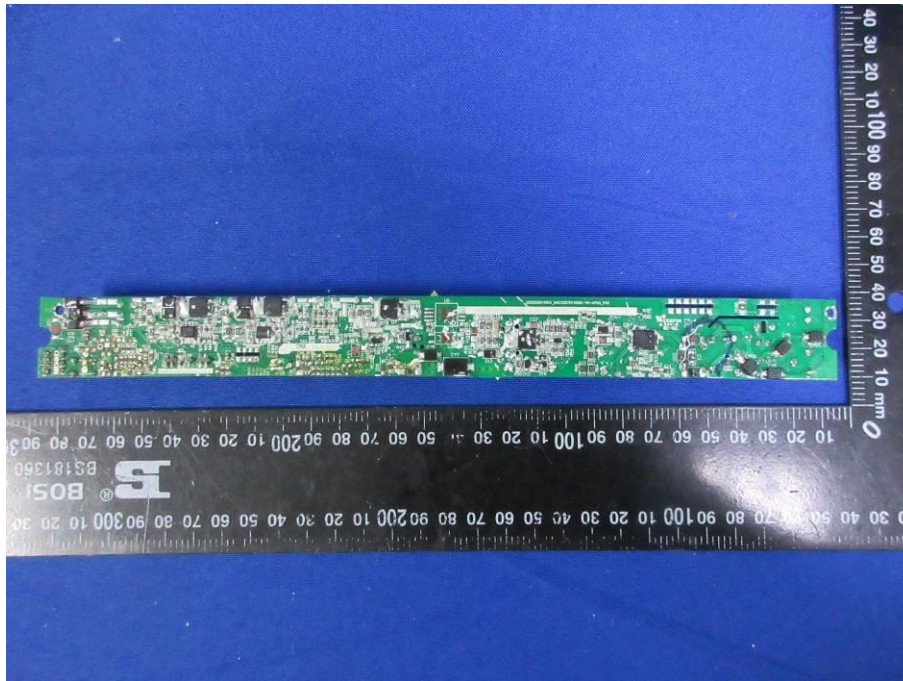


Internal View of EUT-3

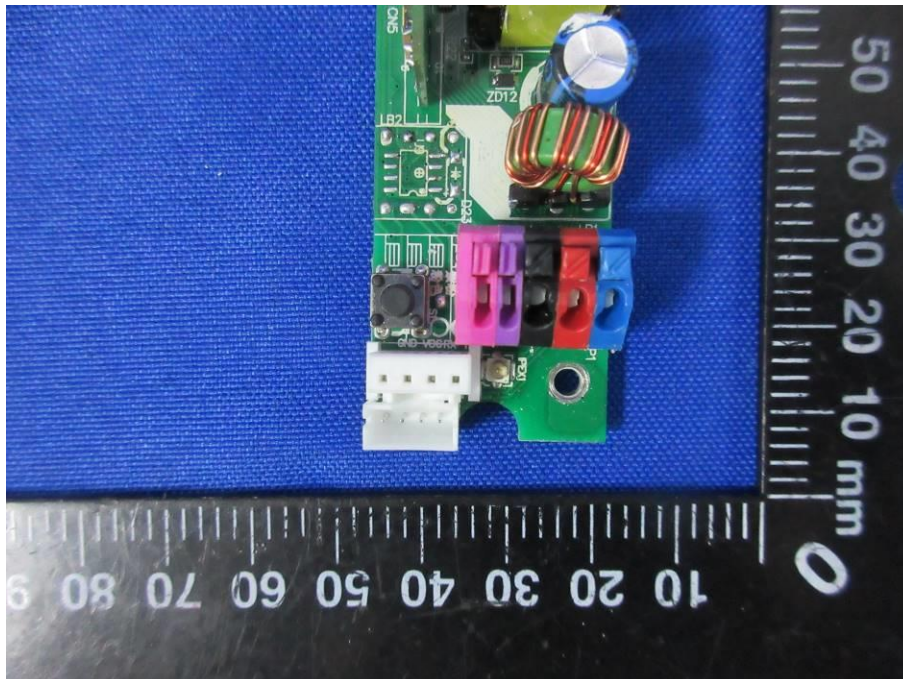


RF Module




Antenna Location

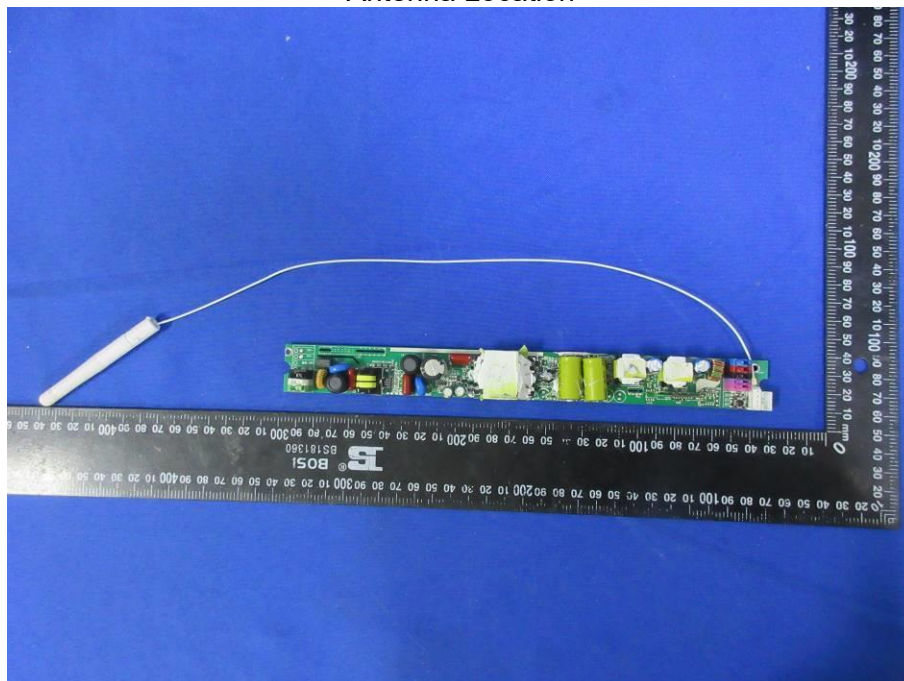

Antenna Connector

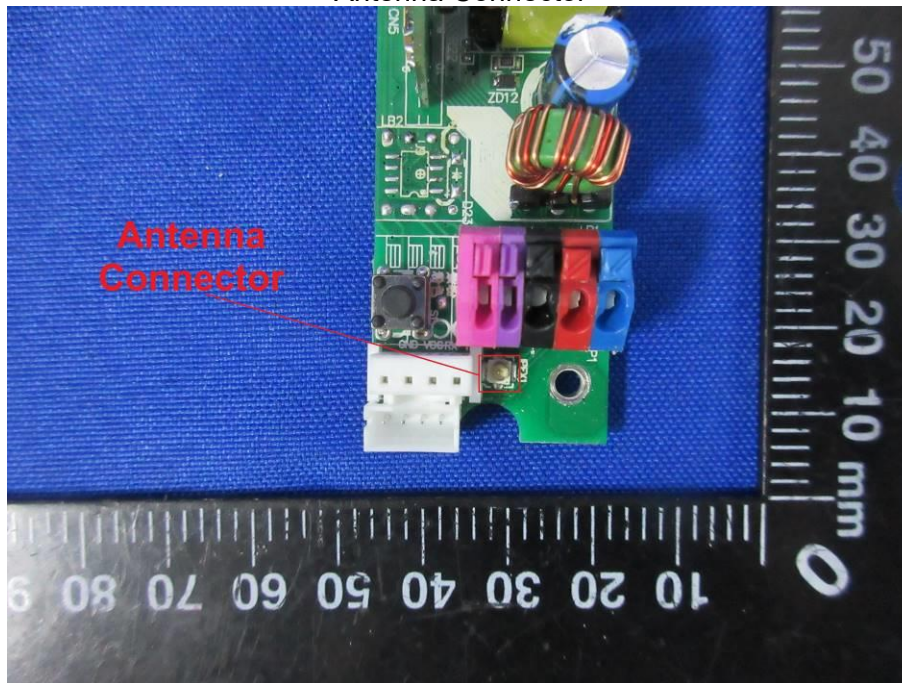

Antenna

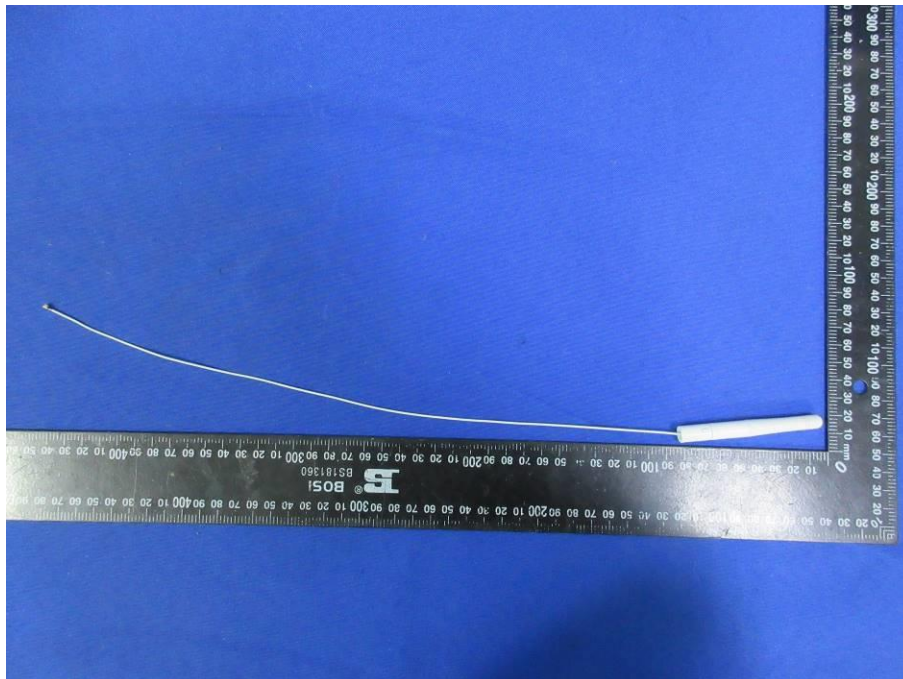

SIF85-I1800/120-347/T/D1/F/APP D


Open View of EUT




Internal View of EUT-1



Internal View of EUT-2

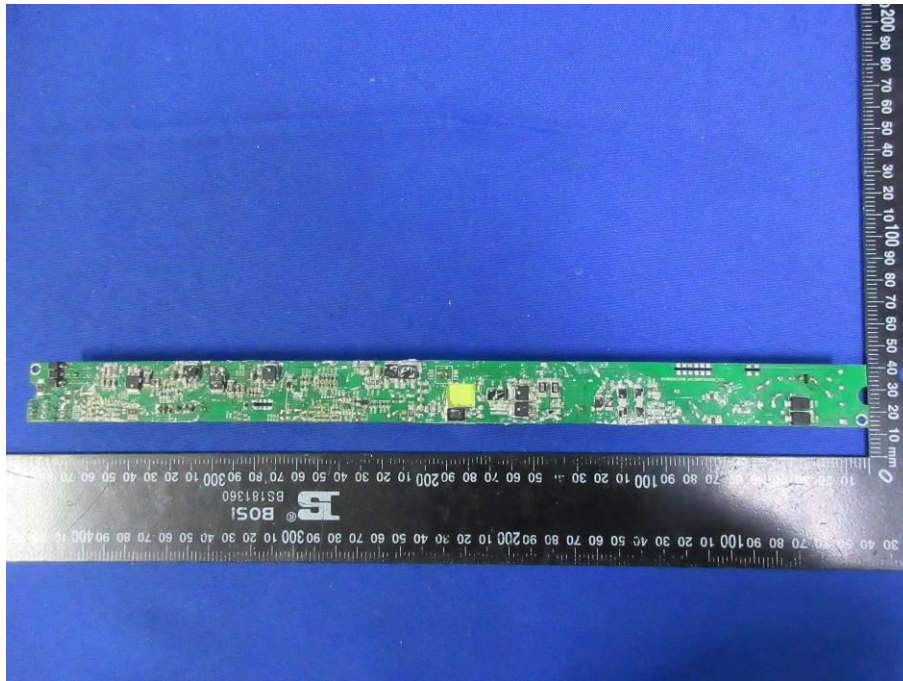

Internal View of EUT-4

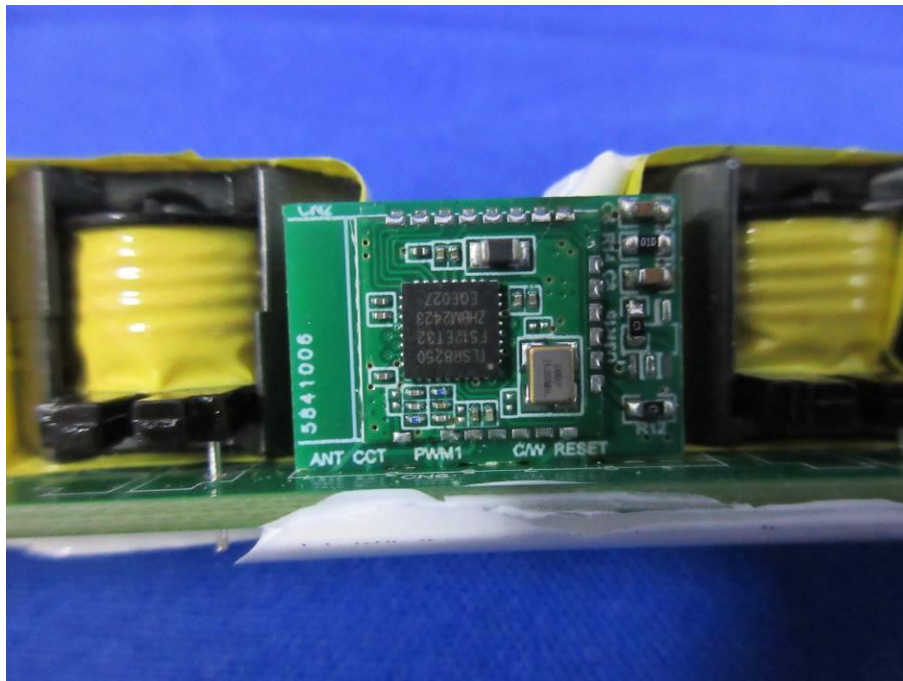


RF Module



Antenna Location



Antenna Connector

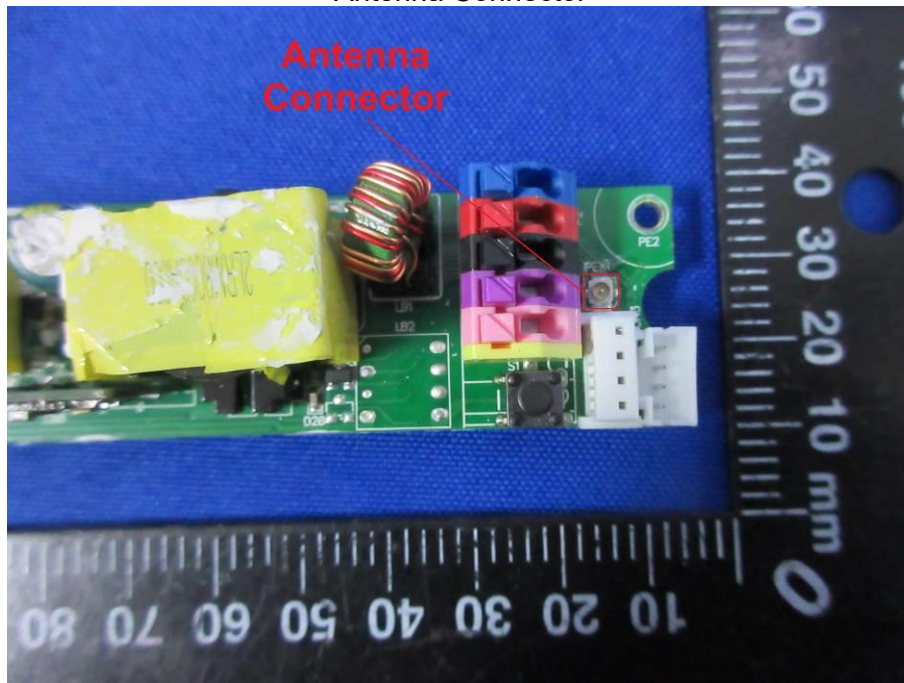

Antenna

