

# Score Band WEKKUK : User Manual



Model Name: 76WKS200



# Before using

---

## ◆ Things to know about using WEKKUK

- The contents of the user guide may differ from the actual product due to the model specifications, software version, or manufacturer of the product.
- Depending on the make, model, and software version of the mobile device connected to the Smart Score Band, the Bluetooth connection may not work, or you may need to use the It may be broken.
- Depending on your system usage, you may experience delayed or missed call and text incoming notifications.
- If you're having trouble connecting to Bluetooth, try power cycling your WEKKUK product and mobile device to reconnect.
- WEKKUK battery life may vary depending on your band's settings and usage habits.
- Due to the possibility of radio interference during operation, this wireless facility cannot provide services related to human safety.
- Store the product carefully in a place that is not subject to vibration, shock, or impact, as this may impair its functionality or appearance.

Please.

- Keep away from fire and direct sunlight, and store away from moisture, dust, or contaminants.
- We are not responsible for any problems caused by consumer disassembly or assembly.

## **Product description and features**

---

- The WEKKUK Smart Score Band is a smartwatch that keeps track of scores and displays odds in sports such as badminton, tennis, baseball, and golf.

A new kind of smart band that specializes in sporting events.

- Apply a physical button to register a score, allowing for accurate score registration with a button press.
- Features include incoming call notification, text viewing, and activity mode.
- Screen Display uses AMOLED for a sharp screen.

# Checking components

---

## ◆ Checking components

- Body, charging cable



**WEKKUK**  
**Smart Score Band**



**Charging cables**

- The supplied components are exclusive to WEKKUK and may not be compatible with other devices.

# What the parts are called and what they do

---



- **AMOLED touch screen**

Toggle menus (swipe by touching up, down, left, or right)

Select button (touch screen)

- **button1**

Go to Score Mode

Earn/cancel points in Score Mode

- **Button2**

Power On / Power Off

Shortcut to the home screen

Earn/cancel points in Score Mode

## Charging the battery

---

- When using your WEKKUK for the first time after purchase, make sure the battery is fully charged.
- Connect the supplied dedicated charging cable to the main unit's charging port to charge.
- The charging terminals on the main unit and the charging cable contain magnets, so make sure to connect them in a way that they are in contact with each other.
- The dedicated charging cable must be used in conjunction with a certified 5 volt genuine charger.



Connecting the main unit's charging terminal to the charging cable's charging terminal

# Descriptions of terminal features

---

## ◆ Power on

With the power off, press and hold the left button on the device for at least 3 seconds.



## ◆ Power off

With the power on, press and hold the left button on the device for at least 3 seconds.



## ◆ Shortcut to the home screen

Short press the left button in any mode



## ◆ Go to ScoreMode


Press and hold the right button for at least 3 seconds in any mode



# Descriptions of terminal features

---

## ◆ Organize screens

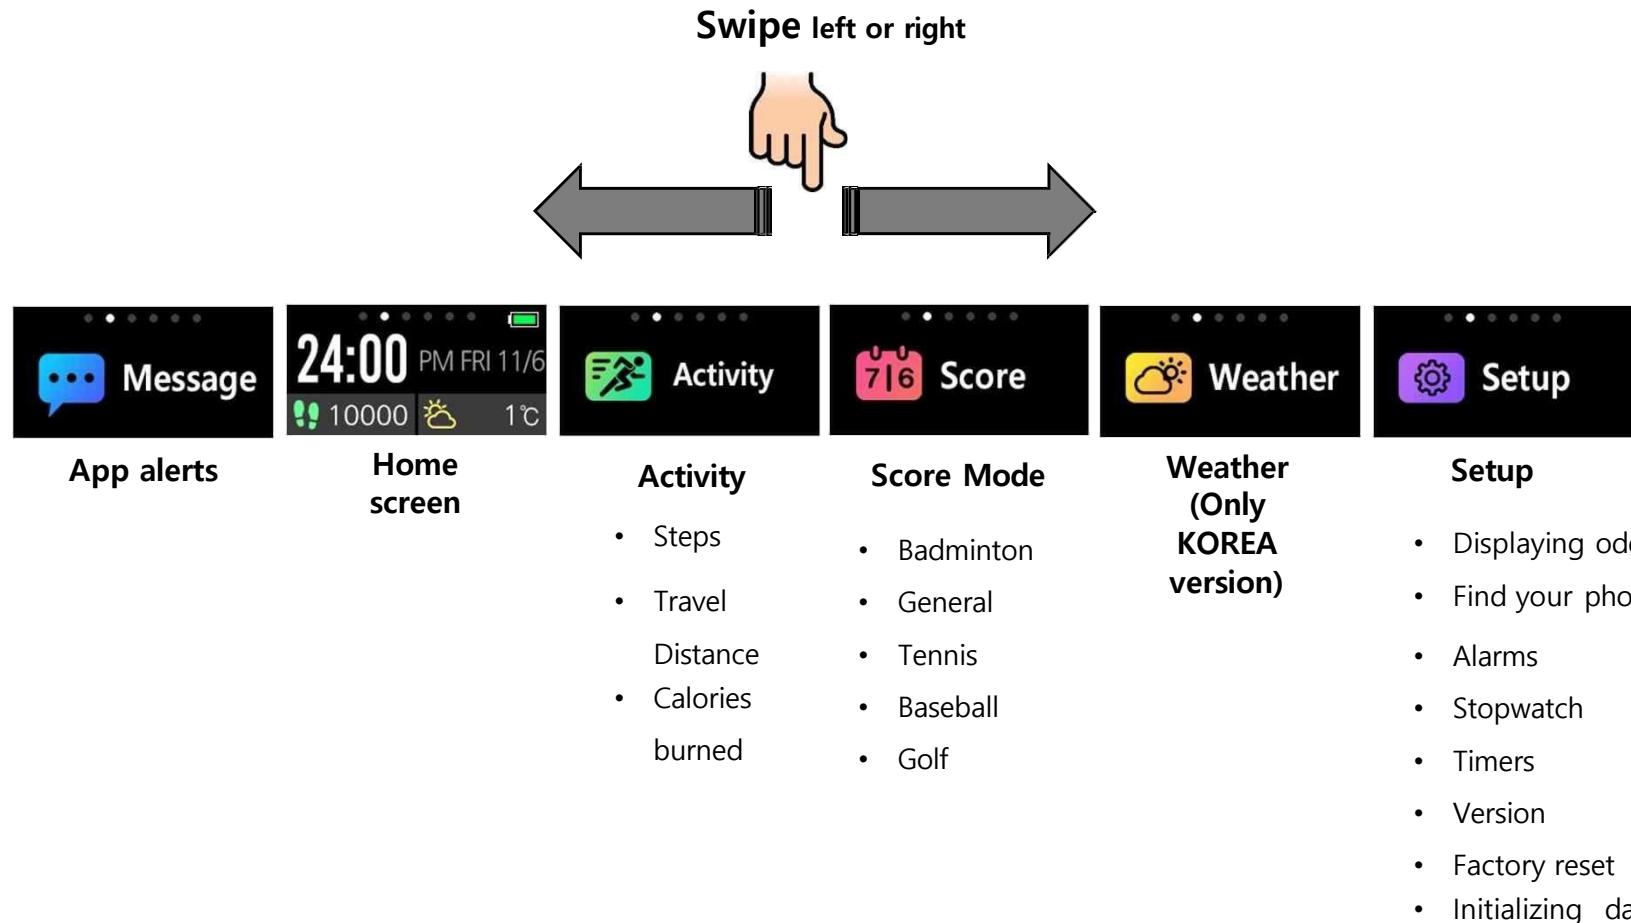

# Consumer redress standards

---

Types of consumer harm		Rewards	
		Under warranty	After Warranty
In normal use, the Naturally Occurring performance, functional In the event of a failure	Requires a major repair within one year of purchase	Product exchange	Not applicable
	Repairable	Free repairs	Paid repairs
	Unrepairable	Within parts availability	Product exchange
Consumer's willful negligence performance, functional In the event of a failure	Repairable	Paid repairs	Paid repairs
	Non-repairable (Shock, fire, immersion, not a performance or functional failure, body damage that is not a performance or functional failure)	Not applicable	Not applicable

- When you purchase a product, you must fill out the warranty form and keep it with your receipt to be eligible for consumer redress.
- If you are sure of the malfunction, please contact your retailer first. If the failure is due to a manufacturing defect, the product is covered under the warranty period from the date of purchase.

You can return it to the retailer where you purchased it for a free repair. You must bring your warranty card with you to the repair.

# Consumer redress standards

---

## ◆ Paid repairs can be applied in the following cases

- Failure is found to be due to consumer negligence within the product warranty period or due to misuse (flooding, breakage, damage).
- If the malfunction is caused by the use of consumables, accessories not specified by us (chargers, batteries, etc.)
- Failure is caused by not following the "Precautions" in the user guide
- Failure caused by an act of God (fire, salt water, water damage, lightning, etc.)
- Consumable parts are at the end of their useful life (batteries, bands, cables, etc.)
- If no guarantee is presented, or if the guarantee does not contain the required items or is forged.

## ◆ The service might be denied in the following cases

- The part has been replaced with something other than the part at the time of purchase (or after-sales service).
- Arbitrarily disassembled, modified, tampered with, duplicated, or used non-original counterfeit parts.
- The request is presumed to be for something other than repair, such as repeated requests for the same product.
- If you bought it used
- The repair was performed at a location other than our designated service center.

# Product warranty information

---

Product name	WEKKUK
Purchase Date	
Where to get it	
Model Name	
Product serial number	
Warranty period	Within 1 year of purchase (battery warranty is 6 months)

## Broadcast Communications Equipment User Guide

This wireless facility may cause radio interference during operation.  
services related to human safety are not available.

---

- You can find the model name and manufacturer's number of your WEKKUK on the box label.
- When you purchase a product, you must fill out the warranty form and keep it with your receipt to be eligible for consumer redress.

# Services

---

Device name	Smart ScoreBand WEKKUK
Merchandisers	76SOFT Ltd.
Manufacture	76SOFT Ltd.
Country of manufacture	KOREA
Product Inquiry	<a href="mailto:as@76soft.co.kr"><u>as@76soft.co.kr</u></a>
Contact AS	<a href="mailto:cartest@naver.com"><u>cartest@naver.com</u></a>
Year of manufacture	Show separately

❖ The content of the User Guide may vary depending on the software version of the product and is subject to some changes without notice to you.

## **-FCC Exposure Statement-**

---

=====

FCC RF Radiation Exposure Statement.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

For body worn operation, this watch has been tested and meets the FCC RF exposure guidelines when used with the strap supplied with this product.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
- =====