


Karaoke speaker instruction manual



Function

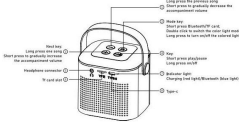

Accessories



Loudspeaker box



Type-c cable



Instructions

Precautions for using speaker

Switch on / off:

When the machine is turned off, the product starts automatically with the Chang An On / Off key. When the TF is not inserted, the card is used, it will enter the Bluetooth mode by default, and the voice prompt will be "Bluetooth mode". Long press the On / Off key to turn off the machine.

Bluetooth connectivity:

Open your phone's Bluetooth settings, search for the device name and then make a pairing connection. After the connection is successful, there will be a prompt tone and the blue light will always be on.

Mobile Playback:

After the Bluetooth connection is successful, open the mobile music player and download your favorite songs or the accompaniment can be played, and the volume can also be adjusted to the appropriate level on the mobile phone.

Tf card play:

Insert the TF card into the device, and the device will automatically play the music in the TF card.

Charge:

Connect the standard charging line to the charger for charging. The red light is always on when charging, and it is full off.

Attention

1. Please disconnect the charger and turn it off before cleaning the machine.
2. Non-professionals are not allowed to disassemble the equipment for three years to avoid machine failure and loss of warranty rights.
3. Please do not place the equipment in the direct sunlight to avoid premature aging of electronic parts.
4. Avoid using in places with flying dust or dirty environment (dust is easy to cause equipment failure).
5. Do not place the equipment in an excessively cold or overheated environment, which may cause the equipment to fail to operate normally.
6. It is recommended that the ambient temperature of the equipment used should not exceed 0°C-40°C, which is relatively moderate (0°C-40°C).
7. Please do not put any objects into the equipment to avoid short circuit or circuit damage. Please do not spill any liquid on the product.
8. Avoid friction and collision between the machine and hard objects to avoid scratching, falling off or other hardware damage.
9. The product shall not be exposed to the sun, fire or similar overheating environment.
10. If it is forbidden to disassemble, impact, squeeze or put the product into fire if the battery has serious failure. Do not continue to use.
11. This manual contains important information, please reserve it.

Bluetooth

1. Press and hold the speaker power on key to start the machine, and the voice prompt "Bluetooth mode" will flash at the same time. Connect the device and the light is always on.
2. Turn on the mobile phone Bluetooth and scan search for the device, and then pair and connect, and you can hear it after connecting. The device sends a successful connection tone.

Speaker

Bluetooth version : 5.3
Horn diameter : 37mm
Horn power : 5W
Working voltage : 3.7V
Frequency range : 200-20KHz
Reverberation : echo sound effect reverberation
Power adapter : DC5V/1.5A
(common with mobile phone charger)
Charging duration : 3.5-4 hours

Information

Product name : mini karaoke speaker
Product model : Y1

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction.