

Welcome Guide RETRO Game Controller 309	Layout	Wired Pairing ① Please make sure that the Switch has turned on the wired connection mode. (Setting - Controllers and Sensors - Pro Controller Wired Communication). ②Attaching the controllers to the Switch will connect them automatically. Wireless Pairing The Joy-Con controllers will remain paired when you detach them from the Switch, and you'll be able to use them wirelessly. Reconnection Press the button or the button to reconnect the Switch, 4 LED indicators on the side will start to flash in a regular pattern as an indication of reconnecting.	FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction
Mapping + Note: The M button on the left controller can only assign the buttons on the left controller. Same goes for the M button on the right controller. Seting L: Hold down the M button and press the button you want to assign to the L4 button for left controller. (Controller will vibrate.) R: Hold down the M button and press the button you want to assign to the R4 button for right controller. (Controller will vibrate.) *The above steps can directly change the button to be set. Cancel Hold the M button for 5 seconds to cancel the assaign function of the controller.(Control-ler will vibrate.) Buttons can be set Left controller: L / ZL / Left stick button and Control Pad (Up / Down/ Left/ Right). Right controller: R / ZR / Right stick button and A / B / X / Y button.	Turbo Fuction + Note: The Turbo button on the left controller can only set the buttons on the left controller. Same goes for the Turbo button on the right controller. Seting A: Hold down the Turbo button and then press the button that you want to set for the 1st time to turn on the normal turbo function. (Controller will vibrate.) B: Hold down the Turbo button and then press the button that you want to set for the 2nd time to turn on the automatic turbo function. (Controller will vibrate.) Cancel A: Hold down the Turbo button and then press the button that you have set for the 3rd time to turn off its turbo function. (Controller will vibrate.) B: Hold the Turbo button for 5 seconds to cancel the Turbo function of all buttons. (Controller will vibrate.) Buttons can be set Left controller: L / ZL / 3L button and Control Pad (Up / Down/ Left/ Right). Right controller: R / ZR / 3R button and A / B / X / Y button.	Vibration Adjustment Press the Turbo button and move the Joy-stick left or right to adjust the vibration level of each controller. (Controller will vibrate.) * There are 3 levels of Vibration : 100%, 50% , 0%. Status Wake Up After the first successful connection, press the button to wake up the switch and reconnect (other buttons can not wake up). Low Battery When the battery power is low, the LED1-LED4 indicator lights flash quickly at the same time. Charge Charging: The LED1-LED4 indicator lights slowly and Charge lamp will turn red. Full: The LED1-LED4 indicator lights off and Charge lamp will turn green.	doyokygame DOYOKY Game Website: www.doyoky.com Customer: service@doyoky.com Business: contact@doyoky.com Join our community

材质：铜版纸，彩色打印