

## **⚠ WARNING: ADULT ASSEMBLY REQUIRED**

1. Keep out of baby's reach.
2. Packages of toys that are intended to be assembled by an adult and that in their unassembled state contain potentially hazardous sharp edges or points, or small parts if the toy is intended for children under 3 years of age, shall carry safety labeling in accordance with stating that the toy is to be assembled by an adult.

**⚠ WARNING:** To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA

K07-SMS-155-015

015-01

## **Range Rover Sport SVR electric stroller**

Read Operation Instructions Carefully Before Use

## **Range Rover Sport SVR**



"Please charge battery for 8-10 hours only"

## **ASTM STANDARD**



## **Assembly Help/Tech Support/Missing Parts**


BEST RIDE ON CARS  
11937 Denton Dr  
Suite # 101  
Dallas, TX 75234  
Ph:1-888-411-1786

Land Rover and the Land Rover Logo are trademarks owned and licensed by Jaguar Land Rover Limited. They are used by Dongguan Chi Lok Bo Toys Company Limited under license.

## Repair and Maintenance

- 1) The product contains electronic components and must not be used in water or in a damp environment. Clean it with a piece of wet cloth.
- 2) Rotating parts should be checked regularly, to see whether they are jammed by any sundries and to keep their normal lubricating state.

## Dimensions of entire car

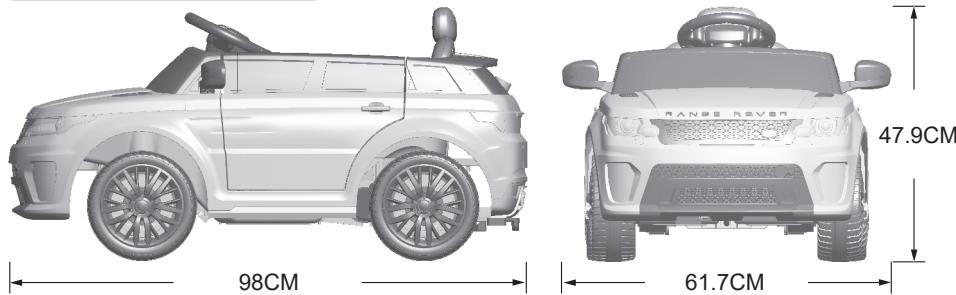

## Contents

- I. Product Specifications and Parameters
- II. Components List
- III. Assembly Diagram
- IV. Function and Operation
- V. Battery and Charger Operating Guide
- VI. Simple Fault Removal Guidance
- VII. Warning

## I. Product Specifications and Parameters

1. This product is suitable for the children of 3-6 years old, and should be used under adult supervision!
2. Product dimensions: 98 x 61.7 x 47.9CM
3. Product maximum load weight: 30 kg
4. Foot speed: 2.0 / 3.2 km/h
5. Product driving motor: DC 6V/15000r (390 dual drive)
6. Product charger: input AC 100-240V (50/60Hz), Output DC 15V / 400 mA
7. Product rechargeable battery: DC 12V / 3.5 AH (1 piece), about 200 cycles of charging and discharging
8. Product operating ambient temperature: 0-40 C

- 6) Small parts possibly fall off when this product is used improperly. So, it is unsuitable for children under 36 months old.
- 7) Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.
- 8) This product is only allowed to be used by a child; the maximum load is 30kg, and therefore the overload is not allowed.
- 9) Keep away from fire.
- 10) The product instructions shall be kept as they contain important information.

## 3. WARNING:



## WARNING

To reduce the risk of injury, adult supervision is required. Strictly forbidden using on the roadways, near motor vehicles, slopes, swimming pools and where there is water; Please wear shoes; this toy car can only be used simultaneously by one person. Keep away from kids before assembled by adult, as there are potentially sharp edges, points, or small parts.



## WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.



## WARNING

Protective equipment should be worn. Not to be used in traffic.



## WARNING

This product is unsuitable for children under 3 years due to its maximum speed.



## WARNING

For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.

Charger used with the toy should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, it must not be used until the damage has been repaired.





## WARNING

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

## Operation of overcurrent protector

- 1) The overcurrent protector is installed under the seat. You can see it by twisting the seat screw off (as shown in the figure) and taking the seat away.
- 2) When the car is overloaded, the overcurrent protector automatically disconnects the circuit (for protecting the circuit); when the circuit fault is removed, the overcurrent protector automatically connects the circuit.
- 3) When the battery has power and the car can not run, please check whether the circuit of the car has an open circuit or short circuit.

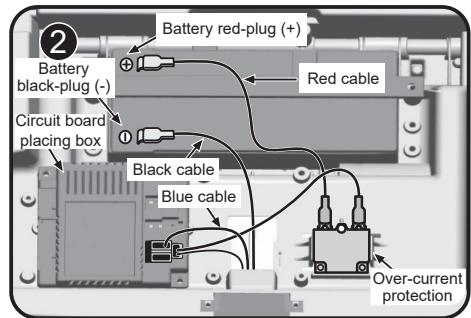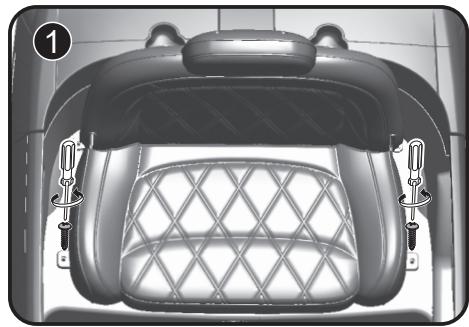

**Warning** Fire danger! The overcurrent protection is only limited to 5A.

## VII. WARNING

### 1. Battery warning:

- 1) If the product is not used for a long time, please fully charge the battery and then turn off the power switch for storing the car. The battery shall be recharged once every other month, otherwise the battery service life will be shortened or the battery cannot be charged again.
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).

#### Battery warning:

- 1) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).
- 2) Rechargeable batteries charging operation can be carried out only by adults.
- 3) Non-rechargeable batteries cannot be charged.
- 4) The rechargeable batteries can be charged only after being taken out from the remote control battery compartment.
- 5) Please do not mix different types of batteries or used batteries and new batteries.
- 6) If this product has not been used for a long time, the batteries shall be taken out from the remote control battery compartment.
- 7) Exhausted batteries are to be removed from the toy.

### 2. Product warning:


- 1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
- 2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
- 3) The children shall correctly use the car under the adult guidance and supervision, otherwise they may make themselves or the others injured.
- 4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in such dangerous places as street, road, sleep slope and beside swimming pool, otherwise the traffic and drowning accidents may occur.
- 5) Please put on shoes and protection equipment before use, such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.

## II. Components List



|  |   |  |
|--|---|--|
| 1. Car Body                                      | 11. Tail wing   | 21. Front axle frame connecting rod locknut (5MM) 2PCS |
| 2. Windshield                                    | 12. Window  | 22. Steering wheel locknut (5MM)                       |
| 3. Steering Wheel                                | 13. Front axle frame connecting-rod                       | 23. Rear mirror locknut (4MM) 2PCS                     |
| 4. Rear-view mirror                              | 14. Rear wheel axle                                       | 24. Ring 4PCS  |
| 5. Hand shank                                    | 15. J-shaped stick  | 25. Latch spring 4PCS                                  |
| 6. Wheel 2PCS                                    | 16. Front axle frame connecting-rod screw (5 x 13PM) 2PCS | 26. Charger  |
| 7. Driving wheel (with rubber wheel sleeve) 2PCS | 17. Steering wheel screw (5x33PM)                         |  |
| 8. Wheel cover 4PCS                              | 18. Rear-view mirror screw (4x17PM) 2PCS                  |  |
| 9. Seat  | 19. Seat and backrest screw (4x15TAB) (D=7.5) 4PCS        |  |
| 10. Seat backrest                                | 20. Door screw (3x10PAB) 12PCS                            |  |

### III. Assembly Diagram

#### 1. Installation of front axle frame connecting-rod and wheel


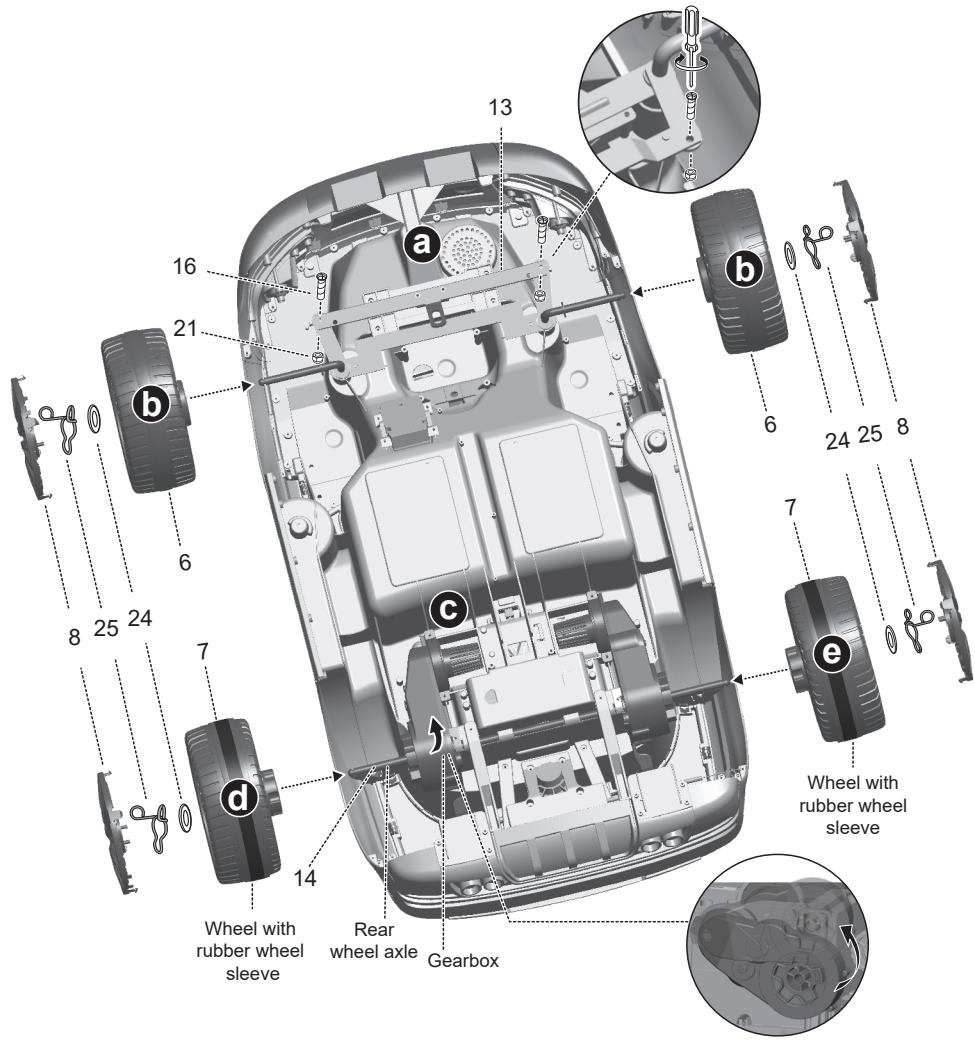


- a** Install the front axle frame connecting-rod (part 13) at the assigned location, and then tighten it with the front axle frame connecting-rod screw (part 16) and locknut (part 21). (The tightening degree shall be based on the flexible swing direction.)
- b** Put the wheel (part 6) and ring (part 24) into the front axle in sequence, clamp them into the groove position of the axle with the latch spring (part 25) and fasten the wheel cover (part 8).
- c** Rotate the motor gearbox upwards according to the direction indicated by the arrow until the motor gearbox hole aligns with the car body axle hole, and then insert the rear axle (part 14) into the assigned location of the car body.
- d** Insert the rear wheel axle (part 14) into the assigned location of the car body, put the driving wheel (part 7) with rubber wheel ring and ring (part 25) into the front axle in sequence, clamp them into the groove position of the axle with the latch spring (part 26) and fasten the wheel cover (part 8).

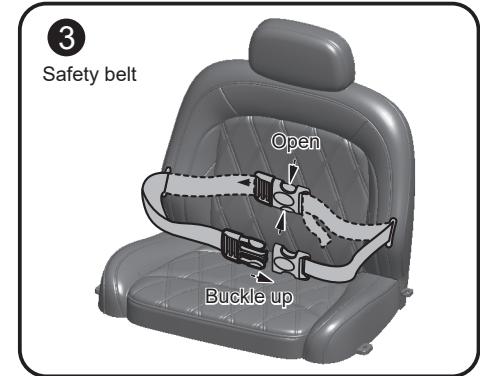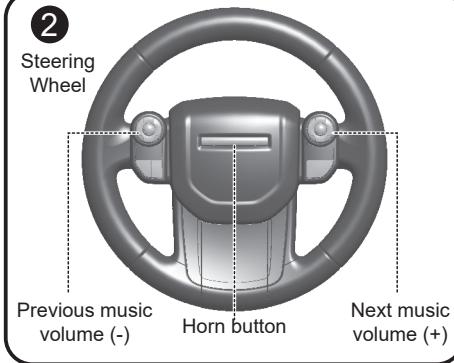

### V. Battery and Charger Operating Guide

1. The charging socket is located at the lower part of the car seat.
2. The battery and charger which are provided or recommended by factory can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out only by adults but not children.
5. The vehicle has charging and power-off function, so when charging, you can manually press the power button on the central control panel. If the power button cannot start the vehicle, it means it is charging.
6. The battery shall be fully charged before first use, not exceed 15 hours.
7. The lukewarm phenomenon of the charger and battery will occur during charging.

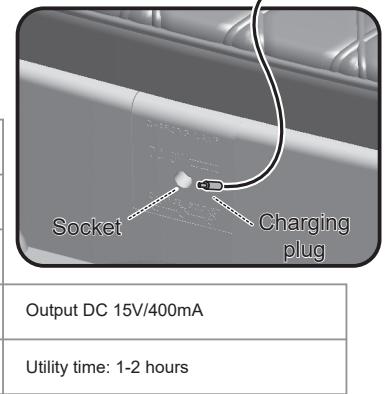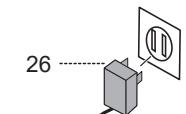

|                                      |                              |                         |
|--------------------------------------|------------------------------|-------------------------|
| Power Supply                         | Chargeable type              |                         |
| Battery specifications               | DC 12V/3.5AH                 |                         |
| Over-current protection              | 5A                           |                         |
| Charging Source                      | Input AC 100V-240V 50Hz/60Hz | Output DC 15V/400mA     |
| Battery charging time for every time | Charging Time: 8-10 hours    | Utility time: 1-2 hours |

### VI. Simple Fault Removal Guidance

| Trouble                               | Key points of inspection   |
|---------------------------------------|--|
| 1. The car cannot be started          | <ol style="list-style-type: none"> <li>1) Check whether the battery has sufficient power and whether it is charged for 8-10 hours each time.</li> <li>2) Check the power switch, all plugs of the dash receiver under the seat, and the battery terminal line are properly inserted.</li> <li>3) Check whether the circuit of the over-current protector is automatically disconnected (when the motorcycle is overloaded and blocked, the circuit of the over-current protector will be disconnected to protect the motor and dash receiver.)</li> <li>4) Check whether the motorcycle has been stored for a long time and its battery is not charged on time.</li> </ol> |
| 2. Music sound is distorted or silent | Check whether the battery power is enough, and charge or replace the battery if not.   |

7) Pedal/high speed button: Press this button to switch to the pedal/high speed mode and the green light is on, then step on the pedal to drive at high speed, and release the pedal to slowly brake and stop.

8) Horn button: Press this button to make a horn sound in any audio playback mode. Press and hold this button to keep the horn sound ringing.

9) Steering wheel button: ① The middle is the horn sound button, which will be sounded in any audio playback mode; press and hold this button, the horn will sound continuously. ② The left button and the right button are equivalent to the previous music/volume+button and the next music/volume- function, etc on the switch board.

10) Display: Four digits display: ① Power display (7 lights: 4 green lights, 2 yellow lights, and 1 red light), all lighting up indicate that it is in full power; As the voltage decreases, it will turn off, only a red light is up, and it indicates that it is in low voltage and needs charging; Flashing red light indicates it is ready for low voltage protection shutdown! ② The function icons on both sides of the display are "MUSIC, U, BT, V, ▶, II", and the mode or state in which it lies will be displayed by its corresponding icon.

11) USB/Bluetooth playback function:

① When the machine is turned on without USB device inserted, it will enter the built-in music playback mode, the English audio prompt "music player" will be given out, and the display MUSIC will be always on. Then press the music button to play the built-in music;

② Insert the USB device and the machine will be automatically switched to the USB mode. The English audio prompt "USB mode" will be given out and the display "U" will be always on. After the prompt sound ends, the audio file in the USB will be automatically played;

③ When the machine is turned on with USB device inserted, it will automatically enter the USB mode and automatically play the audio file in the USB. At this time, the music button on the control panel is not functioned. When the USB is pulled out, it will be automatically switched to the built-in music mode;

④ When no USB device is inserted, bluetooth is in standby state at any time. When being connected to a bluetooth device, the English audio prompt "bluetooth mode" will be given out and the "BT" on the display will be always on. Then the audio file in the bluetooth device can be played. At this time, the music button on the central control panel is not functioned; when the bluetooth is disconnected, there will be a beep sound. The machine will be automatically switched back to the built-in music mode, "BT" on the display will be off and the "MUSIC" on. (Bluetooth cannot be disconnected on the central control panel and can only be disconnected on the external bluetooth device)

⑤ When the USB device is inserted, the bluetooth cannot be connected. In other words, USB device has priority.  
⑥ Name of Bluetooth: CHILOKBO

12) Sleep function: the system will enter sleep mode when it is without driving for 30 min, and the central control board will automatically shut down, and all functions will turn off!

13) When the voltage drops to around 8.0V, the red light on the battery indicator flashes, and there is a low battery prompt sound (once every 30 seconds). If it is not turned off or charged, the central control panel will automatically power off after multiple prompts, and the vehicle will automatically stop!

14) Charging and power-off function: When charging the car, the central control board will automatically power off. All functions will be turned off, and the car cannot be started!

### 3. Normal operation:


1) Foot switch mode

A. Press the main power switch button


B. Press the pedal low speed or high speed button

C. Select forward/reverse direction

D. Turn on the foot switch to start the car

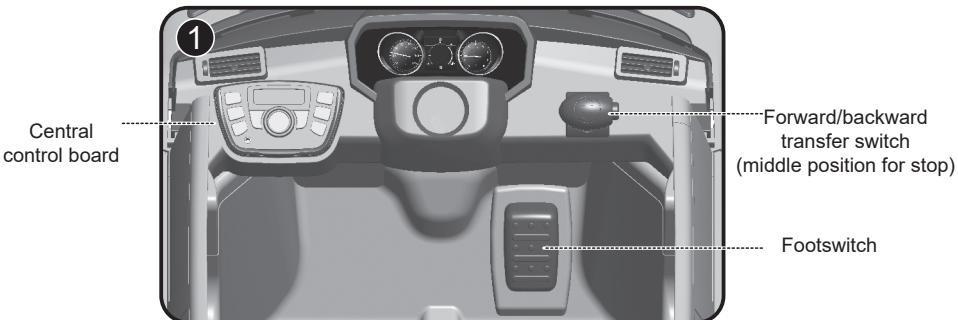


### 2. Installation of J-shaped stick

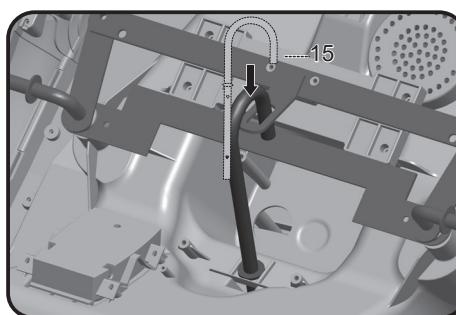


Insert the J-shaped iron hook (part 15) into the designated position in front of the car.

### 3. Installation of steering wheel and hand shank

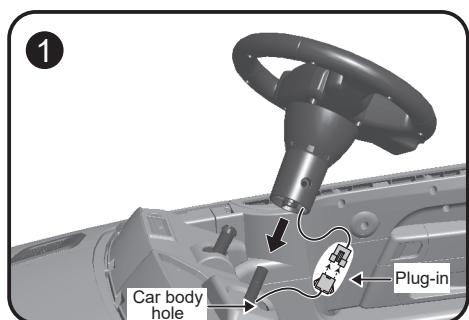


Plug the wire plug of the steering wheel into the wire plug from the car body hole correspondingly, and then put the connected plugs into the car body hole.

### 4. Installation of power supply

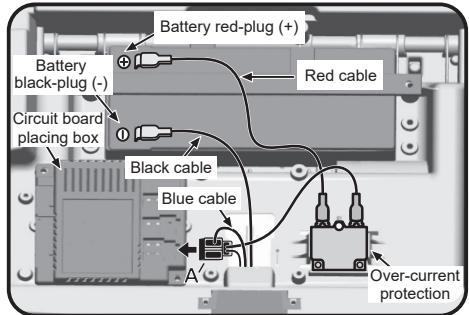


Insert plug (A) into the circuit board to its bottom.

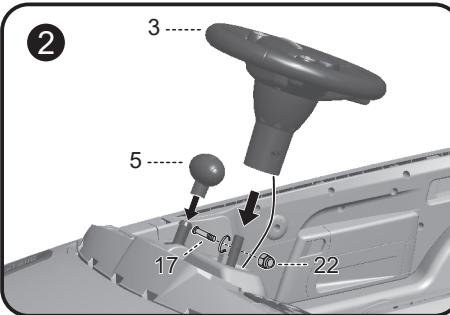


Install the steering wheel (part 3) on the J-shaped iron hook, and tighten with the steering wheel screw (part 17) and the steering wheel anti-loose nut (part 22); then insert the handle (part 5) into the designated position and press down firmly to make it reliably connected.


### 5. Mount seat and seat backrest

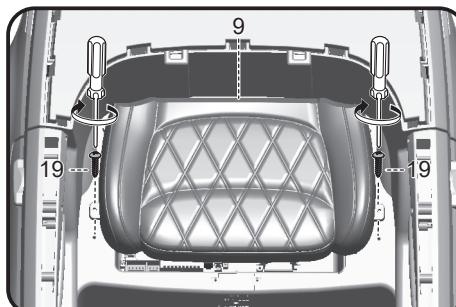

After installing the power supply, assemble the seat (part 9) on the specified position and tighten it with the seat screw (part 19). Then mount the seat backrest (part 10) on the specified position and tighten it with the seat backrest screw (part 19).

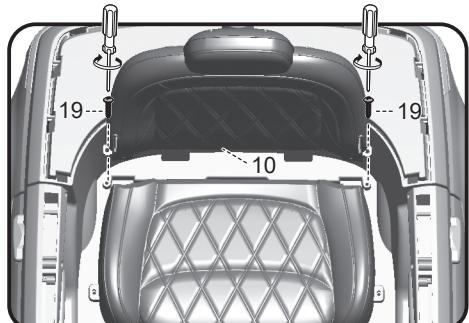


## 6. Installation of tail wing

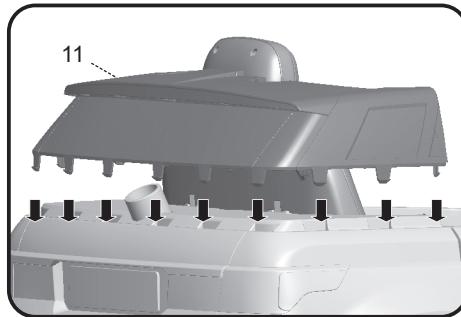


Insert the empennage (part 11) into the corresponding hole along the arrow direction and then tighten the screw.

## 7. Install the window

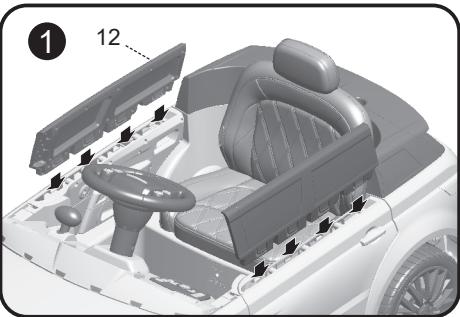


Insert the window (part 12) into the designated position on both sides of the car-body. Before installation, please press each buckle position to firmly connect.

## 8. Install the rear-view mirror and windshield

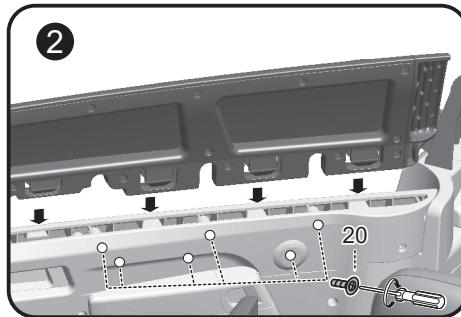


Tighten with the door screws (part 20), as shown in the figure2.

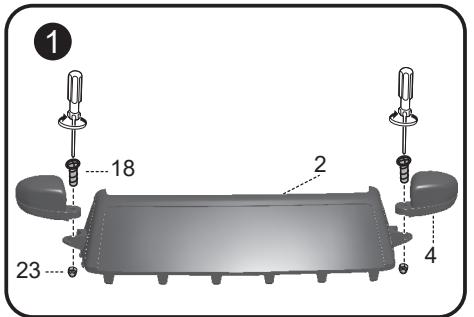

Assemble the rear-view mirror (part 4) on the windshield, then tighten the rear-view mirror with the screw (part 18) and the lock nut (part 23).

## 9. Open the car door

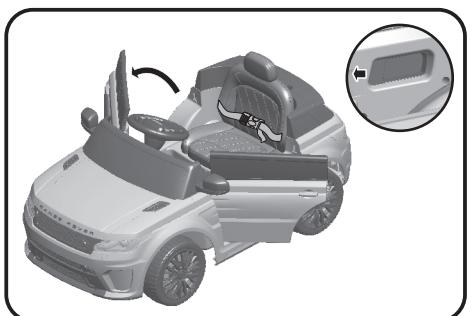


Push the switch in the car door panel forwards, turn over the car door outwards and open the car door.

## IV. Function and Operation

### 1. Main functions:

- 1) Rear drive: Power motor gearbox for powerful front/rear power.
- 2) Forward/backward function: The right side of the dashboard is provided with the three forward gears for speed regulation, neutral gear and reverse gear.
- 3) Foot switch function: Press the foot switch button, when the handle is in forward or backward position, step down the foot switch to move the car forward or backward, and release the foot switch to stop the car.
- 4) Charging protection function: All functions needing to be powered by the battery will fail when the battery is being charged.
- 5) Forward/backward brake function: No matter what the forward or backward is operated, there will be the relay brake function during stop.

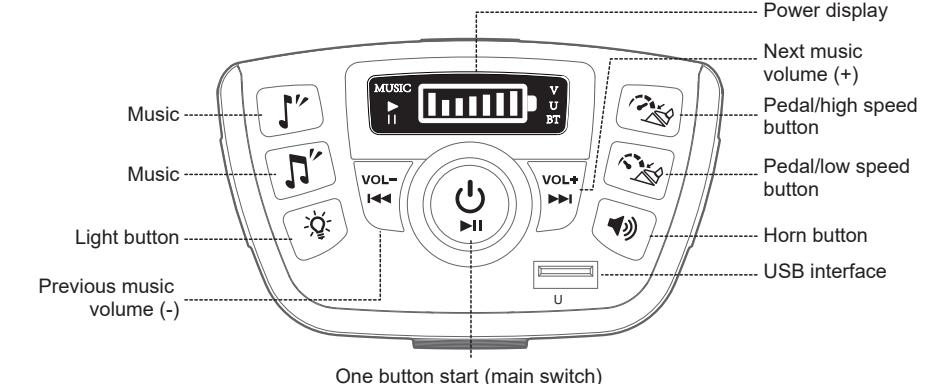

1) One-button start button: ① Press this button once to turn on the main power switch, and the system is in standby mode. At the same time, the horn emits a sound of engine. The red light of the one button start button and the green light of the foot low speed button are up, and the display screen shows the battery level; then it emits an English prompt sound for "music player" music playback. After the prompt sound ends, the green light of music button will light up. ② After pressing this button for 2 seconds, the main power will be cut off and the system will be shut down.

2) Music button: Under MUSIC play mode, press this button to play a song, and the green light of this button is on; press this button again to play the next song; there are 2 music buttons, each button will play 3 songs repeatedly.

3) Previous\Volume - Button: ① In MUSIC USB BT mode: Short press this key, the green light will light up once, and it will switch to the previous music; Press and hold this button for 2 seconds, the green light on this button will light up, and the volume will decrease. ② The total volume is divided into 30 levels, and in each starting, the default volume will be at level 25. ③ Each time of starting, the default volume value will be U25.

4) Previous\Volume + Button: ① In MUSIC USB BT mode: Short press this key, the green light will light up once, and it will switch to the next music; Press and hold this button for 2s, the green light on this button will light up, and the volume will increase. ② The total volume is divided into 30 levels, and in each starting, the default volume will be level 25. ③ Each time of starting, the default volume value will be U25.

5) Lamp button: It is off when power-on. Press to turn on the car lamp, and the green light is on; press again to turn off the car lamp and at this time the button green lamp is off.

6) Pedal/low speed button: ① The power-on default mode is pedal/low-speed mode and the green light of this button is on. Step on the pedal to drive at a low speed and , and release the pedal to slowly brake and stop. ② Safety protection function: When stepping on foot switch to start the car, you must first loosen the foot switch and then step on it to start.

Install the windshield (part 2) at the assigned location of the car front end, find each buckle position before installation, and then press it forcefully until each buckle position is tight.