 


Hk5011说明书

350X100MM 120G铜版纸 两面印刷 单黑 折页

 
无线音箱

使用说明书

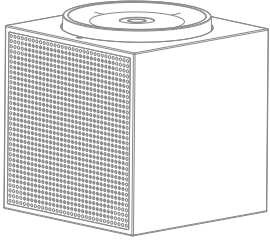

在使用产品前，请仔细阅读说明书，并严格按说明书要求使用。阅读后请妥善保管，以备日后查阅。

产品示意图

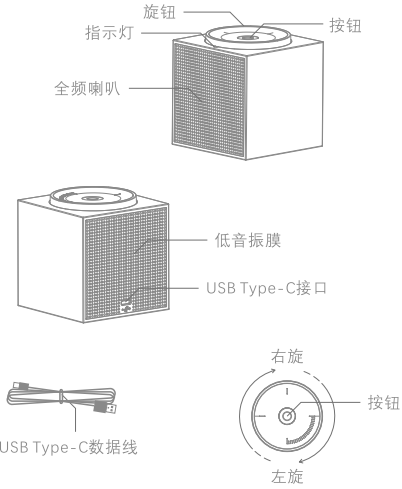

使用

1.初次使用或长时间存放后再次使用时，请将本产品充满电。充电时请使用1A或以上的USB接口适配器。

2.产品长期不使用，建议每3个月充电一次，以免影响电池寿命。

3.PC连接方法

用随机附送的USB Type-C数据线将音箱与电脑的USB接口连接。首次连接，电脑系统会自动识别并安装驱动。驱动安装成功后，一般情况此时音箱有声音发出（确认电脑有音频在播放），如果没有，请检查电脑的声音播放设备是否默认为USB Audio。

以WIN10系统为例，点击任务栏右下角的小喇叭，会弹出一个窗口，点击窗口右上角的箭头，选择USB Audio，设置完成。

4.指示灯状态

音箱	指示灯（红色）	指示灯（蓝色）
正在充电	常亮	/
已充满电	熄灭	/
无线等待连接	/	快闪(10分钟无连接自动关机)
无线或PC已连接	/	常亮
播放中	/	慢闪

5.按键使用

无线模式（手机搜索连接BT_5011）	
长按(3秒)	开机或关机
单击	暂停播放
双击	切换PC模式(需将数据线连接电脑USB口)
三击	断开无线连接或发起回连
左旋	音量减
右旋	音量加（最大音量播放“滴滴”提示音）

PC模式(需将数据线连接电脑USB口)

长按(3秒)	开机或关机
单击	暂停播放
双击	切换无线模式
左旋	音量减
右旋	音量加（最大音量播放“滴滴”提示音）

6.提示音

提示音	音箱
嘟嘟嘟嘟（升调）	开机
嘟嘟嘟嘟（降调）	关机
滴滴	调到最大音量
噔噔噔噔	电量低，请及时充电，否则自动停机

故障排除

1.无法开机：
为防止误触开机，请确认开机方式为长按开关3秒。

2.使用过程中突然关机：
电量极低，请充电后使用。

3.插数据线时红色指示灯不亮：
电量充足，产品未进入充电状态，红色指示灯不亮。

4.双击或三击无作用：
请重新尝试快速连续按下按钮。

5.数据线已经接入，但是无法进入PC模式：
请使用随机附送的4芯数据线，或确认使用的不是普通的2芯充电线。

6.充电长时间充不满：
请使用5V 1A的电源适配器充电。

安全须知

 
1.禁止使用超过5V的电源对产品充电；

2.避免雨淋、靠近发热物体、阳光直接暴晒；

3.禁止非专业人员打开维修或改装内部线路。


WIRELESS SPEAKER

INSTRUCTION

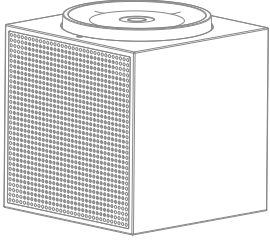

Before using the product, please read the manual carefully. After reading, please properly keep the manual for future reference.

 Product Diagram

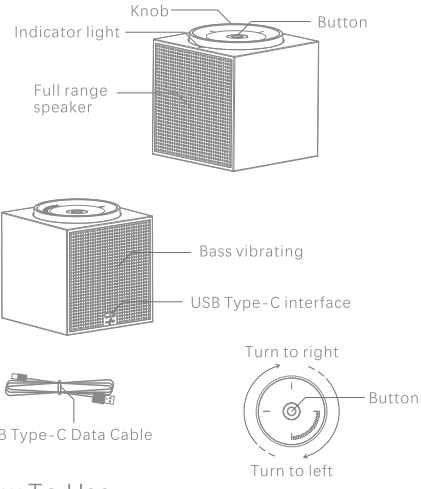

How To Use

1.Please fully charge the product when it is used for the first time or after long-term storage.Please use USB interface adapter of 1A or above when charging.

2.If the product is not used for a long time, it is recommended to charge it every 3 months to avoid affecting the battery life.

3.PC Connection Method

Use the USB type- C cable to connect the speaker to the USB port of the computer. The computer system will automatically identify and install the driver for the first time. After the driver is installed successfully, there is usually a sound from the speaker at the same time (make sure that the computer is playing audio), if not, please check whether the computer's sound playback device is USB Audio by default.

Take the win10 system as an example, click the small speaker in the lower right corner of the taskbar, a window will pop up, click the arrow in the upper right corner of the window, select USB Audio, and the setting is completed.

4.Indicator Light Status

Speaker	Indicator(red)	Indicator(Blue)
Charging	ON	/
Full charging	OFF	/
Wireless waiting for connection	/	Quick flash(will turn off automatically if cannot connect in 10min)
Wireless or PC connected	/	ON
Playing	/	Slow flash

5.Button

Wireless Mode (using mobile phone to search and connect BT_5011)	
Long press(3s)	Turn on/off
Click on	Pause playback
Double click	Switch PC mode (connect usb cable with computer)
Three click	Disconnect the wireless link or initiate a connection back
Turn to left	Volume down
Turn to right	Volume up (play'didi'at maximum volume)

PC Mode (connect usb cable with computer)

Long press(3s)	turn on/off
Click on	Pause playback
Double click	Switch wireless mode
Turn to left	Volume down
Turn to right	Volume up (play "didi" at maximum volume)

6.Hint Tone

Hint Tone	Speaker
Dodoo~ (Rising tone)	Turn on
Dodoo~ (Falling tone)	Turn off
Didi~	Turn up the maximum volume
Dengdeng~	Low battery, please charge in time, otherwise it will automatically shut down

Troubleshooting

1.The power cannot be on.
Please confirm to turn the speaker on in the right way (press the switch for 3 seconds to turn on).

2.Shut down suddenly when using.
Low battery, please charge in time.

3.The red indicator light is off when connecting usb cable.
The battery is full and the product does not enter the charging state. The red indicator is off.

4.Double or three click is not workable
Please try again by pressing the button in quick succession.

5.Usb cable connected, but cannot enter to PC mode.
Please use the included 4-core usb cable, or make sure that you are not using an ordinary 2-core charging cable.

6.The battery cannot be fully charged after a long time
Please use 5V 1A adapter to charge.

Safety and notice

1.It is forbidden to charge the product with a power supply exceeding 5V.

2.Please keep the speaker carefully in case of rain. And don't put it next to the objects with high temperature or in the sun directly.

3.Non-professionals are forbidden to repair the duster or modify the circuit.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.