


55 mm

Mordern Monkey MINI RECHARGEABLE SPEAKER

PRODUCT MANUAL

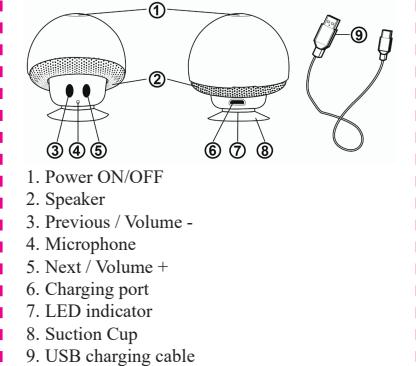

FEATURES

Maximum Output: 3W
S/N ratio: >65db
Frequency range: 100Hz-20 KHz
Battery voltage: 3.7V DC
Distortion THD: <1%
Nominal voltage: 3.7V DC
Battery: Built-in lithium battery, 3V DC/150mAh
Charge Voltage/Current: 5V +0.25V/1A
Working time: 2-3 hours (vary with volume)
Product size: 5.5*5.8 cm

BLUETOOTH PAIRING

1. Press Power button to turn ON the speaker until there is a voice notice and LED flashes blue. It is ready to pair.
2. Place the speaker and Bluetooth device (phone or music device) so that they are no further than 1 meter apart.
3. Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instruction manual to enable Bluetooth on your device.
4. Select the speaker "MMSMS" from the list of available Bluetooth devices.
5. If required, enter the password "0000".
6. Once paired successfully, you will hear the confirmation of indication tone.
7. If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
8. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range.
9. The speaker will attempt to automatically connect to the last device it was paired with when turned ON. If you want to pair it with a new device, please follow the steps outlined above.

MULTI FUNCTION BUTTONS

Power ON/OFF: Turn ON/OFF speaker.
In Bluetooth mode, press this button to : Play/Pause/Answer/End/Cancel Dial.
Previous / Volume -: Press this button to skip to the previous song. Hold this button down for longer to decrease the volume.
Next / Volume+: Press this button to skip to the next song. Hold this button down for longer to increase the volume.

CHARGING

The Speaker includes a built in rechargeable battery. It is recommended to charge the battery fully prior to first use.
Connect the USB cable to a computer or other USB charging port and the Mini USB plug into the charging port of the speaker.

IMPORTANT NOTES

- * This product is not a toys.
- * Do not drop or damage the speaker.
- * Do not use in humid or extreme temperatures.
- * Do not place the speaker near an open flame.
- * Do not block the sound of the speaker while it is in use.
- * Do not use the unit if it has been dropped or damaged in any way.
- * If damaged, do not attempt to repair or disassemble the speaker.

Made in China

55 mm

