



MusicMaster™

Bluetooth Music Face Pillow

User Manual



Built-in
white noise


Bluetooth
connection

AUX
connection


Rechargeable
and portable

Please read this manual before use

Product Structure

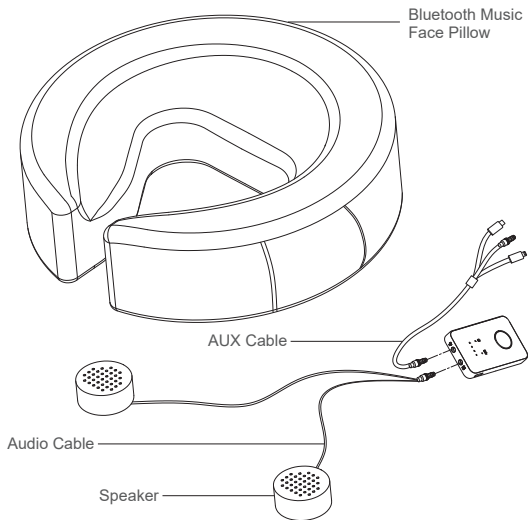

Product Structure

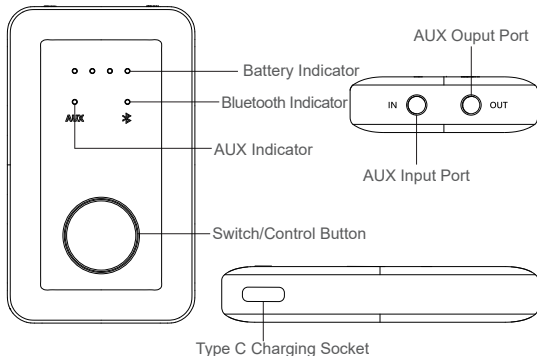

Product Parameters

Product Name: MusicMaster™ Face Pillow

Model: AMM-1

Rated Output Power: 1W

Rated Charging Voltage: 5V

Rated Charging Current: 1-2A

Battery Capacity: 1000mAh

Manufacturer: Shanghai Sintang Industrial Co.,Ltd

Instructions

Switch on/off:

1. When the MusicMaster™ Bluetooth Music Pillow is turned off, press and hold the Switch/Control button for 2 seconds to turn it on;
2. When the MusicMaster™ Bluetooth Music Pillow is turned on, press and hold the Switch/Control button for 2 seconds to turn it off.

iPod/MP3/Mobile Music Player:

1. Connect mobile phone, iPod or other MP3 players to MusicMaster™ Bluetooth Music Pillow through AUX cable;
2. Or, connect with the MusicMaster™ Bluetooth Music Pillow through the Bluetooth function of the mobile phone;
3. Play the audio files on the iPod, MP3 player, or mobile phone, and the MusicMaster™ speaker will start playing;
4. Switch tracks through iPod, MP3 player, or mobile phone music player software;
5. Adjust the volume from iPod, MP3 player, or mobile phone.

Built-in white noise music playback:

1. Disconnect AUX input, disconnect the Bluetooth connection between the MusicMaster™ Bluetooth Music Pillow and the mobile phone;
2. Short press the switch/control button to play or randomly switch the built-in white noise music;
3. **Note:** Volume adjustment is not supported when playing built-in white noise audio files.

Instructions

Mobile Bluetooth Connection:

1. Turn on the Bluetooth function in the "Settings" of the mobile phone;
2. Connect MusicMaster™ Bluetooth "MusicMaster";
3. When Bluetooth is connected, the Bluetooth Indicator is on;
4. When the AUX input terminal is plugged into the AUX terminal, the MusicMaster™ may not be able to connect with Bluetooth. It is recommended to disconnect the AUX connection and then reconnect the Bluetooth;

AUX Connection:

1. Connect the AUX Cable to the Output Port of the mobile phone, iPod or MP3 player, and connect the other end to the AUX Input port of the MusicMaster™ Bluetooth Music Pillow.
2. When AUX is connected, the AUX indicator is on;

Power Display During Use:

The Battery Indicator will indicate the current remaining power.

1. When the remaining power is less than 5%, the 1st light flashes;
2. When the remaining power is 6%-24%, the 1st light is on;
3. When the remaining power is 25%-49%, the 1st and 2nd lights are on;
4. When the remaining power is 50%-74%, the 1st, 2nd, and 3rd lights are on;
5. When the remaining power is 75%-100%, the 1st, 2nd, 3rd, and 4th lights are on;

Instructions

Power Display During Charging:

The Battery Indicator will indicate the current remaining power.

1. When the remaining power is 0%-24%, the 1st light flashes;
2. When the remaining power is 25%-49%, the first light is on, and the second light is flashing;
3. When the remaining power is 50%-74%, the 1st and 2nd lights are on, and the 3rd light is flashing;
4. When the remaining power is 75%-99%, the 1st, 2nd, and 3rd lights are on, and the 4th light bead is flashing;
5. When the remaining power is 100%, the 1st, 2nd, 3rd, and 4th lights are on;

Automatic Switch-off Function:

When the following situations occur, the MusicMaster™ Bluetooth Music Pillow will automatically switch off:

1. No audio signal input for 30 minutes with AUX input;
2. No audio signal input for 30 minutes with Bluetooth input;
3. The AUX is not connected, the built-in music is not playing, and the Bluetooth has been disconnected for more than 10 minutes;
4. Play built-in music for more than 2 hours;

Instructions

Charging Function:

1. Please use the Type C charging plug that comes with the device to connect to the Type C charging socket of the MusicMaster™ Bluetooth Music Pillow;
2. Please use the 5V1A or 5V2A charging head to connect the TYPE C charging cable.

Special Instructions on Charging:

1. Do not use a charger higher than 5V2A to charge the device, such as a 9V or 15V fast charging adopter;
2. The device has a protective shutdown, so the music play function is unavailable during charging. Sorry for any inconvenience.

Disclaimer

This product is not suitable for the following customers:

1. Patients with conductive deafness (patients with diseases in the outer ear and middle ear);
2. Patients with sudden and progressive hearing loss occurring within three months;
3. Patients with fluctuating hearing loss;

Disclaimer

4. Patients with unexplained unilateral or bilateral apparent asymmetric hearing loss;
5. Patients with earache, otorrhea, tinnitus, dizziness, or headache;
6. Patients with cerumen embolism in the external auditory canal, foreign body, or external ear deformity;
7. Patients who have undergone ear canal surgery within six months;
8. Patients who are undergoing treatment and feel physically abnormal;
9. Not suitable for persons who cannot take care of themselves, infants, or patients who are sensitive to sound.

Usage Notice

1. Please turn off the power of the product when not in use;
2. For your safety, please turn off the power of the product when not in use;
3. Do not place near fire sources, corrosive liquids, and various adverse environments;
4. Do not wash. If the product is stained with water, please wait until the product is completely dry before use;
5. Do not use the product while charging;
6. Do not disassemble, modify or throw it into a fire source to avoid danger;
7. Do not use this product continuously, as it may cause discomfort;
8. When the Bluetooth connection mode is on, the mobile phone should keep a straight-line distance within 15 meters from the product;

Disclaimer

9. The Bluetooth function will be affected by environmental factors (radio, walls, metal objects, and other obstacles);
10. During transportation, please handle with care to avoid any impact and collision;
11. Please keep the power plug dry to prevent leakage;
12. This product cannot replace a mobile phone and does not have a call function;
13. This device is not a toy. Please store and use this device in an area away from children or pets;
14. Do not use a power supply other than the rated voltage (see the bottom of the device for details) to avoid fire or product damage;
15. His product is not a dedicated music playback tool, and the volume range is limited;
16. Do not keep it on high volume;
17. Please return the device to the manufacturer for repair;

Usage Environment

1. Do not place the product in the bathroom or a humid place;
2. Do not place this device in water;
3. Do not use the device outdoors to avoid the device being wet by rain;
4. Do not use this device in an environment where the temperature exceeds 60°C or falls below -20°C;
5. Do not place the product near electric heaters and stoves to avoid damage to the equipment casing;
6. Do not use this device during lightning strikes.

Warranty

Within one year from the date of purchase, we provide free repair or replacement services for the device that is malfunctioning or unusable due to non-human factors.

This warranty excludes the following:

- a) Damage caused by accident, abuse, mishandling, or shipping;
- b) Unauthorized maintenance and repairs;
- c) Device failure caused by improper use
- d) Damage exceeding the product value;
- e) Damage caused by improper storage;
- f) Unable to provide proof of purchase date.

Warranty Card

Product Model

Customer Name

Serial Number

Customer Tel

Purchase Date

Customer Email

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

- 1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.




MusicMaster™蓝牙音乐面枕 使用说明书




内置白噪音 | 蓝牙连接 | AUX连接 | 充电便携

请在使用前阅读本说明书

产品构造

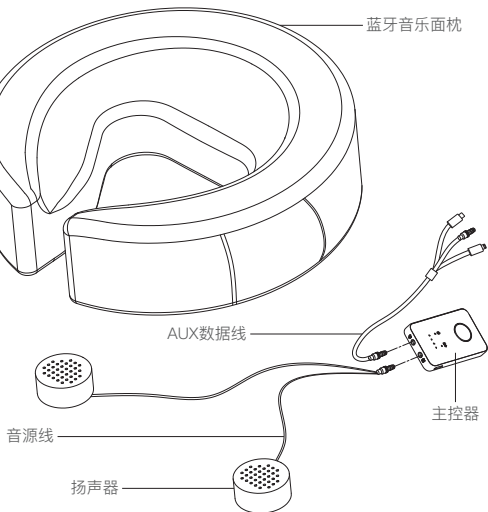

产品构造

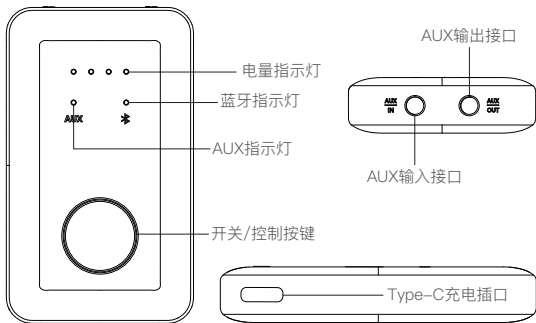

产品参数

产品名称: MusicMaster™蓝牙音乐面枕

型号: AMS-1

额定输出功率: 1W

额定充电电压: 5V

额定充电电流: 1-2A

电池容量: 1000毫安

生产厂商: 上海新帛实业有限公司

使用说明

开/关机：

1. MusicMaster™主控器处于关机状态时，长按主控器的开关/控制键2秒钟进行开机；
2. MusicMaster™主控器处于开机状态时，长按主控器的开关/控制键2秒钟进行关机。

Aux连接音乐播放：

1. 将手机、iPod、MP3播放器或手机与MusicMaster™主控器通过AUX数据线连接；
2. 播放iPod、MP3播放器或手机内的音频文件，MusicMaster™扬声器开始播放；
3. 通过手机、iPod、MP3播放器实现曲目的切换并手机调节音量大小。

手机蓝牙音乐播放：

1. 断开MusicMaster™主控器与AUX插头的连接；
2. 打开手机蓝牙功能，与MusicMaster™主控器进行蓝牙连接；
3. 播放手机音乐，并通过手机播放软件实现曲目的切换并调节音量大小。

内置白噪音音乐播放：

1. 断开MusicMaster™主控器与AUX插头的连接，断开MusicMaster™主控器与手机的蓝牙连接；
2. 短按开关/控制键播放内置音乐并随机切换内置白噪音音乐；
注意：播放内置白噪音音频文件时，不支持音量调节。

使用说明

手机蓝牙连接：

1. 通过手机的“设置”功能，打开手机的蓝牙功能；
2. 与MusicMaster™建立蓝牙连接，蓝牙名称为：MusicMaster™；
3. 蓝牙连接成功，主控器蓝牙指示灯亮起；
4. 当AUX输入端插有AUX端子时，MusicMaster™无法与手机蓝牙进行连接，断开AUX连接后可进行蓝牙连接；

AUX连接：

1. 使用AUX数据线，一端与iPod或MP3播放器的AUX输出端口连接，另一端与MusicMaster™主控器的AUX输入端口连接。
2. AUX连接成功，主控器AUX连接指示灯亮起；

使用时的电量显示：

MusicMaster™主控器在开机时，电量指示灯指示当前剩余电量，

1. 电量低于5%时，第1颗灯珠闪烁；
2. 电量6%–24%时，最后1个灯珠长亮；
3. 电量25%–49%时，第1、2颗灯珠同时长亮；
4. 电量50%–74%时，第1、2、3颗灯珠同时长亮；
5. 电量75%–100%时，第1、2、3、4颗灯珠同时长亮。

使用说明

充电时的电量显示：

MusicMaster™主控器在充电时，电量指示灯指示当前剩余电量，

1. 电量0%–24%时，最后1个灯珠闪烁；
2. 电量25%–49%时，第1灯珠长亮，第2颗灯珠闪烁；
3. 电量50%–74%时，第1、2灯珠长亮，第3颗灯珠闪烁；
4. 电量75%–99%时，第1、2、3灯珠长亮，第4颗灯珠闪烁；
5. 电量100%时，第1、2、3、4灯珠长亮。

自动关机功能：

当出现以下情形时，MusicMaster™主控器将自动关机：

1. 使用AUX输入，30分钟无音频信号输入；
2. 使用蓝牙输入，30分钟无音频信号输入；
3. AUX未接入，未播放内置音乐，且蓝牙断开连接超过10分钟；
4. 播放内置音乐超过2小时；
5. 电量耗尽。

充电功能：

1. 请使用设备自带的Type C充电插头与MusicMaster™主控器的Type C充电插口进行连接；
2. 请使用5V1A或5V2A充电头与TYPE C充电线连接，并对MusicMaster™主控器进行充电；

关于充电的特殊说明：

设备拒绝使用高于5V2A的充电器对设备进行充电，例如9V或15V的快充充电头；设备在进行充电时，设备将会保护性关机，无法在充电时播放音乐，敬请谅解。

免责声明

(一)禁用人群

1. 传导性耳聋患者（外耳、中耳有病症的患者）；
2. 3个月以内发生的突发性、进行性听力下降的患者；
3. 波动性听力下降的患者；
4. 不明原因的单侧或双侧明显不对称的听力损失的患者；
5. 伴有耳痛、耳漏、耳鸣、眩晕或头痛的患者；
6. 外耳道耵聍栓塞、异物或外耳畸形的患者；
7. 6个月内做过耳道手术的患者；
8. 正在接受治疗并感觉身体异常的患者；
9. 不能自理的人员、婴幼儿或对声音敏感的的患者禁用。

(二)使用须知

1. 不使用本产品时请关闭电源；
2. 为了您的安全，请在不使用时关闭产品电源；
3. 禁止靠近火源，腐蚀性液体及各种不利环境；
4. 不可洗涤，如果产品弄湿了，必须待产品彻底干透后才能开启使用；
5. 产品充电时不得使用；
6. 请勿自行拆卸、改装或投掷火种中，以免发生危险；
7. 请勿长时间连续使用本产品，否则可能引起相关部位不适；
8. 开启蓝牙连接模式时，手机与本产品的直线距离需保持在15米以内；
9. 蓝牙链接功能会受环境（无线电、墙体、金属体等障碍物）因素影响；
10. 运输时，请轻拿轻放，严禁对本设备冲击和碰撞；
11. 请保持电源插头的干燥，以防造成漏电；

免责声明

12. 本产品不能代替手机，不具有通话功能；
13. 本产品不是玩具，请放置于儿童和宠物难接触到的区域；
14. 请勿使用额定电压(详见设备底部)以外的电源，以免造成火灾或损坏产品；
15. 本产品不是专门音乐播放工具，音量范围有限；
16. 请勿长时间置于高音量状态下；
17. 如产品出现故障，请将设备经由销售商退还给生产厂家进行维修。

(三)使用环境

1. 请勿将产品放置在浴室或在空气潮湿的地方使用；
2. 禁止将本设备置于水中；
3. 禁止在室外使用本设备，以免设备被雨水淋湿；
4. 禁止在温度超过60°C或低于-20°C的环境中使用的设备；
5. 请勿将产品放置于电热器、火炉附近，以免设备外壳损坏；
6. 请勿在雷击时使用。

保修说明

如果自购买之日起一年内，非人为因素的产品故障而无法使用，我们提供免费维修或更换服务。本保修不包括：

- | | |
|-------------------------|-------------------|
| a) 因意外、滥用、处理不当或运输造成的损坏； | d) 超出产品金额的损坏； |
| b) 未经授权的维修； | e) 因存储条件不恰当造成的损坏； |
| c) 不当使用产生的故障； | f) 未提供购买日期凭证。 |

产品合格证

合格证

Certificate of Quality

本产品经严格测试合格准予出厂

After strict testing, this product is qualified
and allowed to leave the factory.

产品名称: _____
Product Name

产品型号: _____
Product Model

出厂日期: _____
Manufacture Date

品质章: _____
Qualified Stamp



上海新裕实业有限公司

Shanghai Sintang Industrial Co.,Ltd.

保修卡

Product Model
产品型号

Serial Number
序列号

Purchase Date
购买日期

Customer Name
客户姓名

Customer Tel
客户电话

Customer Email
客户邮箱

