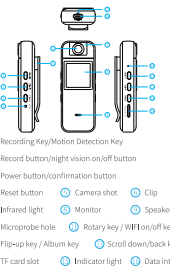
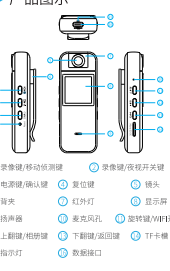


INSTRUCTION MANUAL  Please read the user manual carefully before using the product and keep it properly.	Product Illustration  ① Recording Key/Motion Detection Key ② Record button/night vision on/off button ③ Power button/confirmation button ④ Reset button ⑤ Infrared light ⑥ Microprobe hole ⑦ Flip-up key / Album key ⑧ TF card slot ⑨ Camera shot ⑩ Monitor ⑪ Rotary key / WiFi on/off key ⑫ Scroll down/back key ⑬ Indicator light ⑭ Data interface ⑮ Clip ⑯ Speakers	Introduction to Interface Icons  ① Video mode ② Time/date ③ Already have TF card ④ Video resolution ⑤ Loop video segment time ⑥ Battery level indication ⑦ Camera mode ⑧ No TF card installed ⑨ Number of photo presets ⑩ Photo resolution Usage  The lens of this product can be rotated 180°, and the angle can be adjusted according to the demand during the use as shown in the picture.	Installation of TF card  ① Insert the TF card as shown ② Please use genuine TF card ③ Support 64GB, U3 high-speed card Basic operating instructions (1) Boot: ① Long press the "OK" key to turn on the power in the off state, the display lights up and you hear a beep. (2) Turn off: ① Press and hold the "OK" key in any mode of power on to turn off the power and the display goes off. (3) Videotape: ① Short press the "OK" button to start recording in the recording mode, and short press the "OK" button to stop recording in the recording state. (4) Motion detection: ① In the video mode, long press the "OK" key to enter the motion detection mode, there is a detected object movement to start recording, no object movement will automatically stop recording, short press the "OK" key to exit the motion (5) Take a picture: ① Short press the "OK" button in photo mode to take a picture. (6) Image Flip: ① The machine appears to be dead, the key is invalid, can not be used normally, press the "Reset" key to make the machine for reset, after reset can be used normally. (7) Infrared light switch: ① Power on any mode, long press the "OK" key to turn on the infrared light, long press the "OK" key again to turn off the infrared light. (8) Photo album: ① Long press "OK" to enter the album, in the album short press "OK" key up and down to browse pictures as well as select files, short press "OK" to play the video. In the photo album long press "OK" key to enter delete (delete current in delete all). Long press "OK" key to return to the previous step or exit. (9) Set up: ① In standby mode short press "OK" key to enter the setting, in the setting menu can be selected by short press "OK" key up and down, short press "OK" can be modified for each parameter setting. Long press "OK" key to return to the previous step or exit.	detection video. (Detecting an object moving a video 1 minute, there is a continuous object moving video 3 minutes a segment to save) (10) Time setting: ① In standby mode, short press the "OK" key to enter the settings, in the settings menu, select "date and time settings" to enter the time settings. (11) Reset : ① The machine appears to be dead, the key is invalid, can not be used normally, press the "Reset" key to make the machine for reset, after reset can be used normally. APP Download Scan the QR code below to download and install Sports Camos, or search for Sports Camos on Google play or App store to download and install.  Hotspot WiFi WiFi switch: Long press "OK" key to turn on WiFi in power-on standby mode, long press again to turn "OK" key WiFi off.	WiFi Connection: The WiFi setting of your phone or tablet PC will search for a connection with the name of the network starting with "CS (e.g. CS1_2388)", after successful connection, open the Sports Camos App and enter the main interface and tap "OK" to enter the real-time preview interface, and select video lens in the preview interface. If you encounter any other problems during operation, please click help in the main interface. Connect a computer ① In any mode, it can be directly connected to the computer, and when connected to the computer it can be used as a USB flash drive, and you can freely copy, cut and paste, delete and format files. Charging instructions For battery level indication, please refer to the illustration.  Charging, this machine is built-in rechargeable lithium battery, the first time you use this machine, please charge, charging indicator light is always on full, off you can charge by the following ways: ① Connect to computer for charging, use USB to connect to computer. ② Use the power adapter or mobile power to charge.	Charge the battery after each use, about 3 hours to fill up (charging time depends on the adapter), and after filling up, charge it for another 20 minutes as much as possible to ensure that the battery is full to use. Note: Usage scene: Please strictly abide by relevant laws of the country where the product is used, and do not use this product for any illegal purposes, otherwise, you should bear the consequences. Operating temperature: Please use the product at the natural temperature and do not use it in temperature where human body can not adapt to. Working humidity: Please use it in the suitable humidity of human environment and do not put the product in a humid working environment. This product does not have waterproof function, so please avoid water or exposure to rain. Shooting requirements: Please use the product in an environment with sufficient light sources and do not direct the camera at the sun and other strong light sources so as to avoid damage to optical devices. Cleaning requirements: Do not use the product in an environment with too large dust density so as to avoid the lens and other components contaminated with dust, which will affect the camera effect. If the lens has fingerprints or dust, please use clean soft material (such as tissue) to wipe it.	FCC WARNING This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: → Reorient or relocate the receiving antenna. → Increase the separation between the equipment and receiver. → Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. → Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.
--	--	--	---	---	--	--	---

使用说明书 INSTRUCTION MANUAL  使用前请仔细阅读用户手册，并妥善保管 Please read the user manual carefully before using the product and keep it properly.	产品图示  ① 录像键/移动侦测键 ② 电源键/确认键 ③ 复位键 ④ 镜头 ⑤ 麦克风 ⑥ 红外灯 ⑦ 显示屏 ⑧ 扬声器 ⑨ 麦克风孔 ⑩ 旋转键/方向键 ⑪ 上翻键/相册键 ⑫ 下翻键/返回键 ⑬ TF卡槽 ⑭ 指示灯 ⑮ 数据接口 ⑯ 摄像头/夜视开关 ⑰ 摄像头 ⑱ 摄像头 ⑲ 摄像头 ⑳ 摄像头 ㉑ 摄像头 ㉒ 摄像头 ㉓ 摄像头 ㉔ 摄像头 ㉕ 摄像头 ㉖ 摄像头 ㉗ 摄像头 ㉘ 摄像头 ㉙ 摄像头 ㉚ 摄像头 ㉛ 摄像头 ㉜ 摄像头 ㉝ 摄像头 ㉞ 摄像头 ㉟ 摄像头 ㊱ 摄像头 ㊲ 摄像头 ㊳ 摄像头 ㊴ 摄像头 ㊵ 摄像头 ㊶ 摄像头 ㊷ 摄像头 ㊸ 摄像头 ㊹ 摄像头 ㊺ 摄像头 ㊻ 摄像头 ㊼ 摄像头 ㊽ 摄像头 ㊾ 摄像头 ㊿ 摄像头	界面图标介绍  ① 录制模式 ② 时间/日期 ③ 已装TF卡 ④ 循环录像分段时间 ⑤ 电池电量指示 ⑥ 录制模式 ⑦ 未安装TF卡 ⑧ 图片分辨率 ⑨ 运动检测 ⑩ 运动检测 ⑪ 运动检测 ⑫ 运动检测 ⑬ 运动检测 ⑭ 运动检测 ⑮ 运动检测 ⑯ 运动检测 ⑰ 运动检测 ⑱ 运动检测 ⑲ 运动检测 ⑳ 运动检测 ㉑ 运动检测 ㉒ 运动检测 ㉓ 运动检测 ㉔ 运动检测 ㉕ 运动检测 ㉖ 运动检测 ㉗ 运动检测 ㉘ 运动检测 ㉙ 运动检测 ㉚ 运动检测 ㉛ 运动检测 ㉜ 运动检测 ㉝ 运动检测 ㉞ 运动检测 ㉟ 运动检测 ㊱ 运动检测 ㊲ 运动检测 ㊳ 运动检测 ㊴ 运动检测 ㊵ 运动检测 ㊶ 运动检测 ㊷ 运动检测 ㊸ 运动检测 ㊹ 运动检测 ㊺ 运动检测 ㊻ 运动检测 ㊼ 运动检测 ㊽ 运动检测 ㊾ 运动检测 ㊿ 运动检测 使用方式  本产品镜头可旋转180°,使用过程中可根据需求调整高度范围:	安装TF卡  ① 插入方式见TF卡 ② 请使用正规TF卡 ③ 支持64GB-256GB, U3高速卡 基本操作说明 (1) 开机: ① 在关机状态下长按"OK"键开机,显示屏将显示开机画面。 (2) 关机: ① 在开机任何模式下长按"OK"键关机,显示屏熄灭。 (3) 录像: ① 在录像模式下短按"OK"键开始录像,录像状态下短按"OK"键停止录像。 (4) 移动侦测: ① 在录像模式下长按"OK"键进入移动侦测设置,在设置菜单中按方向键上下选择,按"OK"键确认,按"OK"键返回上一级菜单。 (5) 拍照: ① 在待机模式下短按"OK"键拍照。 (6) 图像旋转: ① 图像默认垂直方向,需要旋转镜头拍摄时短按"OK"键消除图像,需要升起后长按"OK"键。 (7) 红外灯开关: ① 开机后长按"OK"键,红外灯打开,再次长按"OK"键关闭红外灯。 (8) 相册: ① 长按"OK"键进入相册,在相册短按"OK"键上下浏览,长按"OK"键上下选择,短按"OK"键返回上一级菜单。 (9) 设置: ① 在待机模式下长按"OK"键进入设置,在设置菜单中按方向键上下选择,按"OK"键确认,按"OK"键返回上一级菜单。 (10) 时间设置: ① 在待机模式下长按"OK"键进入时间设置,在设置菜单中按方向键上下选择,按"OK"键确认,按"OK"键返回上一级菜单。 (11) 重置: ① 在待机模式下长按"OK"键进入重置,在设置菜单中按方向键上下选择,按"OK"键确认,按"OK"键返回上一级菜单。	APP下载 扫描下方二维码或下载"Sports Camos",或在 Google play、App Store 搜索"Sports Camos"下载。  热点WiFi WiFi开关: 长按"OK"键打开WiFi,长按"OK"键关闭WiFi,长按"OK"键打开WiFi,长按"OK"键关闭WiFi。 连接电脑 ① 在任何模式下,均可直接连接电脑,连接电脑后应作为U盘使用,可直接进行文件的复制、删除、删除、删除。	充电说明 电量提醒: 请参考图标:  在电源开关置可充电电池,首次使用本机时,请先进行充电,充电时指示灯常亮,充满电,可以有以下方式充电: ① 连接电脑充电,使用USB与电脑连接。 ② 使用电源适配器或移动电源充电。 ③ 每次使用完电池后再次充电,大约需3小时左右充满(充电时间根据电池容量而定),充满后应再充电20分钟,防止电池充满。 注意事项 使用场合: 本产品只能在室内使用,不得用于任何非法用途,否则后果自负。 工作温度: 请在环境温度下使用,请勿在人体不能适应的环境下使用。 工作湿度: 请在相对湿度下使用,请勿在湿度过高或过低的环境下使用,本产品不同湿度下使用,请勿在湿度过高或过低的环境下使用。 拍摄要求: 请在充足光线的条件下使用,请勿在光线不足或强光下使用,以免产生眩光。 保养要求: 请勿在强光下使用,请勿在强光下使用,以免产生眩光。	APP下载 扫描下方二维码或下载"Sports Camos",或在 Google play、App Store 搜索"Sports Camos"下载。  热点WiFi WiFi开关: 长按"OK"键打开WiFi,长按"OK"键关闭WiFi,长按"OK"键打开WiFi,长按"OK"键关闭WiFi。 连接电脑 ① 在任何模式下,均可直接连接电脑,连接电脑后应作为U盘使用,可直接进行文件的复制、删除、删除、删除。	充电说明 电量提醒: 请参考图标:  在电源开关置可充电电池,首次使用本机时,请先进行充电,充电时指示灯常亮,充满电,可以有以下方式充电: ① 连接电脑充电,使用USB与电脑连接。 ② 使用电源适配器或移动电源充电。 ③ 每次使用完电池后再次充电,大约需3小时左右充满(充电时间根据电池容量而定),充满后应再充电20分钟,防止电池充满。 注意事项 使用场合: 本产品只能在室内使用,不得用于任何非法用途,否则后果自负。 工作温度: 请在环境温度下使用,请勿在人体不能适应的环境下使用。 工作湿度: 请在相对湿度下使用,请勿在湿度过高或过低的环境下使用,本产品不同湿度下使用,请勿在湿度过高或过低的环境下使用。 拍摄要求: 请在充足光线的条件下使用,请勿在光线不足或强光下使用,以免产生眩光。 保养要求: 请勿在强光下使用,请勿在强光下使用,以免产生眩光。
--	---	---	--	---	---	---	---