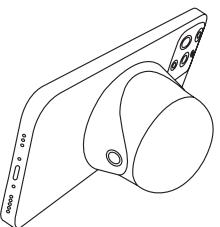
 
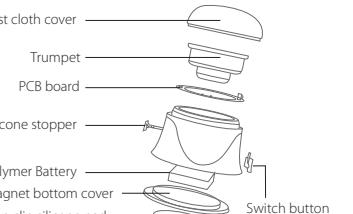
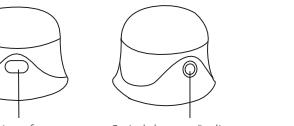
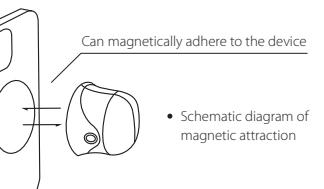
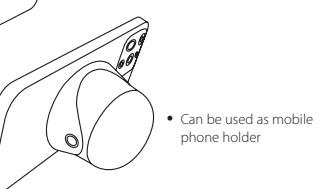
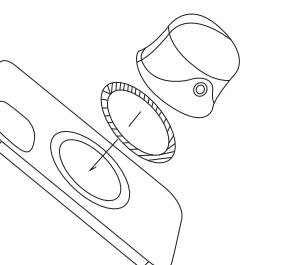


<h2>Magnetic Speaker</h2>  <p>25611</p> <p>Instruction Manual</p>	<p>Important safety information</p> <ul style="list-style-type: none"> Please observe the following basic safety instructions to ensure the safe and reliable use of the product. Observe all warnings and instructions marked on the product. Please use a charging cable with an output voltage of 5V to avoid damage to the product. <p>The product uses a built-in polymer battery, please turn it off when not in use.</p> <p>⚠ Warning Removing the built-in battery will invalidate the warranty and destroy the product.</p> <p>⚠ Notice Rechargeable batteries have a limited number of recharges, and battery life and recharge times depend on usage conditions and settings.</p> <p>-01-</p>	<p>WARNINGS</p> <ul style="list-style-type: none"> Do not operate the product when it is dipped in water or splashed with liquid. Do not place the product near a high-temperature heat source or place the product in a high-temperature place to dry or blow dry. Do not put too much pressure on the product. <p>Product parameter</p> <ul style="list-style-type: none"> Input: 5V ≈ 1A Speaker power: 5W Product model: 25611 Bluetooth version: 5.0+EDR Wireless Bluetooth range: 10m Playing time: Switch button/indicator Charging time: 1.5 hours Shape material: ABS+PC Battery capacity: 600mAh Weight: 87 grams <p>-02-</p>	<p>Packing List</p>  <p>Product Structure Name</p>  <p>-03-</p>	<p>How to use this product to charge the built-in battery</p> <p>The speaker is powered by a built-in rechargeable battery. Note: Fully charge the built-in battery before use.</p>  <p>-04-</p>	<p>TWS mode: Pairing multiple devices.</p> <p>While connected to one magnetic speaker, you can connect to a second magnetic speaker. Power on the second speaker until the indicator light starts flashing blue, indicating that it is also in connecting mode.</p> <p>Double-click the power buttons on either speaker. After a moment, you should hear a voice prompt saying "connected" to indicate that the two speakers have been paired in TWS mode.</p> <p>Note: If two speakers are turned on and enter TWS mode, only one speaker needs to be connected to the Bluetooth paired phone. If you make a mistake, please turn off the speaker and re-enter the TWS mode operation.</p> <p>Note: The mobile phone will display the power of the speaker after the Bluetooth connection is successful. When the power of the speaker is less than 10%, the indicator light status is blue fast flashing. The voice playback prompt changes the speaker to automatically shut down when the battery is exhausted.</p> <p>-05-</p>
<p>Use Bluetooth Device You can use speakers to listen to the audio of the player.</p> <p>Notice:</p> <ul style="list-style-type: none"> The working range between this product and the Bluetooth device is approximately 10 meters. The working range will be reduced if there is any obstacle between this product and the Bluetooth device. Keep away from other electronic devices that may cause interference. <p>Disconnect from the device</p> <ul style="list-style-type: none"> Turn off the Bluetooth connection with this speaker on your device. The speaker beeps once, and Bluetooth exits after disconnecting the link. The speaker will automatically shut down if no devices are connected within 5 minutes. <p>-06-</p>	<p>Note: Before connecting another Bluetooth device, disconnect the current device first</p> <p>Reconnect device</p> <ul style="list-style-type: none"> For devices that have been paired and auto-reconnected with Bluetooth, the product will automatically reconnect to the device after detecting the device. For devices that have been paired with Bluetooth but do not support automatic reconnection, please manually reconnect with this product. <p>Notice The speaker will automatically shut down in the power-on state if the Bluetooth is not connected or disconnected for more than 5 minutes.</p> <p>-07-</p>	<p>Common troubleshooting methods</p> <p>No electricity:</p> <ul style="list-style-type: none"> Charge the speaker <p>No sound:</p> <ul style="list-style-type: none"> Adjust the volume of the connected device. Make sure your Bluetooth device is within the effective working range. <p>The speaker does not respond:</p> <ul style="list-style-type: none"> Restart the speaker <p>Bluetooth device troubleshooting:</p> <ul style="list-style-type: none"> Poor audio quality: Move the device closer to the product or remove any obstructions. No connection: Ensure speaker is not connected to another device. Disconnect from the other device and try again. <p>-08-</p>	 <p>Can magnetically adhere to the device</p> <p>• Schematic diagram of magnetic attraction</p>  <p>• Can be used as mobile phone holder</p> <p>-09-</p>	<p>Notice The non-magnetic mobile phone or non-metallic object can be attached to the package with a steel ring to achieve the magnetic function.</p>  <p>-10-</p>	<p>FCC Statement This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.</p> <p>The distance between user and products should be no less than 20cm.</p>