

## Waterproof Speaker Instruction Manual


### READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THIS MANUAL

#### In the Box

- 25170 Waterproof Speaker (x1)
- Carabiner (x1)
- Power Cable (x1)
- User Manual (x1)

#### Safety Precautions

- This product is NOT a toy, keep away from children and pets.
- Only use the speaker according to the instructions in this manual.
- Never use the speaker for anything other than its intended purpose.
- ONLY use the supplied power cable.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the speaker should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose speaker or power cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.

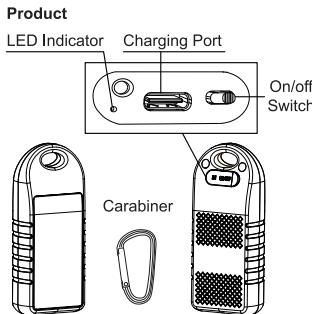

- Do not submerge in water. Do not use in a location where the speaker or power cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if speaker or power cable is damaged. If speaker or power cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Low battery may cause dysfunction.
- Do not over charge battery.
- This speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this speaker.

#### Instructions

Be sure to fully charge the speaker before using for the first time.

#### Charging the Speaker

- Lift the protective rubber seal of the charging port, and plug the small connector of the included charging cable into the Type-C charging port on the speaker.
- Plug the large connector into an USB power source, such as the USB port on a computer or into a compatible 5V USB adapter (not included) and plug into a wall socket.
- The LED indicator on the back will glow **RED** when charging and turn off when fully charged. Make sure the protective rubber seal is completely sealed when charging is complete.

#### Pair & Connect with a New Device

- Turn On/Off Switch to ON position to turn speaker ON. LED indicator will flash **BLUE** indicating that it's in pairing mode.
- Open the Bluetooth menu on your smartphone and search for new devices.
- When you see "25170" listed, tap it to connect. LED indicator will stop flashing when paired successfully.
- Previously connected speaker will connect automatically after they are powered on.

#### Using the Speaker in Wet Conditions

The speaker has an Ingress Protection rating of **IPX4**. This means it is protected against water splashes from all directions. It is **NOT protected** from submersion in water, such as flooding.

Always make sure that the protective rubber seal is completely covering the charging port before using the speaker in wet conditions. **Never charge the speaker in wet conditions.**

#### FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Tech Specifications

Speaker Output	3W
Frequency Response	150Hz~18KHz
S/N Ratio	>80dB
Connection Range	33 feet
Continuous Play Time	Up to 2 hours (max volume)
Battery Capacity	400mAh
Charging Time	1.5 hours (from 0-100%)
Waterproof Grade	IPX4

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

270x105mm