

# 70mmX90mm

### JM16 带屏智能耳机



#### 产品参数

产品名称	JM16
蓝牙版本	5.4
传输距离	≥10M
喇叭直径	Φ13mm
充电口	Type-C
灵敏度	117.7dB±3dB
充电盒电池	3.7V 500mAh
耳机电池	3.7V 35mAh
充电时间 (充电盒)	1.5-2H
充电时间 (耳机)	1H
播放时间 (耳机)	6H
待机时间 (耳机)	30H (无连接)


#### 包装清单

无线耳机	*2
便携仓	*1
说明书	*1
充电线	*1

#### 使用说明书

请提前阅读使用说明书，方便后续使用

### 产品介绍

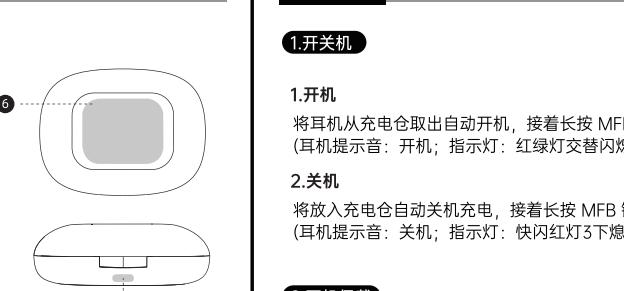


### 基础操作

#### 1. 开关机

1.开机 将耳机从充电仓取出自动开机，接着长按MFB键3S (耳机提示音:开机;指示灯:红绿灯交替闪烁)

2.关机 将放入充电仓自动关机充电，接着长按MFB键5S。 (耳机提示音:关机;指示灯:快闪红灯3下熄灯)

#### 2. 耳机佩戴

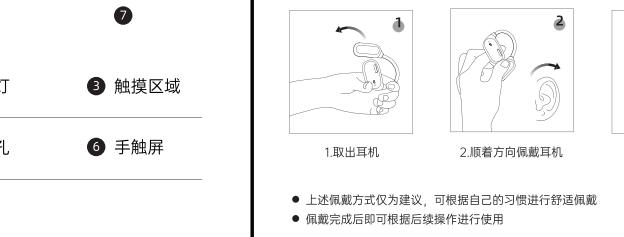

① 透气孔 ② 指示灯 ③ 触摸区域  
④ 充电接触口 ⑤ 透音孔 ⑥ 手触屏  
⑦ Type-C充电口

● 上述佩戴方式仅为建议，可根据自己的习惯进行舒适佩戴  
● 佩戴完成后即可根据后续操作进行使用

### 3. 蓝牙配对



① 打开耳机机仓，取出里面的耳机  
② 在耳机开机状态下  
③ 打开手机蓝牙，搜索设备名称：JM16  
④ 点击蓝牙名称，当显示已连接时即连接成功

### 3. 模式选择



### 3. 屏幕说明

切換功能界面 左右滑动即可切換界面

电话模式 拒接来电:长按2s 来电:单击接听，再单击挂断

关机界面 选择√关机，选择x退出

重启界面 选择√，屏幕会重新启动

语音助手 点击即可呼唤语音助手

亮度调节 通过点击+/-，可调节屏幕亮度

音乐模式 左耳双触:播放上一曲 右耳双触:播放下一曲 单触:播放/暂停

对耳模式 若手机无法识别耳机，请确认蓝牙耳机是否处于“已配对”状态，若长时间未进行配对连接，蓝牙耳机对耳功能将自动关闭。请重新开启蓝牙耳机至“已配对”状态后，再进行操作。

其他界面示例 提供了3种选择，分别是默认万花筒，齿轮，电影/音乐/游戏

对耳模式 左耳三触:音量降低 右耳三触:音量增加

出厂设置 清除以往的缓存数据

音效选择 提供3种选择方式，电影/音乐/游戏

低电提醒 当电池电量低于1/2时，电量提示音:30S不一长一短，电量低于3.1V时关机

菜单风格 提供3种选择，分别是默认万花筒，齿轮，电影/音乐/游戏

语言设置 上下滑动选择合适的语言 点击即可完成切换

均衡器 提供7种风格选择

定位功能 提供4种灯效，分别是白、红、黄、绿

手电筒 提供4种灯效，分别是白、红、黄、绿

拍照 当耳机连接手机时，通过点击控制拍照

### 注意事项

#### 提示

- 使用产品前请仔细阅读使用说明书并妥善保管。
- 首次使用，请将产品充满电。
- 如遇产品长时（超过1个月）不用，请对充电仓进行充电。
- 未按说明操作、使用、保管，导致产品故障损坏。
- 擅自拆出产品和拆卸。
- 意外摔落或人为导致产品损坏，如摔入水、油、玻璃、硬物、氧化物等。
- 因不可抗拒，如：震、火、水、雷、撞击等导致的故障和损坏。

#### 警告

- 请勿以任何方式拆卸或维修耳机，否则可能会导致永久性损坏。
- 请将设备置于温度过低或过高（0℃以下或45℃以上）的环境中。
- 请勿靠近儿童或宠物的嘴部，使用设备时请指示灯常亮。
- 请勿在雷雨天气使用设备，雷雨天气设备不正常工作。
- 请勿触碰电池的金属部分。
- 请勿用油或其他液体接触耳机，通过擦拭保持耳机干燥。
- 请勿将设备浸入水。

#### 保说明

尊敬的客户，您好！  
承蒙杰士公司厚爱，为您提供优质的售后服务，您在购买产品后，仔细阅读说明书及以下内容：（下列情况不属保修范围，本公司不提供售后服务）  
1. 未按说明操作、使用、保管，导致产品故障损坏。  
2. 擅自拆出产品和拆卸。  
3. 意外摔落或人为导致产品损坏，如摔入水、油、玻璃、硬物、氧化物等。  
4. 因雷雨天气使用设备，雷雨天气设备不正常工作。  
5. 因不可抗拒，如：震、火、水、雷、撞击等导致的故障和损坏。

### JM16 Smart Headphones with Screen



#### Product Parameter

Product Name	JM16
Bluetooth Version	5.4
Transmission Distance	≥10M
Speaker Diameter	Φ13mm
Charging Port	Type-C
Sensitivity	117.7dB±3dB
Charging Case Battery	5.7V 500mAh
Headphone Battery	3.7V 35mAh
Charge Time (Charging Case)	1.5-2H
Charge Time (Headphones)	1H
Playback time (headphones)	6H
Standby time (headphones)	30H (No connection)


#### 包装清单

Wireless Headphones	*2
Carrying Case	*1
Instruction manual	*1
Charging Cable	*1

#### operating instructions

Please read the instruction manual in advance to facilitate subsequent use

### Products

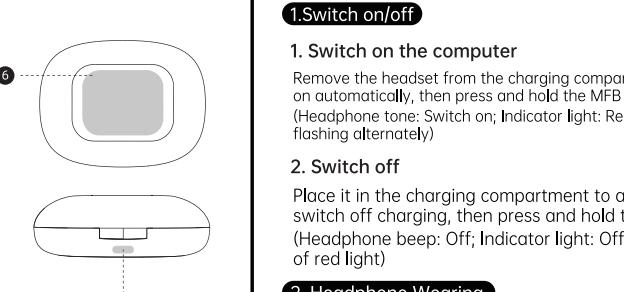


### Basic Operation

#### 1. Switch on/off

1. Switch on the computer  
Remove the headset from the charging compartment and turn it on automatically, then press and hold the MFB key for 3S. (Headphone tone: Switch on; Indicator light: Red and green light flashing alternately)

2. Switch off  
Place it in the charging compartment to automatically switch off charging, then press and hold the MFB key for 5S. (Headphone beep: Off; Indicator light: Off with 3 flashes of red light)


#### 2. Headphone Wearing

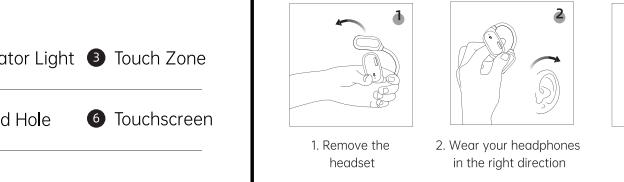

① Airflow Orifice ② Indicator Light ③ Touch Zone  
④ Charging Contacts ⑤ Sound Hole ⑥ Touchscreen  
⑦ Type-charging Port


● The above wearing styles are only recommendations and can be worn comfortably according to your own habits.  
● Once worn, it can be used in accordance with subsequent operations

### 2. Bluetooth Pairing

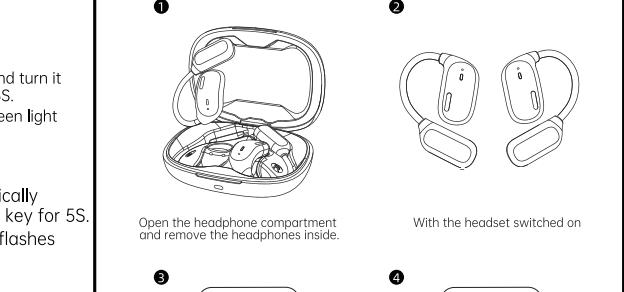

① 打开耳机机仓，取出里面的耳机  
② 与耳机连接时  
③ 打开手机蓝牙，搜索设备名称：JM16  
④ 点击蓝牙名称，当显示已连接时即连接成功

### 3. Mode Selection

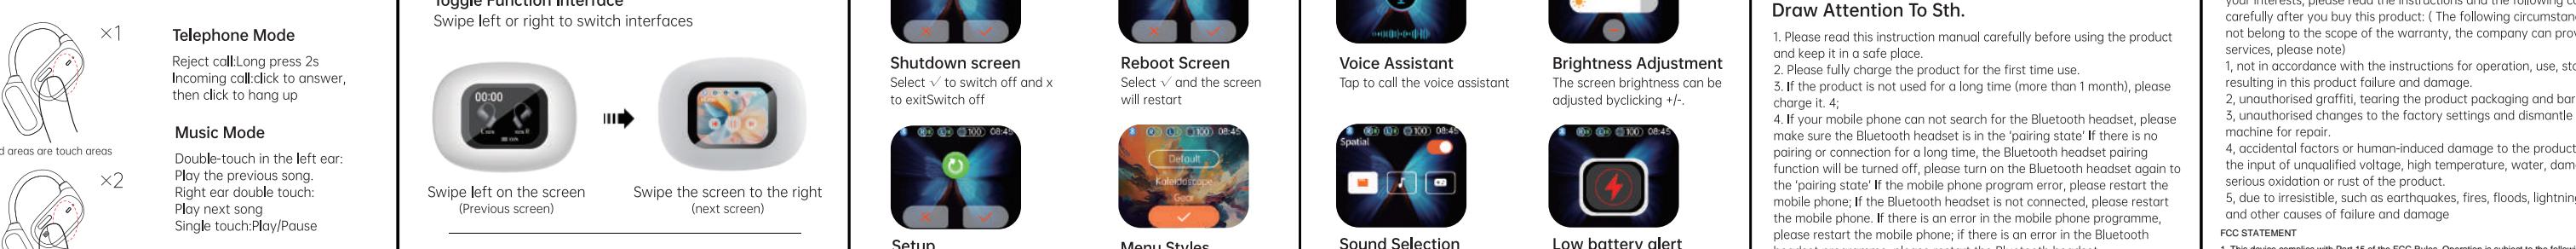

### 3. Screen Descriptions

Toggle Function Interface Swipe left or right to switch interfaces

Telephone Mode Reject call Long press 2s Incoming call: click to answer, then click to hang up

Shutdown screen Select √ to shutdown and the screen will restart

Reboot screen Select √ and the screen will restart

Voice Assistant Tap to call the voice assistant

Brightness Adjustment The screen brightness be adjusted by clicking +/ -

Music Mode Double-touch in the left ear: Play the previous song. Right ear double touch: Play next song. Single touch: Play/Pause

Other Interface Schemes Clearing previous cached data

Sound Selection Offers 3 ways to choose, film /Music/Games

Low battery alert When the battery level is low, the low battery warning will appear, and the power will be lower than 1/2.

Menu Styles 3 options are provided, default, kaleidoscope, gears

Music Interface Click on the icon to play/pause

Language Settings Swipe up and down to select the appropriate language

Equalizer Click to search for headset location

Positioning Function Click to search for headset location

Electric Hand Torch Provides 4 light effects, which are white, Red, Yellow and Green

Take a Picture When the headset is connected to the mobile phone, you can control your mobile phone to take photos remotely by tapping the screen

### Caution

#### Draw Attention to This

1. Please read this instruction manual carefully before using the product and keep it in a safe place.

2. Please fully charge the product for the first use.

3. If the product is not used for a long time (more than 1 month), please charge it.

4. If your mobile phone can not search for the Bluetooth headset, please make sure the Bluetooth headset is in the pairing state. If there is no pairing connection, turn the Bluetooth pairing function will be turned off, please turn on the Bluetooth headset again in the 'pairing state'. If the mobile phone is not connected, please restart the mobile phone. If the Bluetooth headset is not connected, please restart the mobile phone. There is an error in the mobile phone program, please restart the mobile phone; there is an error in the Bluetooth headset program, please restart the Bluetooth headset.

#### Warnings

- Do not damage or modify the headset for years, as this may result in fire, explosion of electronic components or even complete damage to the product.
- Do not expose the device to temperatures that are too low or too high (below 0°C or above 45°C).
- Avoid using the headphones in the presence of children or pets.
- Do not use the device in thunderstorms, which may cause the device to operate poorly and increase the risk of electric shock.
- Do not wipe the product with oil or other volatile liquids.
- Do not use the device with liquid.

#### Warranty Description

Dear customer, hello!

I am grateful for your purchase of our products, in order to ensure your interests, please read the instructions and the following content carefully before you buy our products: (the following content does not belong to the scope of the warranty, the company can provide no service, no compensation)

1. In accordance with the instructions for operation, use, storage, repair, if the product is not used for a long time (more than 1 month), please charge it.

2. Unauthorized graffiti, tearing the product, opening the box, unauthorized changes to the factory settings and dismantling the machine for repair.

3. Accidental liquid damage to the product, resulting in damage due to high voltage, high temperature, water damage, serious oxidation or rust of the product.

4. Due to irresistible factors such as lightning strikes, fires, floods, high temperatures and other causes of failure and damage.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.