

65mmX85mm

**JM21**  **使用说明书** 请提前阅读使用说明书，方便后续使用	**产品参数**				-----------	---------------		产品名称	JM21		蓝牙版本	5.4		传输距离	≥ 10M		喇叭直径	Φ10mm		充电口	Type-C		灵敏度	112.1dB±1.5dB		充电盒电池	3.7V 320mAh		耳机电池	3.7V 30mAh		充电时间(充电盒)	1.5-2H		充电时间(耳机)	1H		播放时间(耳机)	5H		待机时间(耳机)	30H (无连接)	**包装清单**				-----------	----		真无线蓝牙耳机	*2		耳机充电仓	*1		Type-c充电线	*1		说明书	*1		**操作说明**  **1. 基础说明**   - 1. 耳帽 - 2. 触摸按钮 - 3. 充电接触口 - 4. 触摸屏 - 5. 开机键 - 6. Type-c口   **2. 模式选择**  **电话模式** 拒接来电:长按左耳/右耳2s 来电:单击接听,再单击挂断  **对耳模式** 左耳三触:音量降低 右耳三触:音量增加	**音乐模式** 左耳双触:播放上一曲 右耳双触:播放下一曲 单触:播放/暂停  **ANC开关切换**:长按左耳触控键2s松开切换开/关; 通透模式。  **3. 屏幕说明**  **对耳模式** 开机:长按3S 关机:长按5S 唤醒SIRI:长按右耳2s  **切换功能界面** 左右滑动即可切换界面 向左划:上一个界面 向右划:下一个界面  **音乐界面** 点击图标即可播放/暂停 上下滑动选择合适的语言 点击即可完成切换  **语言设置** 上下滑动选择合适的语言 点击即可完成切换	**对耳模式** 开机:长按3S 关机:长按5S 唤醒SIRI:长按右耳2s  **关机界面** 选择√/关机,选择X退出 关机  **出厂设置** 通过按“开始”按钮,恢复出厂设置,会进行之前的个性化设置进行初始化复位,请知悉。退出后,就可以看开盒时候的图片,即可知道。  **低电提醒** 选择√/关机,选择X退出 关机  **来电界面** A:来电接听 B:来电挂断  **环境音** A、ANC打开 B、通透模式打开 C、ANC关闭  **音效选择** 提供3种选择模式,看剧/音乐/游戏模式  **均衡器** STUDIO  **定位功能** 提供6种风格选择  **灯光** L, R	**亮度调节** 高/中/低的亮度控制  **倒计时功能** 选择倒计时时间:5-10 -15-20-25-30-60分钟的选择档位  **拍照** 当耳机连接手机蓝牙时,通过点击智慧屏图标,可控制手机远程拍照	**注意事项**  **提示**   1. 使用产品前请仔细阅读本使用说明书并请妥善保管 2. 首次使用,请先将本产品充满电 3. 如果产品长期(超过1个月)不用,请对其进行充电; 4. 若手机无法搜索蓝牙耳机,请确认蓝牙耳机是否处于“配对状态”若长时间未进行配对或连接,蓝牙耳机配对功能将关闭,请重新开启蓝牙耳机至“配对状态”若手机程序出错,请重启手机; 5. 因不可抗拒,如地震、火灾、水灾、雷击等导致的故障损坏。   **警告**   1. 请勿以任何理由拆除或维修耳机,否则可能会导致起火、电子元件击穿甚至彻底损坏本产品 2. 请勿将设备置于温度过低或过高(0°C以下或45°C以上)的环境中 3. 请避免靠近儿童或动物的眼睛使用设备指示灯 4. 请勿在雷暴天气下使用该设备,雷暴可能导致设备工作不正常并增加触电的危险 5. 请勿用油或其他挥发液体擦拭本产品 6. 请勿将设备接触液体弄湿	**保修说明**  尊敬的客户,您好! 承蒙惠顾本公司的产品,为了保证你的利益,请您在购买本公司产品后,仔细阅读说明书及以下内容: (下列情况不属保修范围,本公司可提供有偿服务,敬请注意)   1. 未按使用说明书操作、使用、保管,导致本产品故障和损坏。 2. 擅自涂鸦,撕毁产品包装以及条码。 3. 擅自改动出厂设置和拆机修理。 4. 外因因素或者人为导致产品损坏,如输入不合格的电压,高温、进水、破坏、产品严重氧化或者生锈。 5. 因不可抗拒,如地震、火灾、水灾、雷击等导致的故障损坏。
**JM21**  **OPERATING INSTRUCTIONS** Please read the instruction manual in advance to facilitate subsequent use	**Product Parameter**				-----------------------------	----------------------		Product Name	JM21		Bluetooth Version	5.4		Transmission Distance	≥ 10M		Speaker Diameter	Φ10mm		Charging Port	Type-C		Sensitivity	112.1dB±1.5dB		Charging Case Battery	3.7V 320mAh		Headphone Battery	3.7V 30mAh		Charge Time (Charging Case)	1.5-2H		Charge Time (Headphones)	1H		Playback time (headphones)	5H		Standby time (headphones)	30H (connectionless)	**Packing List**				---------------------------------	----		True Wireless Bluetooth Headset	*2		Headphone Charging Compartment	*1		Type-c charging cable	*1		Instruction manual	*1		**Operating Instructions**  **1. Basic description**   - 1. Earcap - 2. Touch Key - 3. Charging Contacts - 4. Touchscreen - 5. Boot Key - 6. Type-c   **2. Mode selection**  **telephone mode** Reject call:Long press 2s Incoming call:click to answer, then click to hang up  **In-ear mode** Three touches on the left ear: Volume down Three touches on the left ear: Volume up	**Music Mode** Double-touch in the left ear:Play the previous song. Right ear double touch:Play next song Single touch:Play/Pause  **ANC switch switch**:Long press the left ear touch key 2S release to switch on/off; pass-through mode.  **3. Screen Descriptions**  **In-ear mode** Switch on:Long press 3S Switch off:Long press 5S Wake up Siri:Long press right ear 2s  **Toggle Function Interface** Swipe left or right to switch screens Swipe left: previous screen Swipe right: next screen  **Factory Setting** Please note that by pressing the 'Start' button to reset the factory settings, the headphones will carry out an initial reset of the device's personalization settings. After exiting, you can see the screen when you open and close the lid, you can know it.  **Music Interface** Click on the icon to play/pause Switch between up and down songs  **Language Settings** Swipe up and down to select the appropriate language Tap to finish switching	**Shut down Screen** Select √ to switch off and X to exit/switch off  **Low battery alert** When the battery power is lower than 3.2V, the low battery beeps will cycle once in 30s, and the screen will display the low battery icon when the power is lower than 3.1V.  **Incoming call screen** A: Incoming call Answer B: Incoming call hang-up  **Ambient Sound** A, ANC open B, Pass-through mode on C, ANC off  **Sound Selection** Provides 3 selection modes, watching drama/music/game mode  **Countdown Timer** Selection of countdown time: 5-10-15-20-25-30-60 minutes selectable steps	**Brightness Adjustment** High, medium and low brightness control  **Positioning Function** You can look up L, left ear, R right ear  **Lighting** Interface to control lights with 'on' button  **Take A Picture** When the headset is connected to the Bluetooth of your mobile phone, you can control your mobile phone to take photos remotely by tapping the smart screen icon	**Caveat**  **Draw Attention To Sth.**  1. Please read this instruction manual carefully before using the product and keep it in a safe place. 2. Please fully charge the product for the first time use. 3. If the product is not used for a long time (more than 1 month), please charge it. 4. If your mobile phone can not search for the Bluetooth headset, please make sure the Bluetooth headset is in the "pairing state". If there is no pairing or connection for a long time, the Bluetooth headset pairing function will be turned off, please turn on the Bluetooth headset again to the "pairing state". If the mobile phone program error, please restart the mobile phone; If the Bluetooth headset is not connected, please restart the mobile phone. If there is an error in the mobile phone programme, please restart the mobile phone; if there is an error in the Bluetooth headset programme, please restart the Bluetooth headset.  **FCC STATEMENT**  1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.  **Warnings**   1. Do not dismantle or modify the headset for any reason, as this may result in fire, breakdown of electronic components or even complete damage to the product. 2. Do not expose the device to temperatures that are too low or too high (below 0°C or above 45°C). 3. Avoid using the light near the eyes of children or animals. 4. do not use the device in thunderstorms, which may cause the device to operate improperly and increase the risk of electric shock. 5. Do not wipe the product with oil or other volatile liquids. 6. Do not wet the device with liquids.   **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  **Warranty Description**  Dear customer, hello! I am grateful for your patronage of our products, in order to ensure the interests, please read the instructions and the following content carefully after you buy this product. (the following circumstances do not belong to the scope of the warranty, the company can provide paid services, please note)   1. in accordance with the instructions for operation, use, storage, resulting in this product failure and damage. 2. unauthorised graffiti, tearing the product packaging and barcode. 3. unauthorised changes to the factory settings and dismantle the machine for repair. 4. accidental factors or human-induced damage to the product, such as the input of unqualified voltage, high temperature, water, damage, serious oxidation or rust of the product. 5. due to irresistible, such as earthquakes, fires, floods, lightning strikes and other causes of failure and damage.	