


70mmX90mm

JM25

无线智能耳机



使用说明书

请提前阅读使用说明书，方便后续使用

产品参数

产品名称

JM25

蓝牙版本

5.4

传输距离

≥10M

喇叭直径

Φ13mm

充电口

Type-C

灵敏度

117.7dB±3dB

充电盒电池

3.7V 500mAh

耳机电池

3.7V 35mAh

充电时间（充电盒）

1.5-2H

充电时间（耳机）

1H

播放时间（耳机）

6H

待机时间（耳机）

30H（无连接）

包装清单

无线耳机

.....

\*2

便携仓

.....

\*1

说明书

.....

\*1

充电线

.....

\*1

产品介绍



1 透气孔

2 指示灯

3 触摸区域

4 充电接触口

5 透音孔

6 手触屏

7 Type-充电口

8 开关键

基础操作


1.开机

1.将耳机从充电仓取出自动开机；2.长按 MFB 键 3S（耳机提示音：开机，指示灯：白蓝灯交替闪烁）

2.关机

1.将放入充电仓自动关机充电；2.接着长按 MFB 键 5S。（耳机提示音：关机，指示灯：白灯亮3S熄灭）

2.耳机佩戴



1.取出耳机

 
2.顺着方向佩戴耳机

3.完成佩戴

● 上述佩戴方式仅为建议，可根据自己的习惯进行舒适佩戴

● 佩戴完成后即可根据后续操作进行使用


2.蓝牙配对

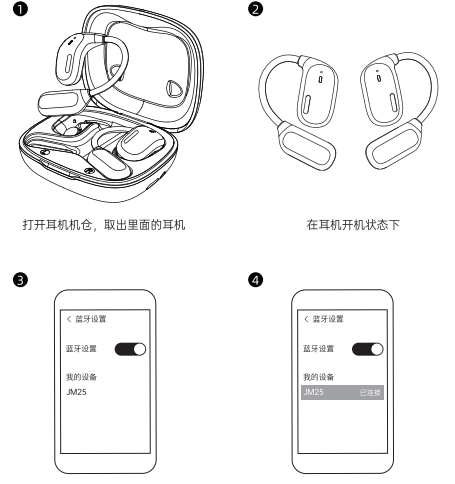

1.打开手机蓝牙，搜索设备名称：JM25

2.点击蓝牙名称，当显示已连接时即连接成功

3.模式选择



×1

电话模式

拒接来电:长按2s

来电:单击接听，再单击挂断

×2

音乐模式

左耳双触:播放上一曲

右耳双触:播放下一曲

单触:播放/暂停

×3

对耳模式

左耳三触:音量降低

右耳三触:音量增加

对耳模式

开机:长按3S


关机:长按5S

唤醒SIRI:长按右耳2s

3.屏幕说明

切换功能界面


左右滑动即可切换界面



向左滑动屏幕  
(上一个界面)

向右滑动屏幕  
(下一个界面)

其他界面示意



音乐界面

点击图标即可播放/暂停

上下曲切换


语言设置

点击即可选择合适的语言

点击即可完成切换


关机界面

选择√ 关机，选择x退出关机



菜单风格

分别是默认、万花筒、齿轮




均衡器

提供7种风格选择




重启界面

选择√，屏幕会重新启动




触屏唤醒

点击屏幕会唤醒



定位功能

点击即可搜寻耳机位置




语音助手

点击即可呼唤语音助手




音效选择

提供3种选择方式，电影/音乐/游戏




手电筒

提供4种灯效，分别是白、红、黄、绿




亮度调节

通过点击+/-，可调节屏幕亮度




低电提醒

当电池电量低于 3.2V 时，低电量提示音 30S循环一次，电量低于 3.1V 时低电关机



拍照

当耳机连接手机蓝牙时，通过点击智慧屏图标，可控制手机远程拍照



注意事项

提示

1. 使用产品前请仔细阅读本使用说明书并请妥善保管

2. 首次使用，请先将本产品充满电

3. 如果产品长期（超过 1 个月）不用，请对其充电；

4. 若手机无法搜索蓝牙耳机，请确认蓝牙耳机是否处于“配对状态”若长时间未进行配对或连接，蓝牙耳机配对功能将关闭，请重新开启蓝牙耳机至“配对状态”若手机程序出错，请重启手机；若蓝牙耳机程序出错，请重启蓝牙耳机。

警告

1. 请勿以任何理由拆除或维修改装耳机，否则可能会导致起火、电子元件击穿甚至彻底损坏本产品

2. 请勿将设备置于温度过低或过高（0℃以下或 45℃以上）的环境下

3. 请避免靠近儿童或动物的眼睛使用设备指示灯

4. 请勿在雷暴天气下使用该设备，雷暴可导致设备工作不正常并增加触电的危险

5. 请勿用油及其他挥发液体擦拭本产品

6. 请勿将设备接触液体弄湿

保修说明

尊敬的客户，你好！

承蒙惠顾本公司的产品，为了保证你的利益，请您在购买产品后，仔细阅读说明书及以下内容：（下列情况不属于保修范围，本公司可提供有偿服务，敬请注意）

1、未按使用说明书操作、使用、保管，导致本产品故障和损坏。

2、擅自涂改、撕毁产品包装以及条码。


3、擅自改动出厂设置和拆机修理。

4、意外因素或者人为导致产品损坏，如输入不合格的电压，高温、进水、破坏、产品严重氧化或者生锈等。

5、因不可抗拒，如地震、火灾、水灾、雷击等导致的故障和损坏。

JM25

Wirelessly Smart Headset



operating instructions

Please read the instruction manual in advance to facilitate subsequent use

Product Parameter

Product Name

JM25

Bluetooth Version

5.4

Transmission Distance

≥10M

Speaker Diameter

Φ13mm

Charging Port

Type-C

Sensitivity

117.7dB±3dB

Charging Case Battery

3.7V 500mAh

Headphone Battery

3.7V 35mAh

Charge Time (Charging Case)

1.5-2H

Charge Time (Headphones)

1H

Playback time (headphones)

6H

Standby time (headphones)

30H (No connection)

包装清单

Wireless Headphones

.....

\*2

Carrying Case

.....

\*1

Instruction manual

.....

\*1

Charging cable

.....

\*1

Products



1 Airflow Orifice

2 Indicator Light

3 Touch Zone

4 Charging Contacts

5 Sound Hole

6 Touchscreen

7 Type-charging Port

8 Turn key

Basic Operation


1.Switch on/off

1.Remove the headset from the charging compartment to turn it on automatically; 2. Long press the MFB key for 3S (Headphone tone: Switch on; Indicator light: White and blue light flashing alternately)

2. Switch off

1.Place it into the charging compartment to automatically switch off charging; 2. Then long press the MFB key for 5S. (Headset tone: Off; Indicator light: White light on 3S off)

2. Headphone Wearing



1. Remove the headset

 
2. Wear your headphones in the right direction

3. Finish wearing

● The above wearing styles are only recommendations and can be worn comfortably according to your own habits.

● Once worn, it can be used in accordance with subsequent operations

2.Bluetooth Pairing

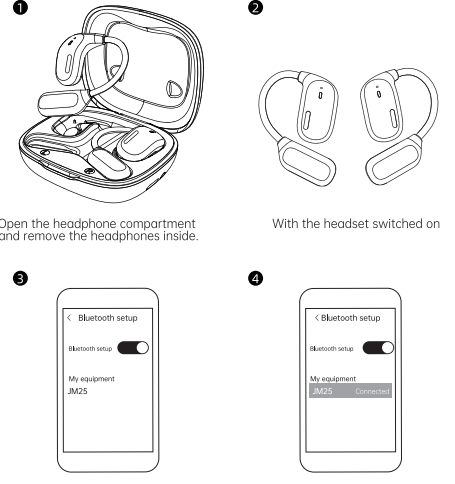


1. Open the headphone compartment and remove the headphones inside.

2. With the headset switched on

3. Turn on your mobile phone's Bluetooth and search for the device name: JM25

4. Click on the Bluetooth name, when it shows Connected, the connection is successful.

3. Mode Selection



×1

Telephone Mode

Reject call:Long press 2s

Incoming call:click to answer, then click to hang up

×2

Music Mode

Double-touch in the left ear: Play the previous song.

Right ear double touch: Play next song

Single touch:Play/Pause

×3

In-ear mode

Three touches on the left ear: Volume down

Three touches on the right ear: Volume up

×3

In-ear mode

Switch on:Long press 3S

Switch off:Long press 5S

Wake up SIRI:Long press right ear 2s

3. Screen Descriptions

Toggle Function Interface

Swipe left or right to switch interfaces



Swipe left on the screen  
(Previous screen)

Swipe the screen to the right  
(next screen)

Other Interface Schemes



Music Interface

Click on the icon to play/pause

Switch between up and down songs


Language Settings

Swipe up and down to select the appropriate language

Tap to finish switching


Shutdown screen

Select √ to switch off and x to exitSwitch off




Menu style

Default, Kaleidoscope, Gear respectively



 
Equaliser

Offers a choice of 7 styles




Reboot Screen

Select √ and the screen will restart

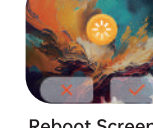


Wake on Touch

Tapping the screen will wake up



 
Positioning Function

Click to search for headset location




Voice Assistant

Tap to call the voice assistant

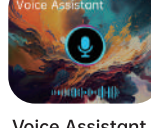


Sound Selection

Offers 3 ways to choose, film /Music/Games



Electric Hand Torch

Provides 4 light effects, which are white,Red, Yellow and Green




Brightness Adjustment

The screen brightness can be adjusted byclicking +/-.



Low battery alert

When the battery power is lower than 3.2V, the low battery beep will cycle once in 30S, and the power will be turned off when the power is lower than 3.1V.



Take A Picture

When the headset is connected to the Bluetooth of your mobile phone, you can control your mobile phone to take photos remotely by tapping the smart screen icon



Caueat

Draw Attention To Sth.

1. Please read this instruction manual carefully before using the product and keep it in a safe place.

2. Please fully charge the product for the first time use.

3. If the product is not used for a long time (more than 1 month), please charge it. 4.

4. If your mobile phone can not search for the Bluetooth headset, please make sure the Bluetooth headset is in the 'pairing state' If there is no pairing or connection for a long time, the Bluetooth headset pairing function will be turned off, please turn on the Bluetooth headset again to the 'pairing state' If the mobile phone program error, please restart the mobile phone; If the Bluetooth headset is not connected, please restart the mobile phone; If there is an error in the mobile phone programme, please restart the mobile phone; if there is an error in the Bluetooth headset programme, please restart the Bluetooth headset.

Warnings

1. Do not dismantle or modify the headset for any reason, as this may result in fire, breakdown of electronic components or even complete damage to the product.

2. Do not expose the device to temperatures that are too low or too high (below 0°C or above 45°C).

3. Avoid using the light near the eyes of children or animals.

4. do not use the device in thunderstorms, which may cause the device to operate improperly and increase the risk of electric shock.

5. Do not wipe the product with oil or other volatile liquids.

6. Do not wet the device with liquids.

Warranty Description

Dear customer, Hello!

I am grateful for your patronage of our products, in order to ensure that your interests, please read the instructions and the following content carefully after you buy this product. ( The following circumstances do not belong to the scope of the warranty, the company can provide paid services, please note)

1, not in accordance with the instructions for operation, use, storage, resulting in this product failure and damage.

2, unauthorised graffiti, tearing the product packaging and barcode.

3, unauthorised changes to the factory settings and dismantle the machine for repair.

4, accidental factors or human-induced damage to the product, such as the input of unqualified voltage, high temperature, water, damage, serious oxidation or rust of the product.

5, due to irresistible, such as earthquakes, fires, floods, lightning strikes and other causes of failure and damage.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.