

55mmX70mm

TWS-XG77

真无线耳机



使用说明书

产品参数

蓝牙版本	5.3
蓝牙协议	A2DP/AVDTP/AVRCP/RFCOMM/HFP/HSP/SPP/HID
传输距离	10-15米
呼叫时间	4小时
播放时间	5小时
充电仓待机时间	120天
充电仓充电时间	1.5-2小时
耳机待机时间	30小时
耳机充电时间	0.8小时
单耳机电池容量	40毫安时
充电仓电池容量	250毫安时

包装清单

真无线蓝牙耳机 - - - - - *2
耳机充电仓 - - - - - *1
Type-C充电线 - - - - - *1
说明书 - - - - - *1
硅胶挂绳 - - - - - *1
耳帽 - - - - - *4

产品操作说明

模式	语音提示	模描述
开机	Power on/开机	红蓝灯交替闪烁
关机	Power off/关机	红灯闪3下熄灭
TWS配对	嘟	红蓝灯交替闪烁
TWS配对成功	Pairing/配对中	主耳红蓝灯交替闪烁副耳熄灭
TWS断开连接	disconnected/连接断开	红蓝灯交替闪烁
手机配对		主耳红蓝灯交替闪烁副耳熄灭
手机配对成功	connected/连接成功	熄灭
断开连接	disconnected/断开连接	主耳机蓝灯交替闪烁副耳机熄灭
耳机充电		耳机红灯常亮
耳机充满		蓝灯亮20s熄灭
充电仓充电		显示实际电量并递增闪烁
充电仓充满		显示100%并常亮
低电量提示	滴滴	红灯5s闪一次

对耳模式

开机：长按3S
关机：长按5S
唤醒Siri：长按1.5s

音乐模式

副耳双触：播放上一曲
主耳双触：播放下一曲
单触：播放/暂停

对耳模式

副耳三触：音量降低
主耳三触：音量增加

电话模式

拒接来电：长按2s
来电：单击接听，再单击挂断

保修说明

尊敬的客户，你好！
承蒙惠顾本公司的产品，为了保证你的利益，请您在购买本产品后，仔细阅读说明书及以下内容：（下列情况不属于保修范围，本公司可提供有偿服务，敬请注意）
1、未按使用说明书操作、使用、保管，导致本产品故障和损坏。
2、擅自涂鸦，撕毁产品包装以及条码。
3、擅自改动出厂设置和拆机修理。
4、意外因素或者人为导致产品损坏，如输入不合格的电压，高温、进水、破坏、产品严重氧化或者生锈等。
5、因不可抗拒，如地震、火灾、水灾、雷击等导致的故障和损坏。

注意事项

提示


1. 使用产品前请仔细阅读本使用说明书并请妥善保管
2. 首次使用，请先将本产品充满电
3. 如果产品长期（超过1个月）不用，请对其充电；
4. 若手机无法搜索蓝牙耳机，请确认蓝牙耳机是否处于“配对状态”若长时间未进行配对或连接，蓝牙耳机配对功能将关闭，请重新开启蓝牙耳机至“配对状态”若手机程序出错，请重启手机；若蓝牙耳机程序出错，请重启蓝牙耳机。

警告

1. 请勿以任何理由拆除或维修改装耳机，否则可能会导致起火、电子元件击穿甚至彻底损坏本产品
2. 请勿将设备置于温度过低或过高（0℃以下或45℃以上）的环境下
3. 请避免靠近儿童或动物的眼睛使用设备指示灯
4. 请勿在雷暴天气下使用该设备，雷暴可导致设备工作不正常，并增加触电的危险
5. 请勿用油及其他挥发液体擦拭本产品
6. 请勿将设备接触液体弄湿

TWS-XG77

True wireless earphones

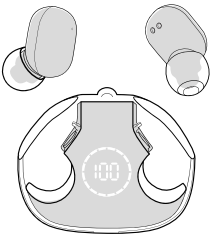

instruction manual

parameters

bluetooth version	5.3
Bluetooth protocol	A2DP/AVDTP/AVRCP/RFCOMM/HFP/HSP/SPP/HID
Transmission distance	10-15m
call time	4H
Playing time	5H
Charging case standby time	120DAY
Charging time of the charging compartment	1.5-2H
Headphone standby time	30H
Headphone charging time	0.8H
Single earphone battery capacity	40mAh
Charging box battery capacity	250mAh

Packing List

True wireless Bluetooth earphones - - - - - *2
Headphone charging compartment - - - - - *1
Type-C charging cable - - - - - *1
instructions - - - - - *1
Silicone hanging rope - - - - - *1
earmuffs - - - - - *4

Operating Instructions

modes	Voice prompts	describe
Power on		Flashing red and blue lights alternately
Power off		The red light flashes three times and turns off the light
TWS pairing	du	Flashing red and blue lights alternately
TWS pairing successful	Pairing	The red and blue lights in the main ear flicker alternately, and the auxiliary ear lights turn off
TWS disconnection	disconnected	Flashing red and blue lights alternately
Phone pairing		The red and blue lights flicker alternately, and the auxiliary ear lights turn off
Phone pairing successful	connected	Turn off the light
Disconnected		The blue light of the main earphones flashes alternately, and the auxiliary earphones turn off the light
Earphone charging		The red light on the earphones is always on
Earphones full		Blue light on for 20 seconds, light off
Charging the charging compartment		Display the actual battery level and increase it by flashing
Charging compartment fully charged		Display 100% and always on
Low battery warning	didu	The red light flashes once every 5 seconds

binaural mode

Power on:Long press 3S
Power off:Long press 5S
Siri: Long press 1.5s

Music Mode

Double touch in the ear: Play the previous song
Main ear double touch: Play the next song
One touch: play/pause

telephone mode

Reject call:Long press 2s
Incoming call: click to answer then click to hang up

binaural mode

Auxiliary ear three touch: volume decreases
Main ear three touch: increased volume

Warranty Description

Dear customer, hello!
Thank you for your patronage of our company's products. In order to ensure your interests, please purchase After purchasing this product, carefully read the manual and the following information: Not covered by warranty, our company can provide paid services, please note
1. Failure to operate, use, and store according to the user manual result-ed in the malfunction of this product Obstacles and damages.
2. Unauthorized graffiti, tearing off product packaging and barcodes.
3.Unauthorized modification of factory settings and disassembly for repair.
4. Accidental factors or human caused product damage, such as unquali-fied input Voltage, high temperature, water ingress, damage, severe oxidation or rusting of the product, etc.
5. Caused by force majeure, such as earthquakes, fires, floods, lightning strikes, etc Faults and damages.

Precautions

prompt

1. Before using the product, please read this user manual carefully and keep it properly
2. For first use, please fully charge this product
3. If the product is not used for a long time (over 1 month), please charge it
4. If the phone is unable to search for Bluetooth headphones, please confirm if the Bluetooth headphones are in thePairing status; If pairing or connection is not carried out for a long time, Bluetooth earphones, The pairing function will be turned off. Please turn on the Bluetooth earphones again to "pairing status" If there is an error in the phone program, please restart the phone: If there is an error in the Bluetooth earphone program, Please restart the Bluetooth headphones.

warn

1. Do not remove or repair or modify headphones for any reason, othe wise it may cause damage Causing fire, electronic component breakdown, or even complete damage to this product
2. Do not place the device at temperatures that are too low or too high (below 0℃ or 45℃ in the above) environment
3. Please avoid using device indicator lights near the eyes of children or animals
4. Do not use this device in thunderstorm weather, as thunderstorms can cause the device to work Abnormal and increases the risk of electric shock
5. Do not use oil or other volatile liquids to wipe this product
6. Do not wet the device when it comes into contact with liquid

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.