


# 快速安装指南

(中继模式)

型号：XL-Z05/07

扩展器插上通电：在手机打开设置页面，WiFi或者（WLAN）选项。选择Repeater-XXX的WiFi名称，跳转到连接界面。

步骤1：先切换中文

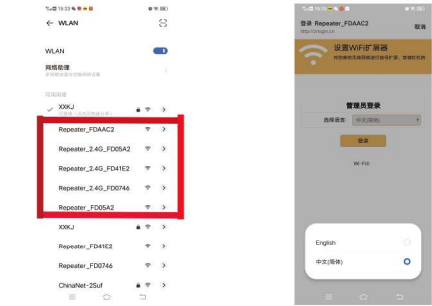

步骤2：选择中继模式



步骤3：找到自家WiFi名称



步骤4：输入自家WiFi密码后点击下一步



步骤5：点击完成配置即可。




2.4G	单频2.4G
网口指示灯	接入网线，连接上级路由器，指示灯亮
扩展指示灯	扩展成功，指示灯亮，网络连接正常
配置指示灯	通电10秒左右，配置指示灯亮，可以进行连接设置
电源指示灯	连接电源指示灯亮
Reset按键	长按复位按键7秒，电源指示灯闪烁，机器恢复出厂状态 短按复位按键两秒，网口指示灯快闪，与上级路由器匹配成功，指示灯长亮

# 快速安装指南

(AP模式)

扩展器插上通电：在手机打开设置页面，WiFi或者（WLAN）选项。选择Repeater-XXX的WiFi名称，跳转到连接界面。

步骤1：先切换中文

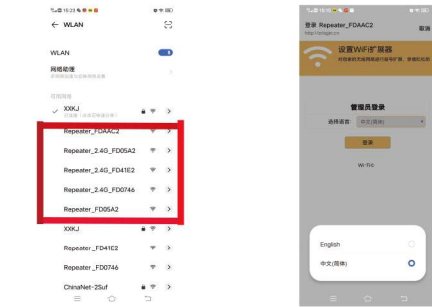

步骤2：选择AP模式



步骤3：创建WiFi名称密码后，点击下一步



步骤4：点击完成配置即可。



2.4G	单频2.4G
网口指示灯	接入网线，连接上级路由器，指示灯亮
扩展指示灯	扩展成功，指示灯亮，网络连接正常
配置指示灯	通电10秒左右，配置指示灯亮，可以进行连接设置
电源指示灯	连接电源指示灯亮
Reset按键	长按复位按键7秒，电源指示灯闪烁，机器恢复出厂状态 短按复位按键两秒，网口指示灯快闪，与上级路由器匹配成功，指示灯长亮


# Quick Installation Guide

(Relay Mode)

Model : XL-Z05/07

Plug in the extender to power up:Open the settings page on the phone, select WiFi or(WLAN ) option.Select the WiFi name of Repeater-XXXX to jump to the connection interface

Step1:Switch to English first

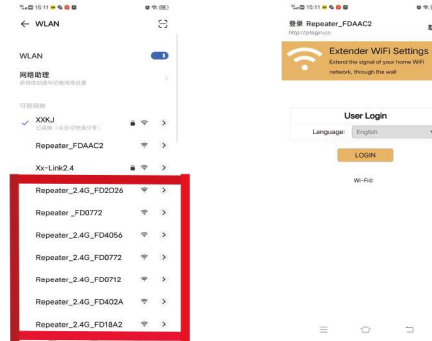


Step2:Select relay mode




Step3:Find your own WiFi name



Step4:Enter your own WiFi password and click Next

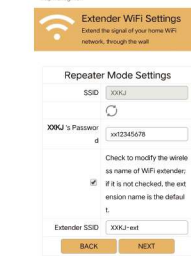

Step5:Click to complete the configuration

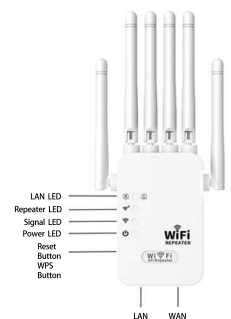


2.4G	Single frequency 2.4G.
LAN LED	Connect the network cable, connect to the superior router, and the indicator light is on.
Repeater LED	Expansion successful, indicator light on, network connection normal.
Signal LED	After about 10 seconds of power on, the configuration indicator light is on, and the connection settings can be made.
Power LED	The power indicator light turns on when the power source is connected.
Reset Button WPS Button	Press and hold the reset button for 7 seconds, the power indicator light flashes, and the machine returns to the factory state. Short press the reset button for two seconds, the network port indicator light flashes quickly, the match with the superior router is successful, and the indicator light is on for a long time

# Quick Installation Guide


(AP MODL)

Plug in the extender to power up:Open the settings page on the phone, select WiFi or(WLAN ) option.Select the WiFi name of Repeater-XXXX to jump to the connection interface

Step1:Switch to English first

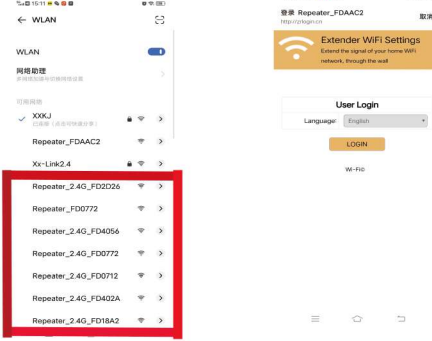


Step2:Select AP mode

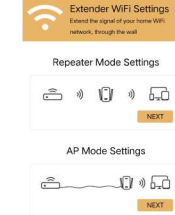

Step3 :After creating a WiFi name and password,click Next



Step4:Click to complete the configuration

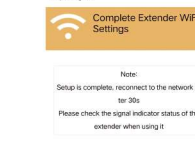

2.4G	Single frequency 2.4G.
LAN LED	Connect the network cable, connect to the superior router, and the indicator light is on.
Repeater LED	Expansion successful, indicator light on, network connection normal.
Signal LED	After about 10 seconds of power on, the configuration indicator light is on, and the connection settings can be made.
Power LED	The power indicator light turns on when the power source is connected.
Reset Button WPS Button	Press and hold the reset button for 7 seconds, the power indicator light flashes, and the machine returns to the factory state. Short press the reset button for two seconds, the network port indicator light flashes quickly, the match with the superior router is successful, and the indicator light is on for a long time

AP mode, can set 2.4G wireless SSID name and password. After setting up, the device's WAN portConnected to an external network, other mobile devices canBy wirelessly connecting to the device's SSID name andEnter a password to connect to the internet.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.