


尺寸: 95*92
材质: 105g铜版纸
装订方式: 风琴页

S12 Wireless Earbuds

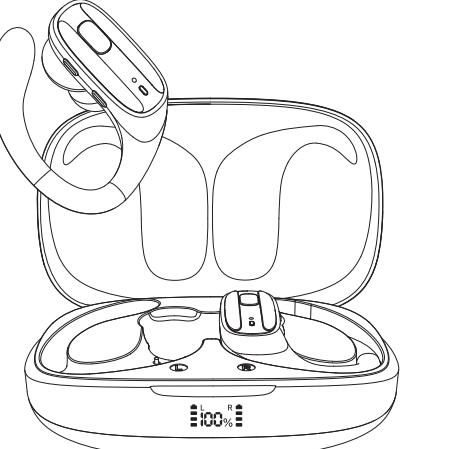


USER MANUAL

Specification

Model :	S12
Earbud battery :	60mAh
Charging case battery :	450mAh
Frequency range :	20Hz-20KHZ
Mic Sensitivity :	-38±3dB
Bluetooth version :	V5.4
Transmission distance :	over 10 meters
Operating Temperature :	-20°C to 60°C
Max. Humidity :	90%

Package list

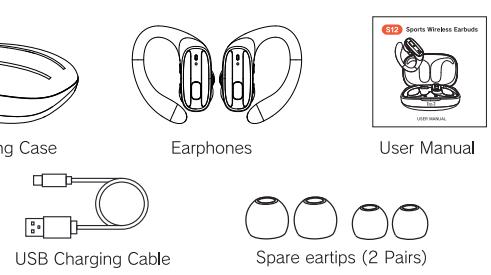

Charging Case
Earphones
User Manual
USB Charging Cable
Spare ear tips (2 Pairs)


Fitting



Bluetooth pairing

1. Take the earphones out of the charging bin.
2. Turn on bluetooth and select "S12" in your device settings.
3. Voice prompt "connected".

Note:
If there is a pairing record, take one or two earbuds out of the charging case, the earbuds will automatically connect to the device within 2-4s.

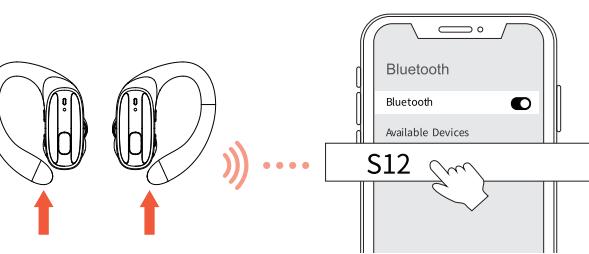

Power on

1. Automatic Activation:
Open the charging case, remove earbuds, and then they'll automatically power on and enter pairing mode.

2. Manual Power On:
If earbuds are outside the case and powered off, you can press & hold both control button for 3 seconds.


Power off

1. Automatic Shutdown:
Return the earbuds to the charging case and close the lid. The earbuds will automatically power off and begin charging.


2. Manual Shutdown:
(1) For both earbuds: Press and hold the control button on both earbuds for 5 seconds until the LEDs turn off.
(2) For a single earbud: Press and hold its control button for 5 seconds to power it down individually.

Note:
Earbuds outside the charging case will automatically power off after 3 minutes of Bluetooth disconnection

Controls

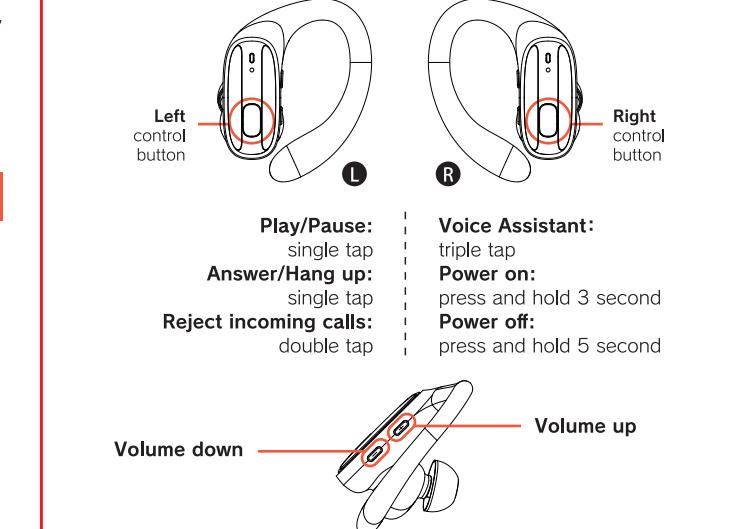


Earbud LED Indicator

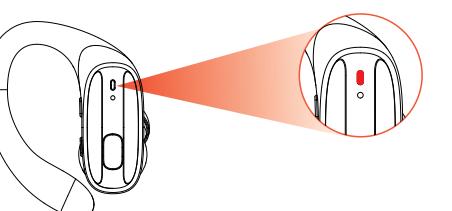


Power On :	Blinks red/white
Power Off :	Red flashes 3 times
Disconnected :	Solid white blinking
Low Battery :	Continuous red flash + voice prompt
Shutdown :	Red flashes 3 times

Charging earbuds

1. Placing the earbuds in the charging case will power off earbuds and start charging. Progress bar animates upward from charging side.
2. When the earbud is fully charged, the display will turn off.

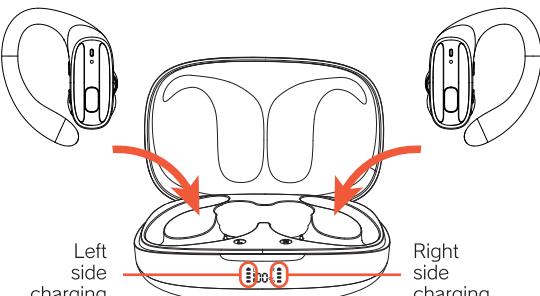

Charging Case

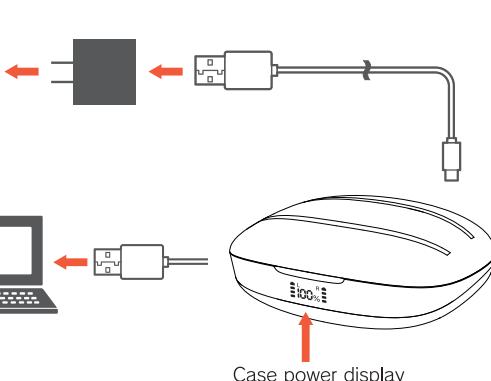

Left side charging
Right side charging
Case power display

Usage & Care Guidelines

1. Storage
Store the earbuds in a dry, well-ventilated area. Avoid exposing them to oils, steam, or high-humidity environments like kitchens or bathrooms, as moisture may degrade performance.

2. Cleaning
Gently wipe the earbuds with a dry, lint-free cloth. Do not use alcohol, solvents, or abrasive materials, as these may damage the microphone grilles or touch sensors.

3. Optimal Connectivity
For best performance, keep your paired device within 33 feet (10 meters) of the earbuds. Physical obstructions (walls, furniture) or interference from Wi-Fi routers/microwaves may reduce range.

4. If connection issues occur:
(1) Place the earbuds back in the case for 10 seconds, then remove them to reset.
(2) Never attempt to disassemble the earbuds—this voids the warranty and may cause permanent damage.

5. Charging Best Practices
(1) Always use the included USB-C cable or certified adapters (5V/1A output recommended) to charge your earbuds.
(2) Maintain battery health by:
a. Avoiding complete discharge (recharge when battery drops below 20%)
b. Performing a full monthly discharge/recharge cycle

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
–Reorient or relocate the receiving antenna.
–Increase the separation between the equipment and receiver.
–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
–Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

THANK YOU