


TPO3

FCC ID: 2BBOA-TP03
WIRELESS EARBUDS

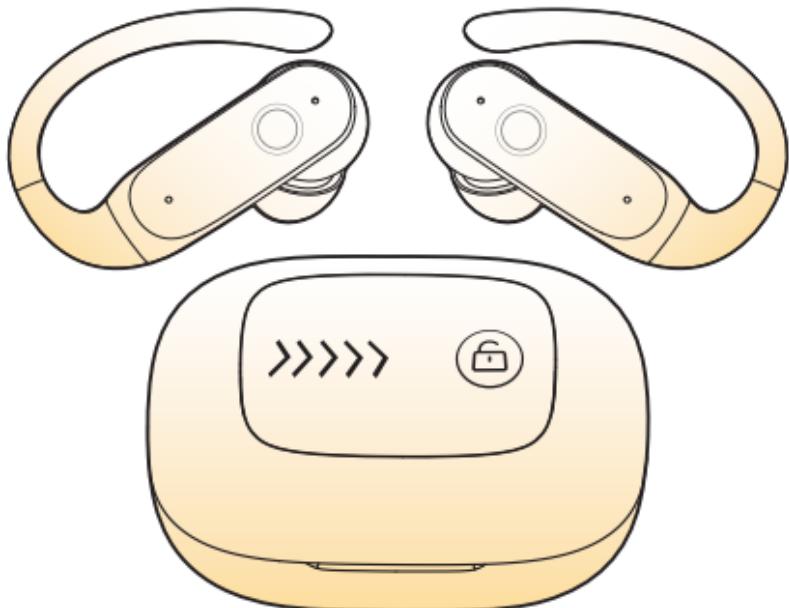

USER MANUAL

CONTENTS

Packing List01
Easy In-and-Out Gesture02
Fitting02
Charging03
Bluetooth Pairing05
Button Control06
LCD Touch Screen07
Troubleshooting Guide11
Safety Instructions15
Specification16
WARNING17

Packing List



A




B

"Remove it"



C

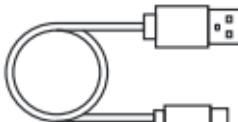

D



E

Package Contents:


- A.Charging Casex1
- B.Sports Earbudsx2
- C.User Manualx1
- D.USB-A to USB-C Charging Cablex1
- E.Eartipsx3 -The ones in medium size are on the earbuds

Easy In-and-Out Gesture

1. Use this gesture to easily remove:



2. Use this gesture to easily return:

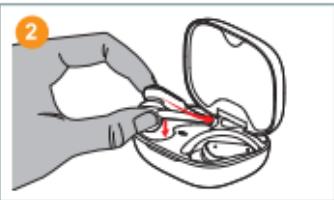


Fitting




Charging

1. [Important] Activate the earbuds' battery before use.

-If the earbuds have charge upon arrival, use them until they shut off automatically, then fully charge to 100%.

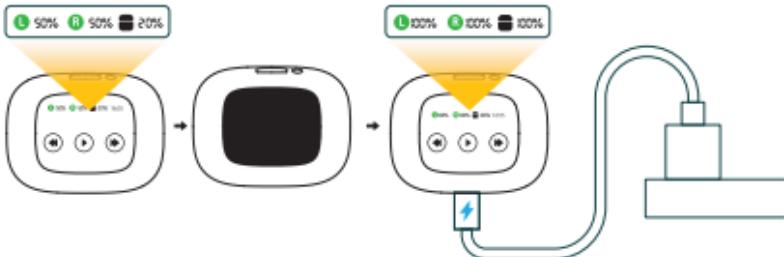


-If the earbuds arrive with an empty battery, just charge them to 100% before using.

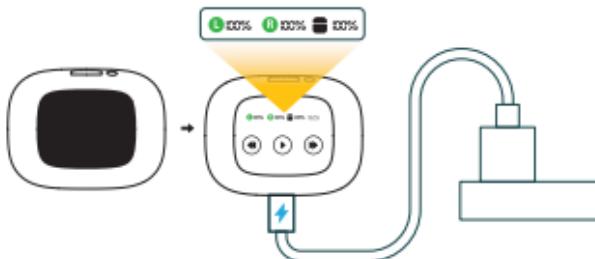

2. How to charge your earbuds.


-Place the earbuds into the charging case and close the cover to charge. The Earbud Power Display upper on the LCD screen will change to green.

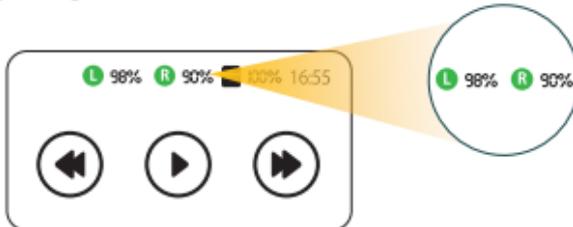

3. How to charge your charging case.

-When the charging case battery level falls below 10%, the LCD screen will display a low battery warning icon.

-Plug USB-C cable into case and a USB-A port/power adapter, and then the warning will disappear immediately and the LCD will display real-time %.

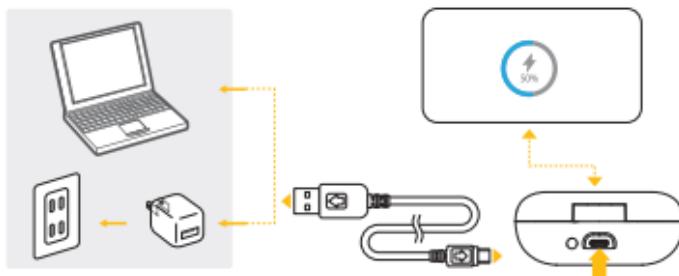

A 5V adapter is the best choice for charging to avoid battery damage.

Bluetooth Pairing

1. Open the charging case.
2. Select the [TP03] from device list in your Bluetooth settings.
3. After connection, the Bluetooth icon in the upper left corner of the LCD screen will change to white and the earbuds will prompt "connected".



When there is a pairing record, take the earbuds out of the charging case, they will automatically connect to the phone.

Touch Operation

L/R touch control



- ① Play/Pause: once tap
- ② Answer/End calls: double tap
- ③ Reject calls: press and hold 3s
- ④ ANC mode: triple tap
- ⑤ Voice assistant: tap four times
- ⑥ Power on/off: press and hold 5s
- ⑦ Reset: tap five times

L touch control



 
- ① Previous song: double tap (L)
- ② Volume down: press and hold (L)

R touch control



- ① Next song: double tap (R)
- ② Volume up: press and hold (R)

Multi-Function Button [on the case]



- ① Screen lock/unlock: once tap
- ② Power off/Restart/Factory Reset: double tap
- ③ Power on: press and hold
- ④ Earbuds sync: triple tap




1. The earbuds will automatically turn on when taken out of the charging case, and will automatically turn off and enter the charging state when placed in the case.
2. When the earbuds are disconnected from the device for 5 minutes, the earbuds will automatically turn off. If you want to turn it on again, you can (1) put the headphones back in the case and take them out again after 3 seconds, or (2) press and hold the earbuds touch button for more than 5 seconds and then reconnect them again.


Touch Operation

1.Bluetooth Icon
2.Earbuds Power Display


3.Charging Case Power Display
4.Time Display

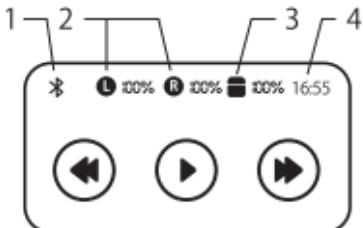


Music Playback Control

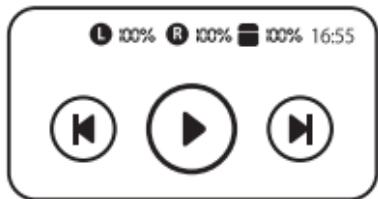


Language Switch

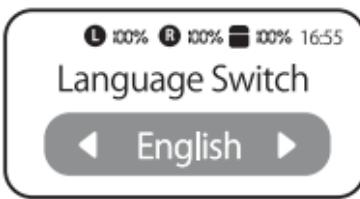


Volume Control

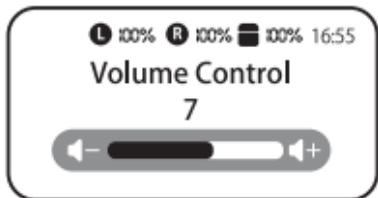

Screen Lock

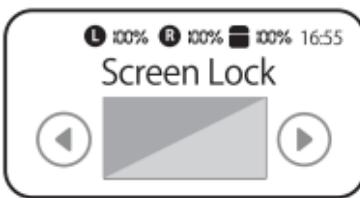

Equalizer

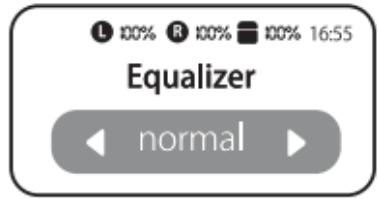


Time Setting




Timer



Flash Light

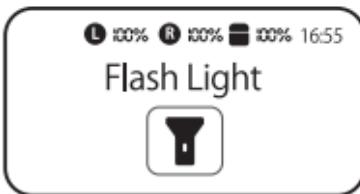


Light Level

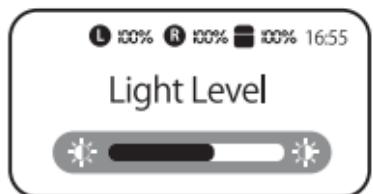

Noise Reduction

- 1.ANC ON
- 2.ANC OFF
- 3.Transparent Mode

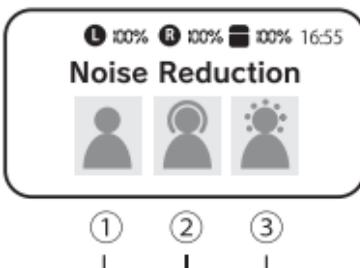

Find My Earphone

When the earbud is lost, select the lost earbud, and the lost earbud will make a sound.


NOTE: To use Find My Earphone function, the earbud can only make a sound when it is still charged and within the range of the Bluetooth connection.



Photo Remote Control

You can remotely press the shutter button of the connected smartphone by pressing the camera icon.

NOTE: To use Photo Remote Control function, you will be given permission on your smartphone when you first pair it.

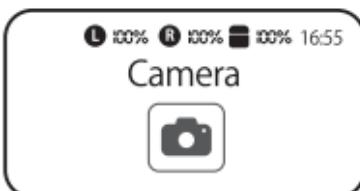

Troubleshooting Guide

Charging Issues

1. When the case won't charge earbuds?

- (1)Check if the protective film is teared off.
- (2)Check case battery level.
- (3)Clean charging contacts with dry cloth (lint/dust removal).
- (4)Ensure earbuds are properly seated in case.

2. When the case itself won't charge?

- (1)Use certified USB-C cable.
- (2)Try different power source (wall adapter/USB port).

Connection Issues

1. Can it connect to multiple devices at the same time?

No. Pair with one device at a time. To connect to a new device, please ensure the earbuds are disconnected from your current device first.

2.What if the earbuds can connect to my phones, but it fail to connect a new device?

- (1) Place the earbuds into the case and close the case.
- (2) Delete the connect record your phone's bluetooth list.
- (3) Connect to the new device.

3. What devices are these earbuds compatible with?

These earbuds are compatible with both Android and iOS devices that support Bluetooth version 5.0 or higher.

4. Can't connect to PC/tablet?

- (1) Enable Bluetooth → Turn on device Bluetooth and retry pairing
- (2) Restart devices → Reboot both computer and earbuds
- (3) Update drivers → Install latest Bluetooth drivers from manufacturer's website
- (4) Test other devices → Check if issue occurs with smartphones/other tablets

5. Intermittent disconnections?

- (1) Restart earbuds & paired device.
- (2) Ensure earbuds are charged and in pairing mode (flashing blue light).
- (3) Disable nearby Bluetooth devices (Wi-Fi routers/microwaves).
- (4) Update device software.

6. What to do if the two earbuds are not working in sync?

- (1) Tap 5 times on L and R earbuds at the same time and they will prompt "power off".
- (2) Place the earbuds into the case and close the case.
- (3) Delete the connection record on the device (your phone/laptop/tablet etc.).

- (4) Press the button on the case 3 times.
- (5) Open the case, you can see the indicator light on both earbuds flashing in red-blue-red, then one of the earbuds goes off and the other continues to flash red-blue, that means they can work in sync.

Don't work

1. Earbuds don't work.

- (1) Check the battery: place both earbuds into the charging case and close the case. Observe the case screen: Do the "L" and "R" indicators both show a green light? If either shows 0% battery, please charge the case for 1 full hour and check again. If either earbud still fails to charge after this, please contact the support team—we'll assist further.
- (2) If there is no problem with the battery, check the bluetooth connection: go to your phone's Bluetooth settings and remove the "TP03" pairing record. Then, simultaneously take both earbuds out of the case. They should automatically enter pairing mode. Reconnect to "TP03" via your Bluetooth list.
- (3) If still don't work, please contact the support team.

2. Case doesn't work.

Charge the case for at least 10 min. Observe the screen: is there a green power percentage shown on the screen? If the case still doesn't work after an-hour charging, please contact the support team.

Audio Quality Problems

1. Sound degradation over time?

- (1) Low battery → Charge earbuds (audio improves above 20% battery)
- (2) Wireless interference → Move away from routers/micro-waves
- (3) Physical damage → Avoid moisture exposure
- (4) Weak Bluetooth signal → Keep paired device within 33 ft (10m)

Durability

Q: Water resistance limits?

1. Earbuds: Sweat/rain resistant, no swimming/showering
2. Case: Not waterproof → Keep dry

Warranty Support

1. Orders Support:

Go to Your Orders → Contact Seller → Describe issue

2. Direct support:

Visit seller storefront → Click "Ask a Question"

Safety Instructions

- Pay close attention to the surrounding traffic when using it on foot. It may cause traffic accidents.
- Reduce the volume to a minimum before use. Sudden loud noises can damage your hearing.
- To protect your ears, do not turn up the volume too high.
- Do not use this product if it falls into flammable or liquid (such as water). Continued use may cause fire, malfunction or electric shock.
- Opening the inside may cause malfunction or electric shock.
- Do not touch the inside. Also, we cannot guarantee performance if the inside has been manually modified.
- Do not charge with wet hands or touch the charging port. This may result in electric shock.
- If you feel uncomfortable while using this product, stop using it immediately.
- If you have a medical device such as a pacemaker, consult your physician before use.
- Do not allow small children to use this product.

Safety Instructions

Model No.:	TP03
Version:	V6.0
Effective Wireless Range:	10~15 meters
Charging Case Battery Capacity:	500mAh
Charging Case Recharging Time:	About 1.5 hours
Charging Port:	Type-C
Control Mode:	Touch Control
Storage Temperature:	-10~45°C

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.