



1. Please read the manual carefully and keep it for future reference.
2. Use the product as instructed in this manual.
3. Recommended operating temperature: 0-40°C.
To prevent overheating or fire, avoid exposing accessories (e.g., fanlight), keep them out of reach of children.
4. Do not touch the product directly while it is running under adult supervision.
5. Do not attempt to disassemble or replace any parts inside the product unless specifically instructed to do so below under "Maintenance".
6. Do not submerge the product in water or any other liquid. This product is not waterproof.
7. If any liquid accidentally enters the product, disconnect it immediately and remove it from use.
8. When plugging the power cord, ensure your hands are dry when installing or removing the plug.
9. Do not place the product near heat sources such as exposed electric pipes or flames.
10. Do not place the product in environments with strong electromagnetic fields, such as those around microwave ovens or induction cooktops.
11. Before cleaning the product with a dry cloth, ensure it is powered off.
12. Do not use alcohol, benzene, acetone, or other organic solvents to clean the product. These substances may damage the surface of the product. Use a neutral solvent or water if necessary.
14. Ensure the operating voltage matches the local supply voltage before using the product.
15. The product is unused for an extended period, the battery may discharge. To recharge the product properly:
 - a. Turn the product off.
 - b. Disconnect the power cord.
 - c. Plug the power cord into a wall outlet.
16. Do not use the product if you suspect you may damage hardware. Adjust the volume to a safe level.
17. Do not drop or subject electronic waste improperly. Do not discard electronic devices, components, or batteries with household trash. To prevent pollution and harm to humans caused by hazardous substances, and to ensure resource recycling, please dispose of used products and their packaging according to local regulations.



- ③ Type-C Charging Port
- ② Increase Volume / Next Track
- ③ Decrease Volume / Previous Track
- ④ Power On/Off

- Long press for 3 seconds: Power On/Off
- Short press: Play/Pause
- Double press: TWS Pairing

- Long press for 3 seconds: Next Track
- Long press for 3 seconds: Previous Track
- Short press: Increase Volume
- Short press: Decrease Volume

When not using the speaker, long press the button to power off and prevent battery drain.

Low Battery Alert and Auto Power-Off Function:
When the battery level is below 10%, the speaker will emit a warning tone. At this point, the speaker should be charged promptly.
When the battery level drops below 3%, the speaker will automatically power off.

BT Mode

 
- Press the speaker. Long press the **BT** button for about 3 seconds to power on and a proper tone will sound.

BT Connection

- Open the Bluetooth settings on your smart device, search for the BT name: **SF100** and click to connect. A prompt tone will sound when the connection is successful.
- When using the speaker, devices previously connected to this BT will automatically connect. If you need to connect a new device to the speaker, please disconnect the BT on the original device before connecting.


2. TWS Mode

- With any two identical speakers powered on, double press the **TWS** button on one of the speakers to enter TWS pairing mode. The TWS connection will be established within 15 seconds, and a proper tone will sound.
- Double press the **TWS** button on either speaker to exit TWS mode.



● **Charging Indicator:** The red light stays on during charging, and the red light turns off when fully charged.

Common Problems and Solutions	
Problem	Solution
Inable to power on	Check if the battery battery of the speaker is charged.
Unhigh quality stereo sound	Turn off the speaker and reset it.
Music playback stutters	Check if the connection distance has exceeded the range or if there are obstacles between the speaker and the phone.
No sound during playback	Check if the speaker is set to the lowest volume.
Power indicator light not on	Check if the charging port is properly connected.

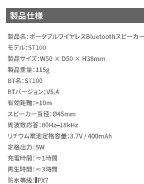[illegible]

- ① Type-C充電ポート
- ② 音量アップ / 次の曲
- ③ 音量ダウン / 前の曲
- ④ 電源ボタン

— 3秒長押し: 電源オン/オフ
 ④ — 短押し: 再生/一時停止
 — ダブルクリック: TWSペアリング

 + — 3秒長押し: 次の曲
 — 短押し: 音量アップ
 — 3秒長押し: 次の曲
 — 短押し: 音量ダウン

スピーカーを停音しない場合は、④ ボタンを長押しして電源をオフにし、電力消耗を防いでください。

低電力警告および自動電源オフ機能:
バッテリー残量が10%以下になると、スピーカーが警告音を発します。この場合、速やかに充電してください。
バッテリー残量が1%未満になると、スピーカーは自動的に電源をオフにします。

- **1. BTモード**
 - 電源をオンにするだけで、Bluetooth®のスタンバイ状態に自動的に移行します。電源が切れると、自動的に電源がオフになります。
- **Bluetooth接続**
 - Bluetooth®の接続が完了すると、電源が自動的にオフになります。電源がオフになっているときに、Bluetooth®の接続が完了すると、自動的に電源がオンになります。
 - 充電のスピードを制御する際、自動的に電源は、自動的にオフになります。
- **2. TWISモード**
 - 充電のスピードを制御する際、自動的に電源は、自動的にオフになります。
 - 充電のスピードを制御する際、自動的に電源は、自動的にオフになります。



●充電インジケータ：充電中は赤いランプが点灯し、充電完了時に青いランプが点滅します。

問題	解決方法
使役人数が多い	スピーカーの周波数帯域がカバーされているのを確認してください。
音質の向上を図る	スピーカーを正しく設置してください。
音質向上に繋がらない	接続ケーブルが断線していませんか？ 接続ケーブルが断線していませんか？スピーカーとスマートフォンとの接続が正常にできているか確認してください。
音質向上に繋がらない	スピーカーの音質を調整してみてください。
音質向上に繋がらない	音質向上に繋がらない場合は、スピーカーの音質を調整してください。



FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.