



PRODUCT SPECIFICATIONS

FCC ID: 2BBLPYDSCKR2
 MODEL: PY-DSCKRK2-BLK
 Speaker Size: 76mm
 Product Dimensions: 250 x 180 x 225mm
 Speaker power: 8W
 Speaker peak power: 25W
 Input voltage: 5VDC
 Input current: 1A
 Party lights: Yes
 Nr. of LED: 25pc
 Linkable (TWS): No
 Charging cable length: 100cm
 AUX cable length: 50cm
 Speaker impedance: 30
 S/N Ratio: 80 dB
BLUETOOTH SPECIFICATIONS:
 Bluetooth version: v5.3
 Bluetooth frequency range: 2402-2480MHz
 Bluetooth signal range: 10m
 Max. RF output power: -12.68dBm
BATTERY SPECIFICATIONS:
 Battery type: Built-in lithium-ion
 Battery capacity: 1200mAh
 Charging time: 3h
 Battery play time: 5h at 50% volume with LEDs off. Battery play time: 2.5h at 50% volume with LEDs on
 Power input socket: USB type-C


PACKAGE CONTENTS

- 1x Karaoke box
- 2x Wireless microphone
- 1x USB charging cable (Type-C)
- 1x AUX cable
- 1x Instruction manual

SAFETY INSTRUCTIONS


- Do not allow water to get into the product or onto its surface.
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or a lack of experience and knowledge unless they are supervised or given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the unit.
- If the surface of the unit is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact the authorized service center immediately.
- Do not shake the unit.
- Do not place the unit in water.
- Do not place the product in direct heat. This unit is to be placed in a dry and ventilated location.
- Do not place heavy objects on the unit.
- If the battery is completely exhausted, connect the USB charging cable to charge the unit. Please note, the unit may not work properly for the first few minutes of charging.
- If the battery is damaged, it must be replaced by a qualified person in order to avoid creating a hazard.
- WARNING:** Do not expose cells or batteries to heat or fire.

Microphone Function

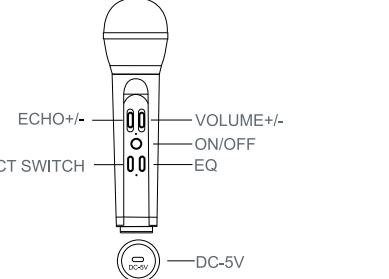


- Long press the ON/OFF Button of the wireless microphone to turn on the microphone. **Bright green indicator**
- When singing, the "VOL" key can be adjusted to control the sound volume.
- When singing, the "ECH" key can be adjusted to control the reverberation effect.
- When singing, short press the "sound effect switch" key, the sound box will appear applause special effect sound. Double click on "Sound Switch" button twice and the sound box will appear cheering special effects. Long press "Sound Switch" key, the sound box will appear atmosphere effects sound.
- When singing, press the "EQ switch" button and select the appropriate sound effect. There are 7 types in total.
- When charging, you can use the 5V-1A charger to charge the microphone, the charging light is Red, when the battery is fully charged, the light goes out.

CHARGING

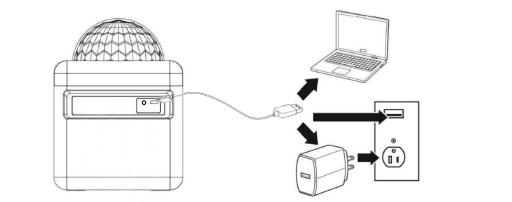

Note : Charge the product fully before first use.
 Plug the charging cable into the unit and connect to another USB power source such as a PC, MAC, USB power adapter (not included), etc. When the unit is charging, the LED indicator will display a solid red light. When charging is complete, the indicator light will turn off.

Remarks: The sound may become distorted when the battery is low. Please charge the unit on time.

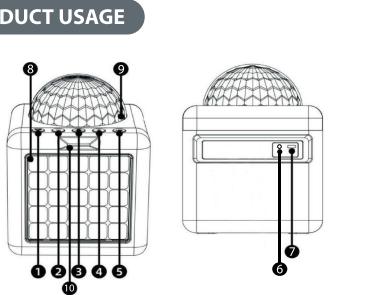

- Press and hold two seconds to switch between Bluetooth and FM AUX-In mode. In FM mode: Long press to search for channels
- Music mode: Short press the previous song/Long press to decrease volume
- FM mode: Short press the previous channel/Long press to increase volume
- Short press to play or pause the music; Press and hold three seconds to switch the power ON or OFF
- Music mode: Short press the next song/Long press to increase volume
- FM mode: Short press the next channel/Long press to decrease volume
- There are 2 modes for the 25 LEDs in the front panel. SYNC (it will follow the music) and AUTO (it will play 13 different lighting show program). Double press to switch between AUTO and SYNC; Press and hold three seconds to switch the LED ON or OFF
- AUX input
- USB type-C charging port
 If you want to use the FM function, you need to use the USB-C cable to plug into the charging port as an antenna to increase the FM search signal
- Front RGB LED panel
- Disco ball projection light
- LED indicator

CONNECTIONS

BLUETOOTH CONNECTIONS:

- Power on the product and you will hear a voice "pairing".
- Open a mobile device in Bluetooth mode and search for "XO POPPY" in the list of available Bluetooth devices and select it. The speaker will produce a voice "connected" if the device connects to it successfully.
- After the device has been paired successfully with the speaker for the first time, next time the speaker will connect automatically within 10 seconds to the device which has been connected before (Note: Each speaker could connect to one Bluetooth device only).

AUX IN:

- Connect for audio playback from a mobile phone/ iPad /computer/ notebook / DVD etc. Plug one end of the audio cable into the speaker and the other end into a mobile phone or other audio device.

XOPOPPY® COPYRIGHT ALL RIGHTS RESERVED. XOPOPPY® is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC, 1370 Broadway, New York, NY 10018.



Made in China

