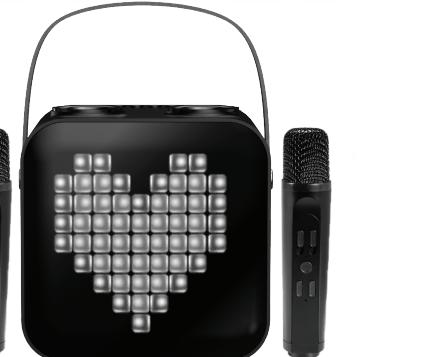
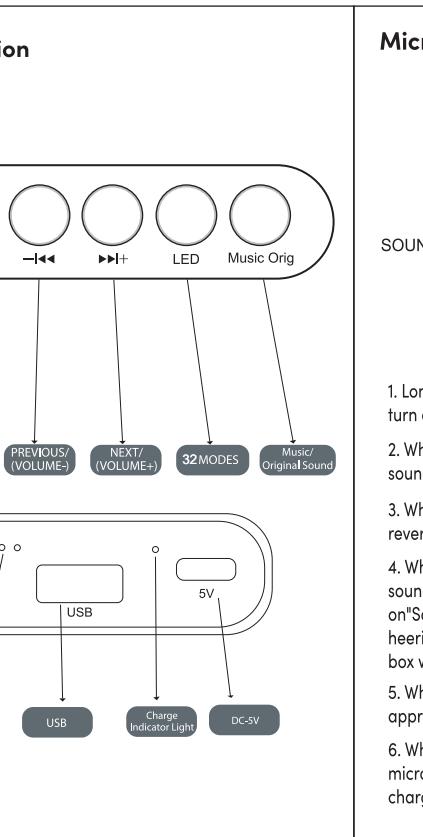
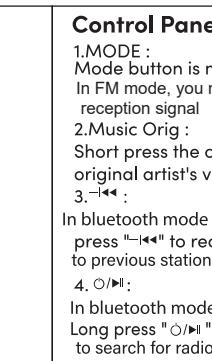


<p>xo poppy KARAOKE <i>night</i></p> <p>SPEAKER MACHINE WITH DUAL MICS</p>  <p>Manual</p>	<p>Speaker Function</p> 	<p>Microphone Function</p>  <p>1. Long press the ON/OFF Button of the wireless microphone to turn on the microphone. Microphone lights up blue. 2. When singing, the "VOL" key can be adjusted to control the sound volume. 3. When singing, the "ECH" key can be adjusted to control the reverberation effect. 4. When singing, short press the "sound effect switch" key, the sound box will appear applause special effect sound. Double click on "Sound Switch" button twice and the sound box will appear cheering special effects. Long press "Sound Switch" key, the sound box will appear atmosphere effects sound. 5. When singing, press the "EQ switch" button and select the appropriate sound effect. There are 7 types in total. 6. When charging, you can use the 5V-1A charger to charge the microphone, the charging light is Red, when the battery is fully charged, the light goes out.</p>	<p>Control Panel</p> <p>1.MODE : Mode button is mode conversion (Bluetooth, FM, AUX, USB) In FM mode, you need to plug in the audio cable to enhance the reception signal</p> <p>2.Music Orig : Short press the original Music button to cancel the original artist's voice.</p> <p>3. $\leftarrow\rightarrow$: In bluetooth mode short press $\leftarrow\rightarrow$ is the previous song; Long press $\leftarrow\rightarrow$ to reduce the volume. In FM mode short press to previous station</p> <p>4. $\textcircled{O}/\textcircled{H}$: In bluetooth mode short press $\textcircled{O}/\textcircled{H}$ to pause or play, Long press $\textcircled{O}/\textcircled{H}$ to switch the machine in FM mode double click to search for radio stations, short press to pause/play</p> <p>5. $\textcircled{H}\textcircled{H}$: Short press $\textcircled{H}\textcircled{H}$ is the next song; Long press $\textcircled{H}\textcircled{H}$ to increase the volume. In FM mode short press to next station</p> <p>6. LED : Short press to switch the light mode and long press to turn off the light. There are 32 modes, including 10 fixed effect and 4 dynamic effect sync with music, 18 motion pixels displays. The default startup mode is fixed mode, double-click the LED key to switch between voice control mode/dynamic loop mode. Click on the LED key to switch patterns in any mode, and automatically switch to voice control mode after connecting Bluetooth</p> <p>Speakers illustrate Bluetooth mode is the default mode when powered on. You can search for the device name XO POPPY in Bluetooth connection. It will switch to AUX mode when a 3.5mm audio cable is inserted. Have Fun with PY-LEDKRK2-BLK Karaoke Speaker. When the speaker is turned on, the wireless microphone is connected to the speaker. You can sing in any mode, when singing, you can adjust the microphone volume, reverberation, EQ, according to your personal voice, to achieve better results.</p> <p>Attention</p> <p>1. Please use 5V/1A charger for charging. Do not play music when charging. 2. When the microphone is on, do not point the microphone at the speaker. To avoid howling.</p> <p>Product parameters</p> <p>Power output: 10W Frequency: 50HZ-20KHZ Drive unit: 4 IN *1 S/N: ≥80DB Lithium battery: 3.7V-3000mah Material: ABS/iron mesh</p> <p>Packing list</p> <p>Speaker*1 Microphone*2 User Manual*1 AUX cable*1</p> <p>FCC Warning Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>XOPOPPY® COPYRIGHT ALL RIGHTS RESERVED. XOPOPPY® is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC, 1370 Broadway, New York, NY 10018</p> <p>FCC ID: 2BBPLPYLEDKRK2</p> <p>CE </p> <p>UK CA ROHS</p> <p>Made in China</p>
---	---	--	---