

Thank you for purchasing the THROWBACK Wireless Karaoke Wireless LED Mic. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Karaoke Wireless LED Mic
- USB-C Charging Cable
- Operation Manual

KEY FEATURES

- Compatible with Bluetooth®-enabled devices
- Built-in rechargeable battery
- Built-in speaker
- Volume and echo control

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use, if dropped or damaged in any way.

Repairs to electrical equipment should only be performed by the manufacturer. Improper repairs may place the user at serious risk.


Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children. Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

DIAGRAM

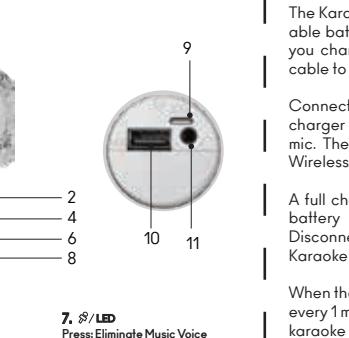

1. MIC VOL

+: Volume Increase

-: Volume decrease

2. REMIX VOL

+: Volume Increase

-: Volume decrease

3. M/POWER

Hold: Power ON/OFF

Press: Mode Switch between

Bluetooth & FM radio modes

4. ▶/◀

Press: Next Song

Next station (FM mode)

Hold: Volume Increase

5. ▶▶

Press: Play/Pause

Hold: Auto search radio stations (FM mode)

6. ▶/◀

Press: Prev Song (Bluetooth mode)

Prev Station (FM mode)

Hold: Volume Decrease

7. S/LED

Press: Eliminate Music Voice

Hold: LED Switch

8. SFX

Press: To Hear Funny Effect

Hold: Press To Enable Selfie Function

9. DC5V

USB-C charging port

10. USB

USB Media Port

11. ⚡

The Headset

CHARGING THE KARAOKE WIRELESS MIC/SPEAKER

The Karaoke Wireless LED Mic comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied charge cable to charge the speaker.

CONNECT THE USB END TO A COMPUTER USB PORT OR A USB WALL CHARGER AND THE MICRO USB TO THE CHARGE PORT ON THE KARAOKE MIC.

The red LED indicator will illuminate while the Karaoke Wireless LED Mic is charging.

A full charge of the battery takes around 3 hours. When the battery is fully charged, the LED indicator will turn off.

Disconnect the Karaoke Wireless LED Mic at this point. The Karaoke Wireless LED Mic will then be ready for use.

When the battery is low, the LED indicator will emit 2 tones every 1 minute. When this occurs, please recharge the Karaoke Wireless LED Mic & Speaker with an iPhone, the top right corner will indicate your Karaoke mic's battery life.

PROMPT NOTIFICATION

The Karaoke Wireless LED Mic will notify you during "Power On" with the sound of a beep.

The Karaoke Wireless LED Mic will notify you during "Power off" with the sound of a beep.

The Karaoke Wireless LED Mic will notify you when "Pairing Successful" with the sound of a beep.

PAIRING THE KARAOKE MIC/SPEAKER

1. Ensure the Karaoke Wireless LED Mic is turned off. If it is not, please turn off the Karaoke Wireless LED Mic first before pairing.

2. Press and hold the multifunction button for 3 seconds and after turn on, you will hear the sound of a beep. This will indicate your Karaoke Wireless LED Mic is now in pairing mode.

3. Place the Karaoke Wireless LED Mic and the Bluetooth® device to which you would like to pair it within the operating

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

SPECIFICATIONS

Bluetooth® Version:

V 5.4

Operating Distance:

Up to 33ft (10m)

Pick Up:

Capacitive

Speaker Output:

3W

Frequency Range:

100Hz - 10kHz

Sensitivity:

80db - 115db

Play Time:

Up to 2 hours

Battery Type:

Lithium-Ion

Battery Capacity:

1200 mAh

Charging Voltage:

DC 5V

Charging Time:

Up to 3 Hours

Charging Interface:

USB-C

FCC ID: 2BBLTBKMS19-1

CARE AND MAINTENANCE

• Do not expose the unit to excessive heat or humidity to avoid damage to the product's internal circuitry.

Once the Karaoke Wireless LED Mic is paired to your device, you can stream music wirelessly to the built-in speaker. Select the track you wish to listen to on your device to play through the speaker. Should you encounter any problems while streaming, please refer to your device's user manual.

• Do not use abrasive cleaning solvents to clean the unit.

• Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.

• Do not dispose of the unit in fire as they may explode or combust.

• Do not expose the unit to contact with sharp objects as this will cause scratches and damage.

1. Ensure the Karaoke Wireless LED Mic is turned off. If it is not, please turn off the Karaoke Wireless LED Mic first before pairing.

2. Press and hold the multifunction button for 3 seconds and after turn on, you will hear the sound of a beep. This will indicate your Karaoke Wireless LED Mic is now in pairing mode.

3. Place the Karaoke Wireless LED Mic and the Bluetooth® device to which you would like to pair it within the operating

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

NOTE

4.2.2 or higher version for Android system, 6.0 or higher

version for IOS system, it doesn't support other versions

temporally. It doesn't support the mobile phone which has the

independent and solid photograph button.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

Push the volume switch up or down to adjust voice volume.

ADJUST MICROPHONE VOICE VOLUME

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.