

THROWBACK  
**SONICWAVE**  
WIRELESS SPEAKER



**SPECIFICATIONS**

Bluetooth version: v5.3      Charging port: USB-C DC5V  
Bluetooth range: 10m      Charging time: 2-3 hours  
Battery capacity: 1200 mAh      Playback time: 2-3 hours

CONTENTS: 1 WIRELESS SPEAKER, 1 USB-C WIRE, 1 USER MANUAL

THROWBACK® COPYRIGHT ALL RIGHTS RESERVED. THROWBACK is an innovative brand of Truststone Group LLC. No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Truststone Group LLC. New York NY 10003.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The BLUETOOTH® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. All product name, logos, and brands are property of their respective owners.

FCCID: 2BBPLTBMSPK



MADE IN CHINA

**POWER ON/OFF**

- On: Hold the mode key for about two seconds. The indicator will turn blue, indicating that the device has powered on successfully.
- Off: Hold down the mode key for about three seconds. Release the key after one second once the indicator is off, completing the shutdown process.

**BLUETOOTH CONNECTION**

- After powering on, the device will enter Bluetooth mode by default. Turn on your phone and search for the Bluetooth name "Throwback" to pair the device. Once the connection is successful, the device will be ready for use.

**USB**

- Insert a USB flash drive into the USB port to automatically switch to USB mode. The device will start playing after a successful insertion. Removing the USB flash drive will automatically restore FM mode.

**AUX**

- In the power on state, insert the audio cable into the AUX input of the device, and the device will automatically recognize and enter AUX mode. After unplugging the audio cable, the device will default to Bluetooth mode.
- Note: If both a USB flash drive and an audio cable are inserted into the device, you need to short press the mode key to switch modes.

**FUNCTION KEY**

- **Power** Long press to turn on/off, short press to switch modes
- **◀/-** Long press to reduce volume, short press to previous song; In FM mode: short press to previous radio station
- **▶/+** Long press to increase volume, short press next song; In FM mode: short press to the next radio station
- **▶/II** FM mode: long press to search for radio stations, short press to mute mode  
Bluetooth/AUX mode: Short press to play/pause

**WARNINGS**

- Do not use the device in direct sunlight or near hot objects such as radiators.
- Keep the device away from damp environments like bathrooms and swimming pools.
- Use only a 5V power plug for charging. Using a higher voltage can cause product damage.

**FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.