

63 x73mm


105G铜版纸，正反两面单色印刷

THROWBACK • RETRO • WIRELESS SPEAKER



Operation Manual TB-RETS-WOD

PRODUCT DIAGRAMS

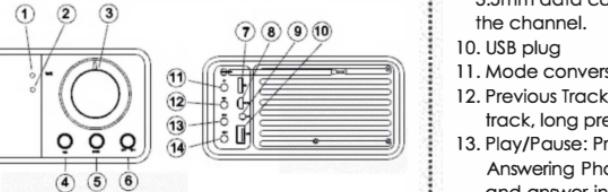

FUNCTION INTRODUCTION

Location of controls

1. Play/Charging light/FM indicator light. Blue light is on when playing, red light is on when charging. The radio works best when green light is on under FM mode.
2. Microphone position
3. FM radio station knob
4. Volume button
5. Adjust bass volume button
6. ON/OFF Switch
7. TF card socket
8. DC 5V charging port

9. AUX in socket. In FM mode, please connect with a 3.5mm data cable as movable antenna to search the channel.

10. USB plug
11. Mode conversion button
12. Previous Track/Volume Down: Press to play previous track, long press to decrease the volume.
13. Play/Pause: Press to pause and resume playback. Answering Phone Call: Press once to pause the track and answer incoming phone call, long press to reject incoming phone call.
14. Next Track/Volume Up: Press to play next track, long press to increase the volume.

SPECIFICATIONS

Bluetooth® version: 5.3
Speaker: Ø57mm, 4Ω, 5W
Battery: 3.7V, 1200mAh
Function: BT, USB, TF, AUX, FM
Play time: 70% VOL 6-7 Hours
Input: DC 5V 1A
Power: 5W

CONTENTS

1x Retro Speaker
1x Micro Charge Cable
1x Manual

PAIRING BLUETOOTH SPEAKER

1. Set the ON/OFF button to the ON position. The device will turn on - The blue signaling the BT mode will be flashing quickly.
2. Turn on the Bluetooth function on your mobile device and search for the "TB-RETS-WOD"
3. Once the connection is successful the blue BT LED will light steadily.

Note: If a previously connected device comes within range of unit, the unit will connect to this device automatically.

CHARGING THE SPEAKER

Plug the pin of the Micro USB charging cable in to the micro USB socket on the back side of the speaker. Plug the other end into a USB Port on your computer or any other device allowing USB charging. It will shut off when the battery is fully charged.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY GUIDELINES
• Please read the instructions carefully before use and keep them for reference.
• Keep the speaker away from heat and open fire.
• Do not insert sharp objects and metal into the speaker to avoid a short circuit.
• Do not attempt to repair the speaker.
• Turn the device off if exposed to extreme heat or liquid.
• Do not attempt to use the speaker with AC input, be sure the device is unplugged from power and charged before each use.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

THROWBACK

THROWBACK © COPYRIGHT. ALL RIGHTS RESERVED.
THROWBACK is an innovative company of Sarina-Group LLC.
No portion of this design may be reproduced without express written permission. Other trademarks and trade names are those of their respective owners. All rights reserved. Distributed by Sarina-Group LLC, New York NY 10018.